

2. PARTS DESCRIPTION

**2.1 BOX CONTENT**

<b>1.</b>	<b>2.</b>	<b>3.</b>	<b>4.</b>	<b>5.</b>	<b>6.</b>	<b>7.</b>	<b>8.</b>
1x	1x	1x	1x	1x	1x	1x	4x 4x 3x

**2.2.1 INDOOR UNIT (MONITOR)**

**2.2.2 OUTDOOR UNIT (DOORBELL)**

3. INSTALLATION

**3.1 PLACING THE INDOOR UNIT (MONITOR)**

**3.2 MOUNT THE OUTDOOR UNIT (DOORBELL)**


**3.2 MOUNT THE OUTDOOR UNIT (DOORBELL)**

**3.3.1 CONNECTING AC POWER TO THE INDOOR UNIT**


**3.3.2 INSTALLING AND CHARGING THE INDOOR UNIT (MONITOR) BATTERY**

**3.3.3 CHARGING OUTDOOR UNIT (DOORBELL) BATTERY**


3.3.4 INSTALLING A MICROSD CARD (NOT INCLUDED)

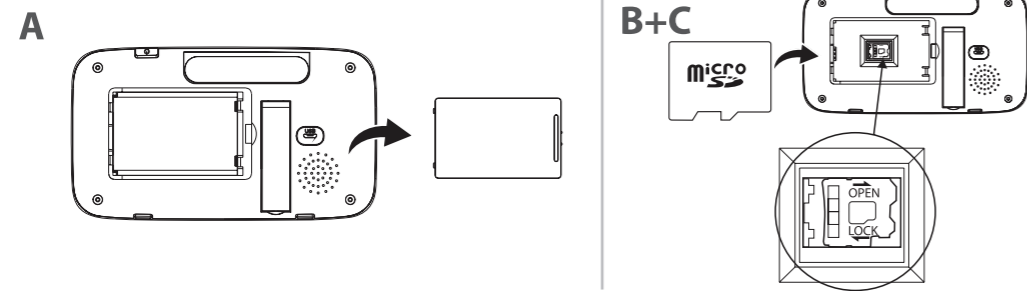


3.3.5 CONNECTING AC POWER TO THE OUTDOOR UNIT (OPTIONAL, ADAPTER NOT INCLUDED)

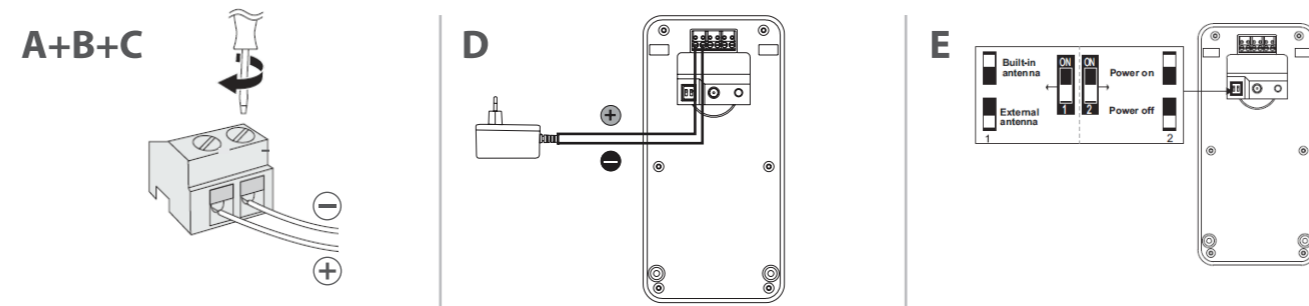

3.3.6 + 3.3.7 CONNECTING A DOOR LOCK/GATE OPENER (NOT INCLUDED)

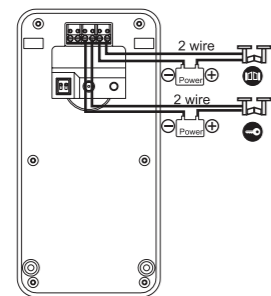


3.3.8 CONNECTING THE EXTERNAL ANTENNA (NOT INCLUDED)

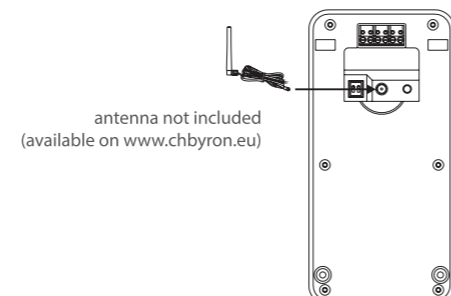

4. BASIC FUNCTIONS


4.1 CONTROL BUTTONS

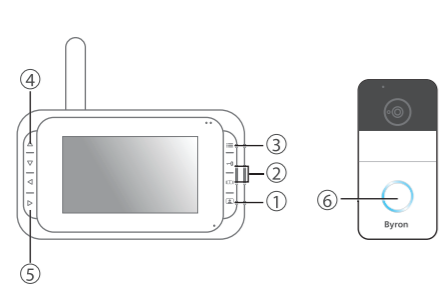


4.2 SCREEN ICONS



4.3 SETTINGS MENU

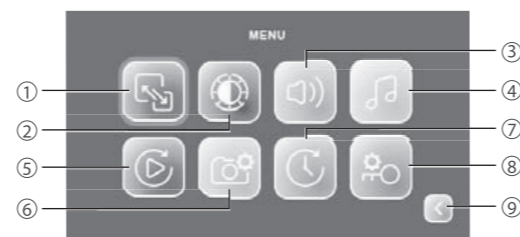


4.4 ANSWERING A CALL

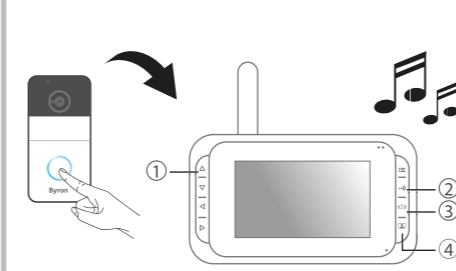


4.5 PAIRING THE MONITOR/DOORBELL




4.6 PAIRING AN ADDITIONAL MONITOR (NOT INCLUDED)

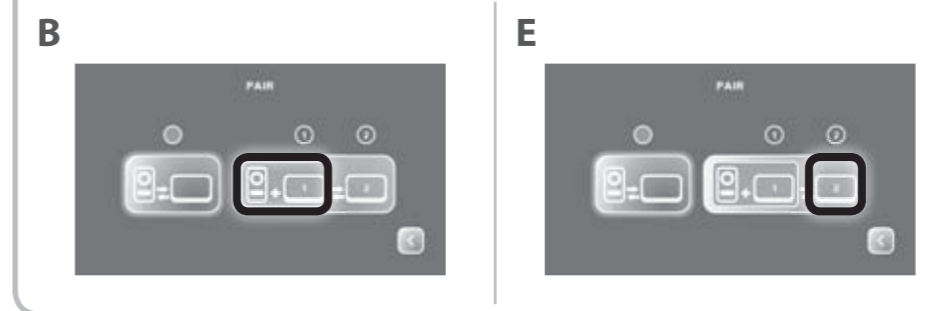

4.7 IMAGE SETTING

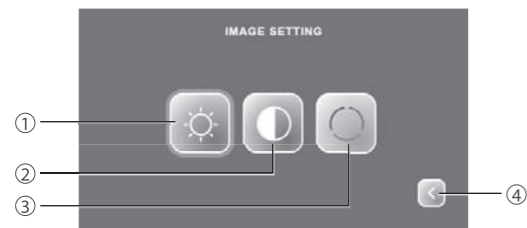

4.8 VOLUME CONTROL

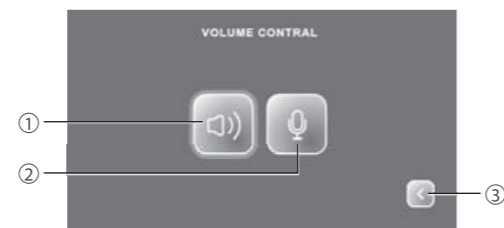


4.9 RINGTONE SETTING



4.10 PLAY BACK MENU



4.11 RECORDING VIDEOS/PHOTOS

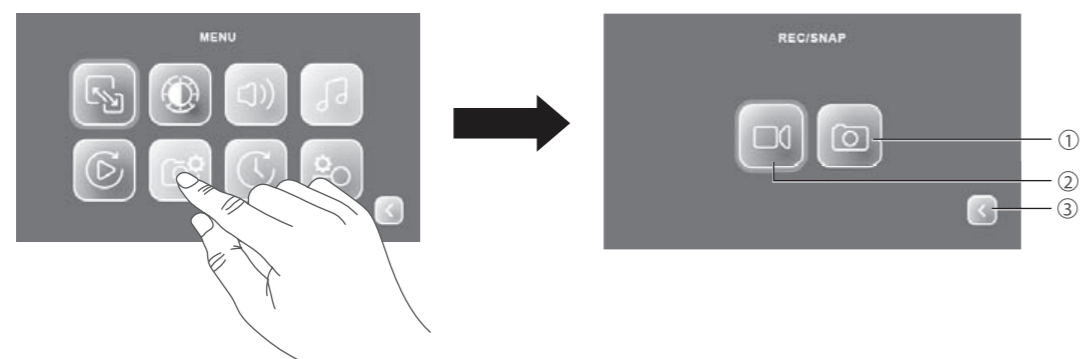

4.12 TIME SETTING



4.13 UNLOCK TIME SETTING

