

ROTHENBERGER INDUSTRIAL POCKET TORCH

Gebruiksaanwijzing Operating instructions Istruzioni per l'uso

Рководство за употреба Návod k obsluze Návod na použitie

Κατάσταση Κατάσταση Instrucciones de uso Käyttöohje

Upute za uporabu Használati útmutató

Lietašanas instrukcija Naudojimo instrukcija

Brúksanvísinging Gebrauchsanweisung

Brúksanvísinging Gebrauchsanweisung

Brúksanvísinging Gebrauchsanweisung

Návod na použitie Kullanna kiavuzte

DE Sicherheitshinweise DEN BRENNER FÜR KINDER UNZUGÄNGLICH AUFBEWAHREN. ...

GB Safety Instructions -KEEP THE GAS TORCH OUT OF REACH OF CHILDREN. ...

FR Consignes de sécurité CONSERVER LE CHALUMEAU HORS DE LA PORTÉE D'ENFANTS. ...

BG Указания за безопасност СЪХРАНЯВАЙТЕ ГОРЕЛКАТА НА НЕДОСТЪПНО ЗА ДЕЦА МЯСТО. ...

CZ Bezpečnostní pokyny HOŘÁK UCHOVÁVĚTE MIMO DOSAHU DĚTI. ...

DK Bemærkninger vedrørende sikkerhed OPBEVAR GASBRÆNDEREN ULLÆGGENLIGT FOR BØRN. ...

EE Ohutusnõuded HOIKE GAASIGA JOOTEKOLB LASTELE KÄTTESAAMATU KOHAS. ...

ES Indicaciones de seguridad ALMACENAR EL QUEMADOR FUERA DEL ALCANCE DE NIÑOS. ...

FI Turvallisuustiedot SÄLYTÄ POLTTIN LASTEN ULTOUTTAMATONNASSA. ...

GR Οδηγίες ασφαλείας ΘΥΡΑΞΤΕ ΤΟΝ ΣΥΓΚΟΛΗΤΗΡΑ ΜΑΚΡΙΑ ΑΠΟ ΠΑΙΔΙΑ. ...

HR Sigurnosne upute PLAMENI DRŽITE NA MJESTU KOJEM NE MOGU PRISTUPITI DJECA. ...

HU Biztonsági tudnivalók AZ ÉGŐT GYERMEK SZÁMÁRA NEM HOZZAFÉRHETŐ HELYEN TÁROLJA. ...



Operating Instructions Before using the Pocket Torch please read the following operating instructions carefully.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Subject to technical and design modifications. Technische und optische Änderungen vorbehalten.

HOW TO IGNITE AND EXTINGUISH (A) The device is not filled, so first fill the tank. Use only ROFFILL-GAS butane for this purpose.

HOW TO ADJUST THE FLAME (B) Move the flame adjustment lever (3) towards "-" to reduce the flame or into the "+" direction to enlarge it.

HOW TO FILL THE GAS TANK (C) Switch off the torch and make sure that the flame has gone out. Wait until the temperature of the torch has cooled down of its own accord.

REGLAGE DE LA FLAMME (B) Déplacez le levier de réglage de la flamme (3) dans la direction "-" pour réduire la flamme ou dans la direction "+" pour l'augmenter.

REMPLE DU RÉSERVOIR DE GAZ (C) Coupez le chalumeau et s'assurer que la flamme soit bien éteinte. Attendez que la température du chalumeau baisse de sa propre accord.

Mode d'emploi Avant d'utiliser le Pocket Torch, lire attentivement le mode d'emploi suivant.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Subject to technical and design modifications. Technische und optische Änderungen vorbehalten.

HOW TO IGNITE AND EXTINGUISH (A) The device is not filled, so first fill the tank. Use only ROFFILL-GAS butane for this purpose.

HOW TO ADJUST THE FLAME (B) Move the flame adjustment lever (3) towards "-" to reduce the flame or into the "+" direction to enlarge it.

HOW TO FILL THE GAS TANK (C) Switch off the torch and make sure that the flame has gone out. Wait until the temperature of the torch has cooled down of its own accord.

REGLAGE DE LA FLAMME (B) Déplacez le levier de réglage de la flamme (3) dans la direction "-" pour réduire la flamme ou dans la direction "+" pour l'augmenter.

REMPLE DU RÉSERVOIR DE GAZ (C) Coupez le chalumeau et s'assurer que la flamme soit bien éteinte. Attendez que la température du chalumeau baisse de sa propre accord.

Рководство за употреба Преди използването на Pocket Torch прочетете внимателно следното ръководство за употреба.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Subject to technical and design modifications. Technische und optische Änderungen vorbehalten.

HOW TO IGNITE AND EXTINGUISH (A) The device is not filled, so first fill the tank. Use only ROFFILL-GAS butane for this purpose.

HOW TO ADJUST THE FLAME (B) Move the flame adjustment lever (3) towards "-" to reduce the flame or into the "+" direction to enlarge it.

HOW TO FILL THE GAS TANK (C) Switch off the torch and make sure that the flame has gone out. Wait until the temperature of the torch has cooled down of its own accord.

REGLAGE DE LA FLAMME (B) Déplacez le levier de réglage de la flamme (3) dans la direction "-" pour réduire la flamme ou dans la direction "+" pour l'augmenter.

REMPLE DU RÉSERVOIR DE GAZ (C) Coupez le chalumeau et s'assurer que la flamme soit bien éteinte. Attendez que la température du chalumeau baisse de sa propre accord.

Указания за безопасност Съхранявайте горелката на недостъпно за деца място.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Subject to technical and design modifications. Technische und optische Änderungen vorbehalten.

HOW TO IGNITE AND EXTINGUISH (A) The device is not filled, so first fill the tank. Use only ROFFILL-GAS butane for this purpose.

HOW TO ADJUST THE FLAME (B) Move the flame adjustment lever (3) towards "-" to reduce the flame or into the "+" direction to enlarge it.

HOW TO FILL THE GAS TANK (C) Switch off the torch and make sure that the flame has gone out. Wait until the temperature of the torch has cooled down of its own accord.

REGLAGE DE LA FLAMME (B) Déplacez le levier de réglage de la flamme (3) dans la direction "-" pour réduire la flamme ou dans la direction "+" pour l'augmenter.

REMPLE DU RÉSERVOIR DE GAZ (C) Coupez le chalumeau et s'assurer que la flamme soit bien éteinte. Attendez que la température du chalumeau baisse de sa propre accord.

Bezpečnostní pokyny HOŘÁK UCHOVÁVĚTE MIMO DOSAHU DĚTI.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Subject to technical and design modifications. Technische und optische Änderungen vorbehalten.

HOW TO IGNITE AND EXTINGUISH (A) The device is not filled, so first fill the tank. Use only ROFFILL-GAS butane for this purpose.

HOW TO ADJUST THE FLAME (B) Move the flame adjustment lever (3) towards "-" to reduce the flame or into the "+" direction to enlarge it.

HOW TO FILL THE GAS TANK (C) Switch off the torch and make sure that the flame has gone out. Wait until the temperature of the torch has cooled down of its own accord.

REGLAGE DE LA FLAMME (B) Déplacez le levier de réglage de la flamme (3) dans la direction "-" pour réduire la flamme ou dans la direction "+" pour l'augmenter.

REMPLE DU RÉSERVOIR DE GAZ (C) Coupez le chalumeau et s'assurer que la flamme soit bien éteinte. Attendez que la température du chalumeau baisse de sa propre accord.

Bemærkninger vedrørende sikkerhed OPBEVAR GASBRÆNDEREN ULLÆGGENLIGT FOR BØRN.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Subject to technical and design modifications. Technische und optische Änderungen vorbehalten.

HOW TO IGNITE AND EXTINGUISH (A) The device is not filled, so first fill the tank. Use only ROFFILL-GAS butane for this purpose.

HOW TO ADJUST THE FLAME (B) Move the flame adjustment lever (3) towards "-" to reduce the flame or into the "+" direction to enlarge it.

HOW TO FILL THE GAS TANK (C) Switch off the torch and make sure that the flame has gone out. Wait until the temperature of the torch has cooled down of its own accord.

REGLAGE DE LA FLAMME (B) Déplacez le levier de réglage de la flamme (3) dans la direction "-" pour réduire la flamme ou dans la direction "+" pour l'augmenter.

REMPLE DU RÉSERVOIR DE GAZ (C) Coupez le chalumeau et s'assurer que la flamme soit bien éteinte. Attendez que la température du chalumeau baisse de sa propre accord.

Ohutusnõuded HOIKE GAASIGA JOOTEKOLB LASTELE KÄTTESAAMATU KOHAS.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Subject to technical and design modifications. Technische und optische Änderungen vorbehalten.

HOW TO IGNITE AND EXTINGUISH (A) The device is not filled, so first fill the tank. Use only ROFFILL-GAS butane for this purpose.

HOW TO ADJUST THE FLAME (B) Move the flame adjustment lever (3) towards "-" to reduce the flame or into the "+" direction to enlarge it.

HOW TO FILL THE GAS TANK (C) Switch off the torch and make sure that the flame has gone out. Wait until the temperature of the torch has cooled down of its own accord.

REGLAGE DE LA FLAMME (B) Déplacez le levier de réglage de la flamme (3) dans la direction "-" pour réduire la flamme ou dans la direction "+" pour l'augmenter.

REMPLE DU RÉSERVOIR DE GAZ (C) Coupez le chalumeau et s'assurer que la flamme soit bien éteinte. Attendez que la température du chalumeau baisse de sa propre accord.

Указания за безопасност Съхранявайте горелката на недостъпно за деца място.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Subject to technical and design modifications. Technische und optische Änderungen vorbehalten.

HOW TO IGNITE AND EXTINGUISH (A) The device is not filled, so first fill the tank. Use only ROFFILL-GAS butane for this purpose.

HOW TO ADJUST THE FLAME (B) Move the flame adjustment lever (3) towards "-" to reduce the flame or into the "+" direction to enlarge it.

HOW TO FILL THE GAS TANK (C) Switch off the torch and make sure that the flame has gone out. Wait until the temperature of the torch has cooled down of its own accord.

REGLAGE DE LA FLAMME (B) Déplacez le levier de réglage de la flamme (3) dans la direction "-" pour réduire la flamme ou dans la direction "+" pour l'augmenter.

REMPLE DU RÉSERVOIR DE GAZ (C) Coupez le chalumeau et s'assurer que la flamme soit bien éteinte. Attendez que la température du chalumeau baisse de sa propre accord.

Operating Instructions Before using the Pocket Torch please read the following operating instructions carefully.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Mode d'emploi Avant d'utiliser le Pocket Torch, lire attentivement le mode d'emploi suivant.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Рководство за употреба Преди използването на Pocket Torch прочетете внимателно следното ръководство за употреба.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Bezpečnostní pokyny HOŘÁK UCHOVÁVĚTE MIMO DOSAHU DĚTI.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Bemærkninger vedrørende sikkerhed OPBEVAR GASBRÆNDEREN ULLÆGGENLIGT FOR BØRN.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Ohutusnõuded HOIKE GAASIGA JOOTEKOLB LASTELE KÄTTESAAMATU KOHAS.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Указания за безопасност Съхранявайте горелката на недостъпно за деца място.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane

Указания за безопасност Съхранявайте горелката на недостъпно за деца място.

Technical data: Flame temperature: up to 1300°C (2370°F) Working temperature: up to 450°C (840°F) Type of gas: propane, propane/butane, butane



