

PARTS DESCRIPTION

NEEDED TO START (EXCL.)

6mm

BOX CONTENT / INHALT / INHOUD DOOS / CONTENUS / CONTENUTO / CONTENIDO DE LA CAJA

1.	2.	3.	4.	5.	6.	7.	8.	9.
1x	1x	1x	2x	1x	1x	1x	1x	2x 2x 2x

DOORBELL / TÜRKLINGEL / DEURBEL / SONNETTE / CAMPANELLO / TIMBRE

- Camera Image Sensor
- Infrared LED
- Microphone
- WiFi Signal Indicator
- Call button
- TF Card Slot
- Speaker
- RESET Button
- USB Slot

INSTALLATION

MOUNTING THE DOORBELL / TÜRKLINGELMONTAGE / DE DEURBEL MONTEREN / MONTAGE DE LA SONNETTE / MONTAGGIO DEL CAMPANELLO / MONTAJE DEL TIMBRE

A Pre-drill holes in the wall.

B Use the drill to create the mounting holes.

C Insert the mounting bracket into the wall.

D Secure the mounting bracket with screws.

E Attach the doorbell unit to the mounting bracket.

F Connect the power cable to the doorbell unit.

G Plug the power cable into the wall outlet.

H Tighten the screws on the doorbell unit.

REPLACE ELECTRICAL INSTALLATION / ELEKTROINSTALLATION ERSETZEN / DE ELEKTRISCHE INSTALLATIE VERVANGEN / REMPLACEMENT DE L'INSTALLATION ÉLECTRIQUE / SOSTITUZIONE IMPIANTO ESISTENTE / SUSTITUCIÓN DE LA INSTALACIÓN ELÉCTRICA

Existing situation

New situation

ELECTRICAL INSTALLATION / ELEKTROINSTALLATION / ELEKTRISCHE INSTALLATIE / INSTALLATION ÉLECTRIQUE / CONNESSIONI ELETTRICHE / INSTALACIÓN ELÉCTRICA

min 8v- max 24v transformer (not included)

CHANGING MELODY INDOOR CHIME (NOT INCLUDED) / ÄNDERN DER MELODIE DER TÜRKLINGEL (NICHT ENTHALTEN) / MELODIE VAN BINNENDEURBEL (NIET MEEGELEVERD) WIJZIGEN / MODIFIER LA MÉLODIE DE LA SONNETTE INTÉRIEURE (NON INCLUSE) / MODIFICA DELLA MELODIA DEL CAMPANELLO INTERNO (NON INCLUSO) / CAMBIO DE MELODÍA DEL TIMBRE INTERIOR (NO INCLUIDO)

A Long press

B Cycle through melody options

PAIRING A DBY COMPATIBLE DOORCHIME (OPTIONAL, EXCLUDED) / SYNCHRONISIEREN EINER DBY-TÜRKLINGEL (OPTIONAL, NICHT ENTHALTEN) / EEN DBY-COMPATIBELE DEURBEL KOPPELEN (OPTIONEEL, NIET MEEGELEVERD) / COUPLER UNE SONNETTE COMPATIBLE DBY (EN OPTION, EXCLUE) / ASSOCIAZIONE DI UN CAMPANELLO COMPATIBILE DBY (OPZIONALE, ESCLUSO) / EMPAREJAMIENTO DE UN TIMBRE DE PUERTA DBY COMPATIBLE (OPCIONAL, NO INCLUIDO)


A Plug doorchime into wall outlet

B within 20 sec

DBY COMPATIBLE

APP INSTALLATION / APP-INSTALATION / DE APP INSTALLEREN / INSTALLATION D'APPLI / INSTALLAZIONE APP /
INSTALACIÓN DE LA APLICACIÓN

Android

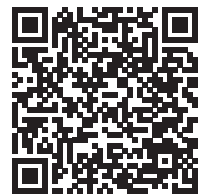

or

iOS



Byhome

Open the App Store (iOS) or Google Play (Android) on your mobile device. Then search for and install the "ByHome" APP, or scan the QR-code.

CREATING AN ACCOUNT / EIN PROFIL ERSTELLEN / EEN ACCOUNT AANMAKEN / CRÉER UN COMPTE / CREARE UN ACCOUNT / CREANDO UNA CUENTA


1



Byhome

Open the app

2

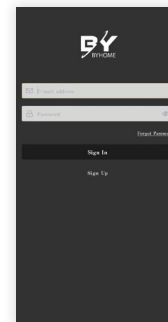

Choose sign up

3




Select your region and choose Next.

4




Enter your information to create an account. Mark the two boxes and choose Sign Up

5

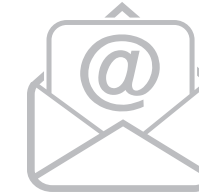


Activate your account through email

6

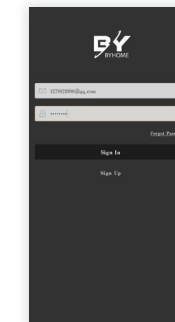

Sign in to your account

ADD A DEVICE / EIN GERÄT HINZUFÜGEN / EEN APPARAAT TOEVOEGEN / AJOUTER UN APPAREIL / AGGIUNGERE UN DISPOSITIVO / CÓMO AÑADIR UN DISPOSITIVO

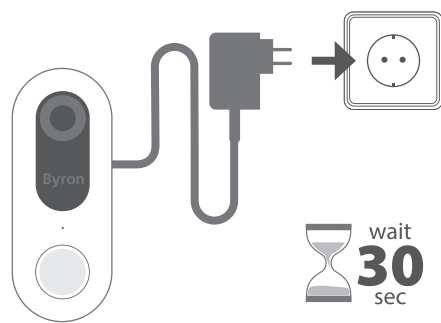


Plug in the doorbell and wait for 30 seconds



Byhome


Open the app

5

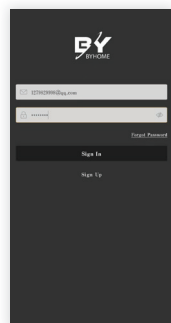


Sign in to your account

6

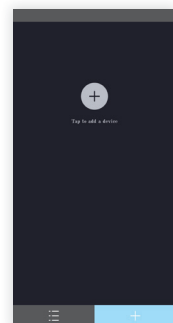

Choose the "+" icon

7

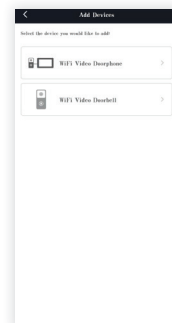


Choose the doorbell




Press the reset button until the voice prompts it is restoring factory settings. After 30 seconds it will prompt: waiting to configure Wifi.

8

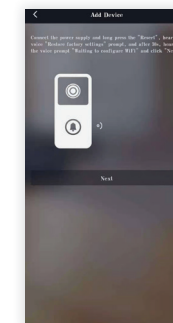

Choose Next


9

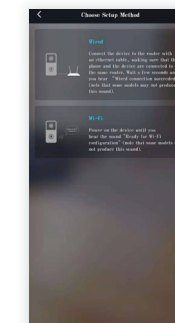

Choose WiFi

ADD A DEVICE / EIN GERÄT HINZUFÜGEN / EEN APPARAAT TOEVOEGEN / AJOUTER UN APPAREIL / AGGIUNGERE UN DISPOSITIVO / CÓMO AÑADIR UN DISPOSITIVO

10

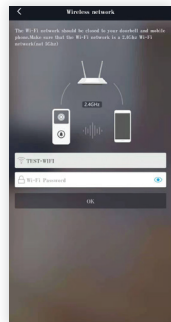

Enter your password and choose Next. (If your WiFi is 5GHz, set it to 2,4 GHz first)

11



Choose configure Wifi connection

12




Get the QR code in the app

13




Use the camera to scan the QR code

14

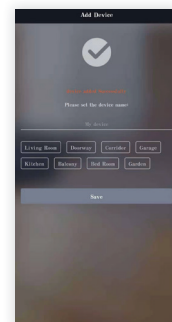


Set the device name and choose Save

15

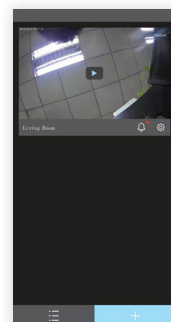


Choose the monitoring area

16

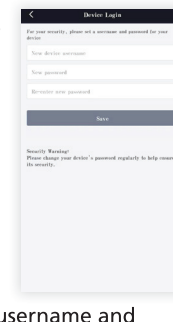

Set a username and password for your camera and choose Save

17

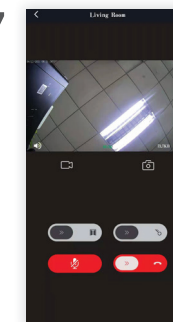


Device is added successfully

18



TROUBLESHOOTING / STÖRUNGSBESEITIGUNG / PROBLEMEN OPLOSSEN /
DÉPANNAGE / RISOLUZIONE DEI PROBLEMI / SOLUCIÓN DE PROBLEMAS

Long
press

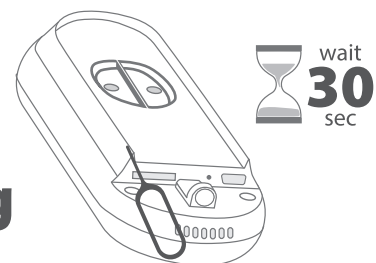

Press the reset button until the voice prompts it is restoring factory settings.

CONTACT INFORMATION / KONTAKTINFORMATIONEN / CONTACTGEGEVENS /
CONTACTS / INFORMAZIONI DI CONTATTO / DATOS DE CONTACTO

WWW.CHBYRON.EU



Find us on
YouTube

Or contact us directly:

EU address:	UK address:
smartwares Europe Jules Verneweg 87 5015 BH Tilburg The Netherlands www.chbyron.eu	smartwares Safety and Lighting Ltd. Meriden House, 6 Great Cornbow Halesowen, West Midlands, B63 3AB United Kingdom

Conforms to all relevant European Directives.

SPECIFICATIONS / TECHNISCHE DATEN / SPECIFICATIEN /
SPECIFICATIONS / SPECIFICHE / SPECIFICACIONES

Wired Wi-Fi Video Doorbell DSD-28119
Power: 8-24V
IP44 Weather Resistant
Works with 2,4GHz WIFI ONLY

