


GARDENTOP

Trimax

Montageanleitung
Installation instruction

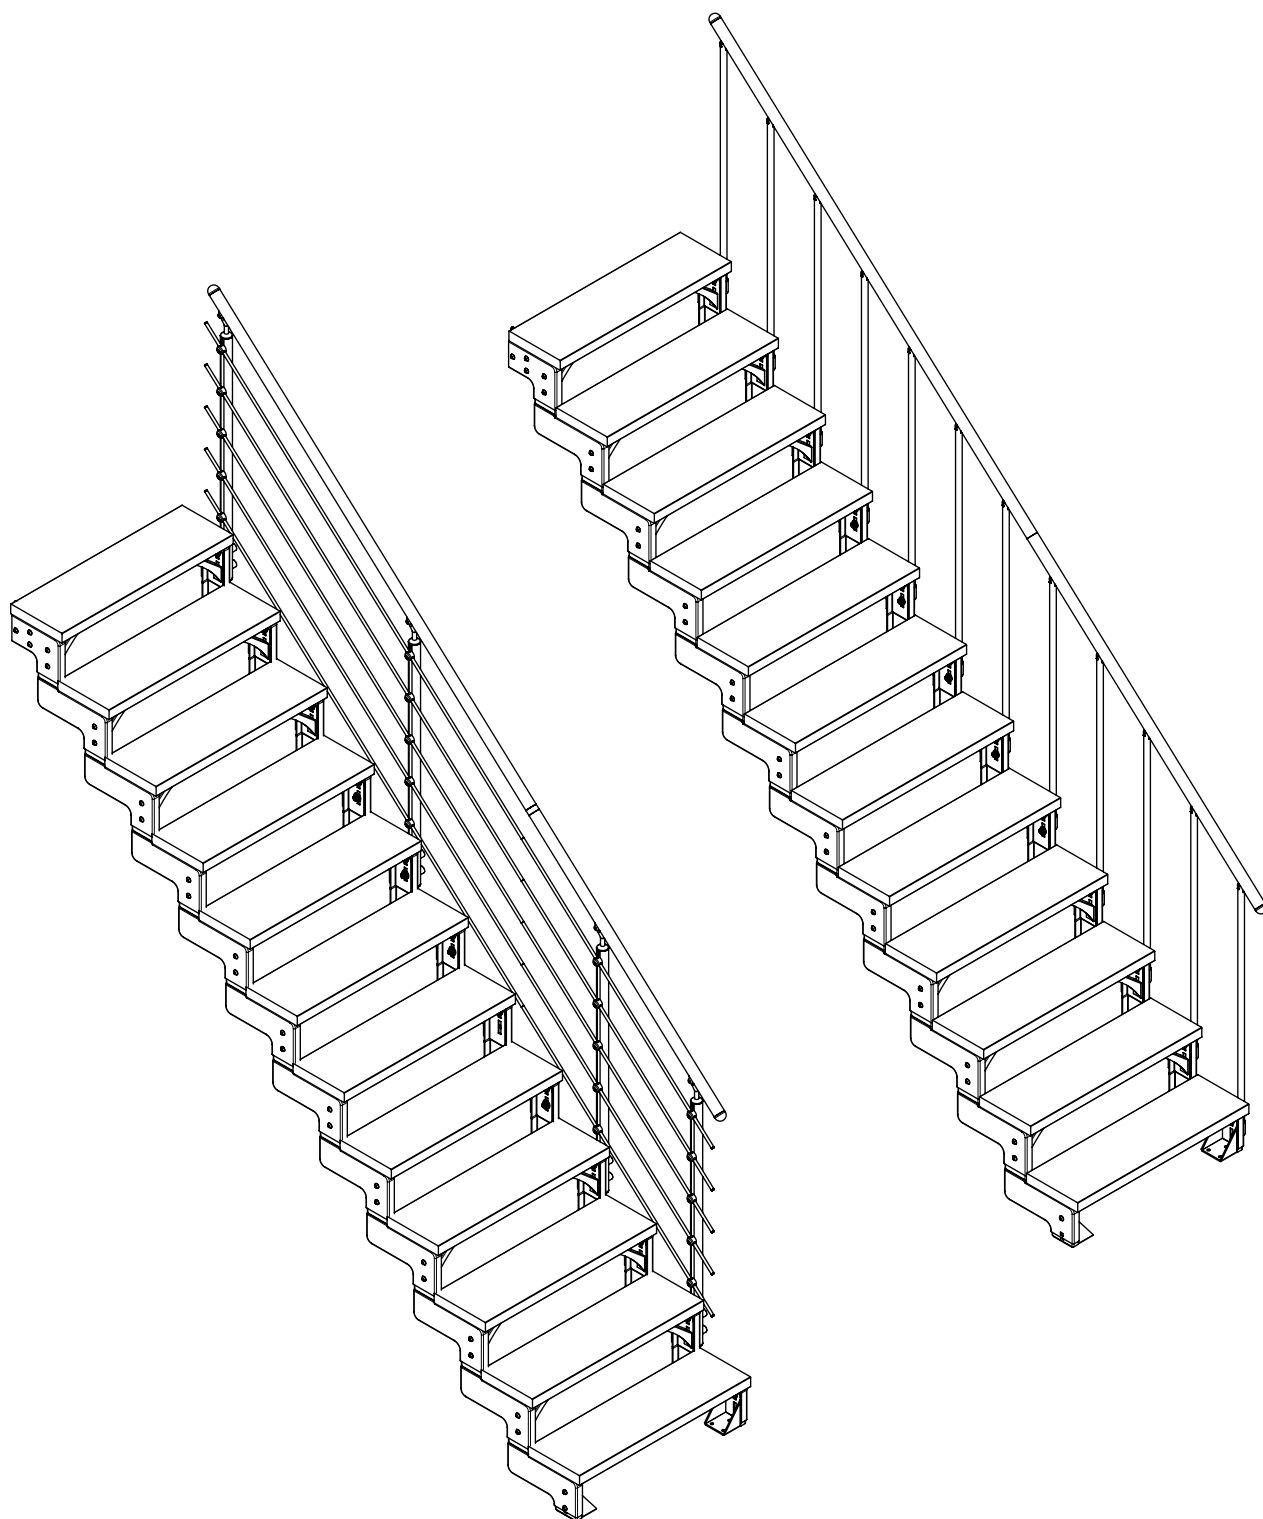


68015			Starter-Set Start kit		
1 2 × 1 K1-41931 × 1 K1-41930			7 8 × 1 K1-41911 × 1 K1-41910		5 × 2 K2-41900
40 × 14 K3-02045 M10×25	41 × 2 K3-04110 Ø10	42 × 8 K3-04198 Ø10	43 × 14 K3-03051 M10	44 × 12 K3-08001 Ø12 x 60	45 × 12 K3-06070 Ø10 x 60
59 × 12 K3-06269 Ø6 x 35	63 × 4 K3-05022 M8 x 20	64 × 12 K3-04010 Ø10,5			

68016		Ergänzungs-Set 1 step kit			
3 4 × 1 K1-41921 × 1 K1-41920		40 × 4 K3-02045 M10 x 25	42 × 4 K3-04198 Ø10	43 × 4 K3-03051 M10	
		59 × 6 K3-06269 Ø6 x 35			

68020

Stufen-Winkel
Step support 1 step

9 10

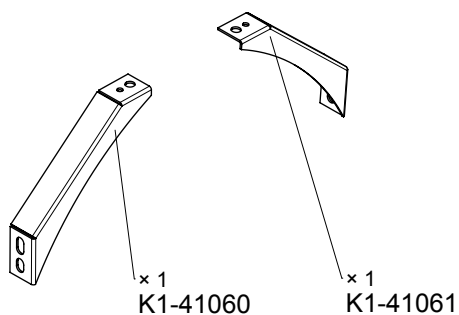

If more than 6 steps:
Add

9 + 10

Wenn mehr als 6 Stufen:

9 + 10

hinzufügen

Max. 6 Satz | sets


59



x 1
K3-06269
Ø6 x 35



11

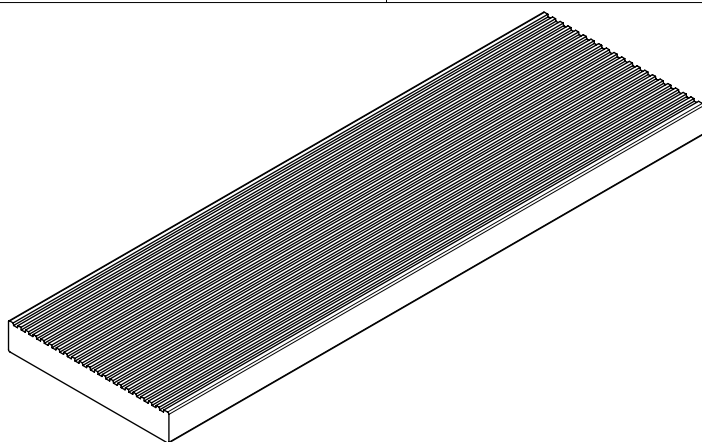



59















x 6
K3-06269
Ø6x35



If / Wenn L = 100 cm
add U hinzufügen

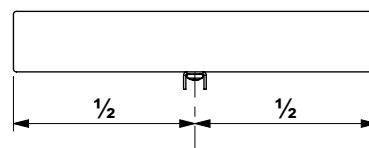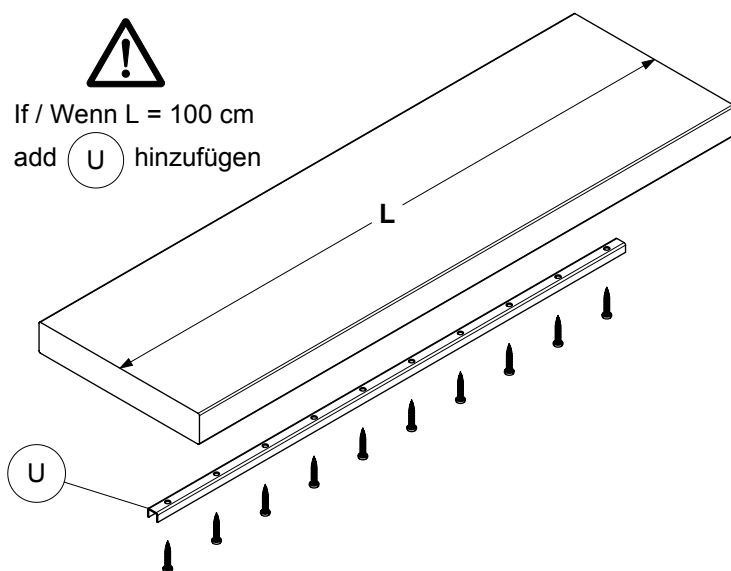


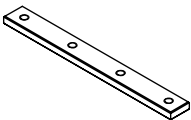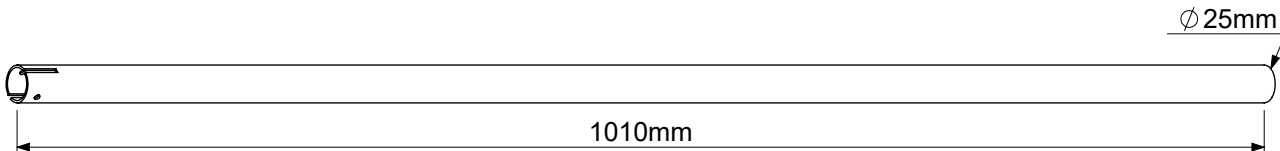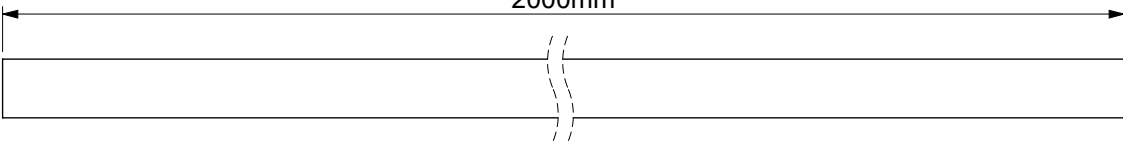68031		Steiggeländer für 6 Stufen Standard banister for 6 steps		
14  × 6 K2-41052	15  × 1 K1-01221	16  × 6 K1-02130	17  × 2 K2-04040	
18  × 6 K1-41056				
19  × 1 K1-01100 				
46  × 6 K3-01034 M4 x 30	47  × 6 K3-03004 M4	48  × 12 K3-05006 M6 x 8	53  × 4 K3-05050 M5 x 12	

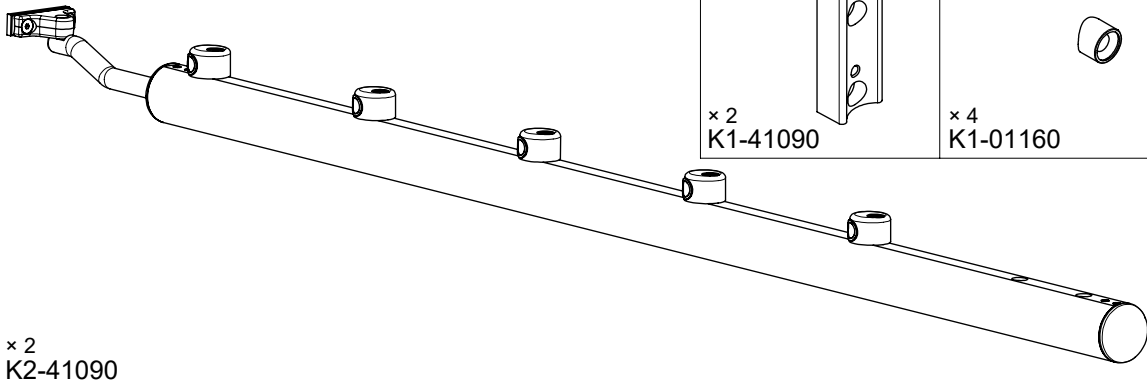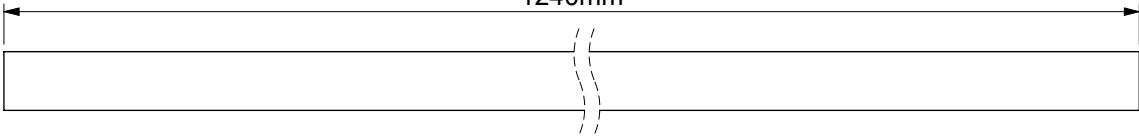68040		Steiggeländer PROVA Starter-Set für 4 Stufen PROVA banister start for 4 steps		
17  × 2 K2-04040	20  × 2 K2-41090	21  × 2 K1-41090	22  × 4 K1-01160	
26  × 1 K1-01107 				
27  × 5 K1-18060 				
28  × 10 K1-01010	29  × 1 K2-14930	51  × 4 K3-02010 M10 x 70		

68041
Steiggeländer PROVA Ergänzungs-Set für 4 Stufen
PROVA banister extension for 4 steps


15

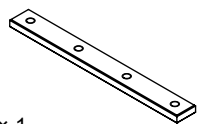
 × 1
K1-01221

20


 × 1
K2-41090


21


 × 1
K1-41090

22



 × 2
K1-01160

26

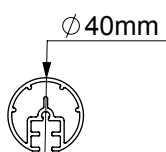
 × 1
K1-01107

1240mm

27



 × 5
K1-18060

1240mm

29


 × 1
K2-14930

51



 × 2
K3-02010
M10×70

53





 × 5
K3-05050
M5 x 12


54


 × 5
K3-08023
Ø8


68098		Unterstützung Support			OPTION	
24 	26  × 1 K1-41955	27  × 1 K1-41956	41  × 1 K3-04110 Ø10	43  × 1 K3-03051 M10	52  × 1 K3-02375 M10 x 75	
	53  × 2 K3-05007 M5 x 5	54  × 1 K3-08002 Ø8 x 40	55  × 1 K3-06032 Ø6 x 60			

× 1
K1-41950

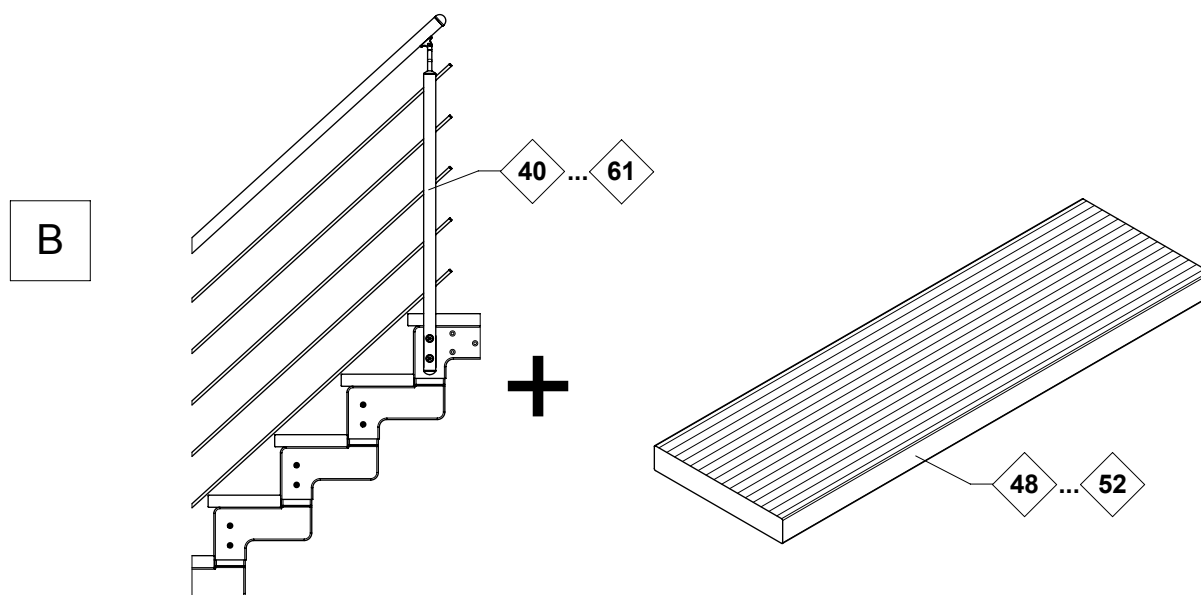
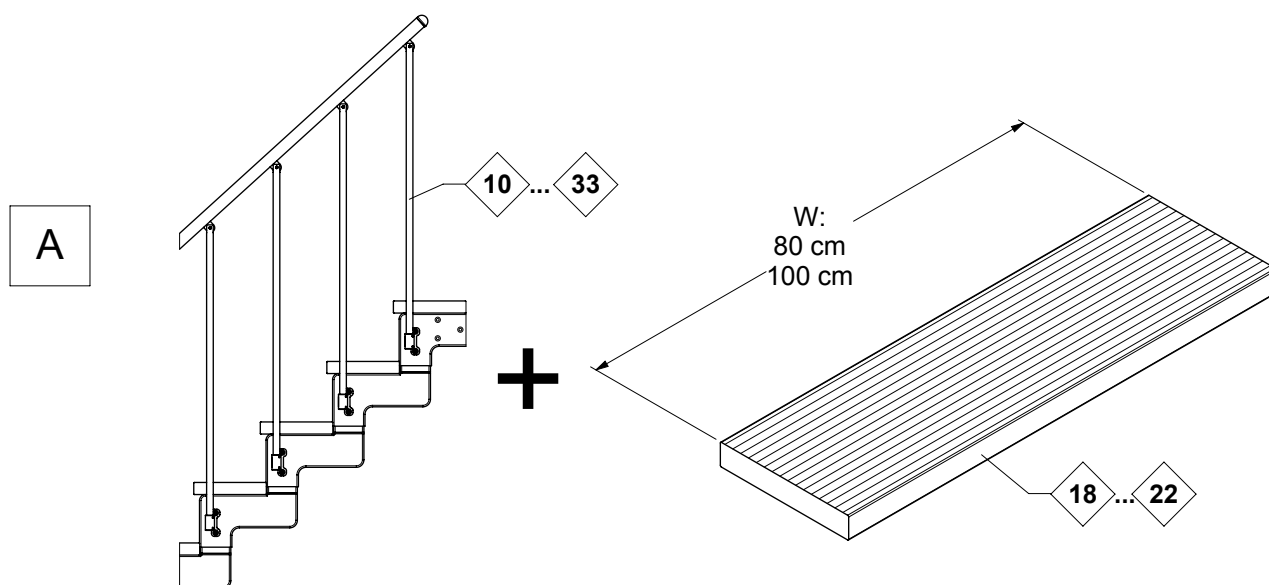
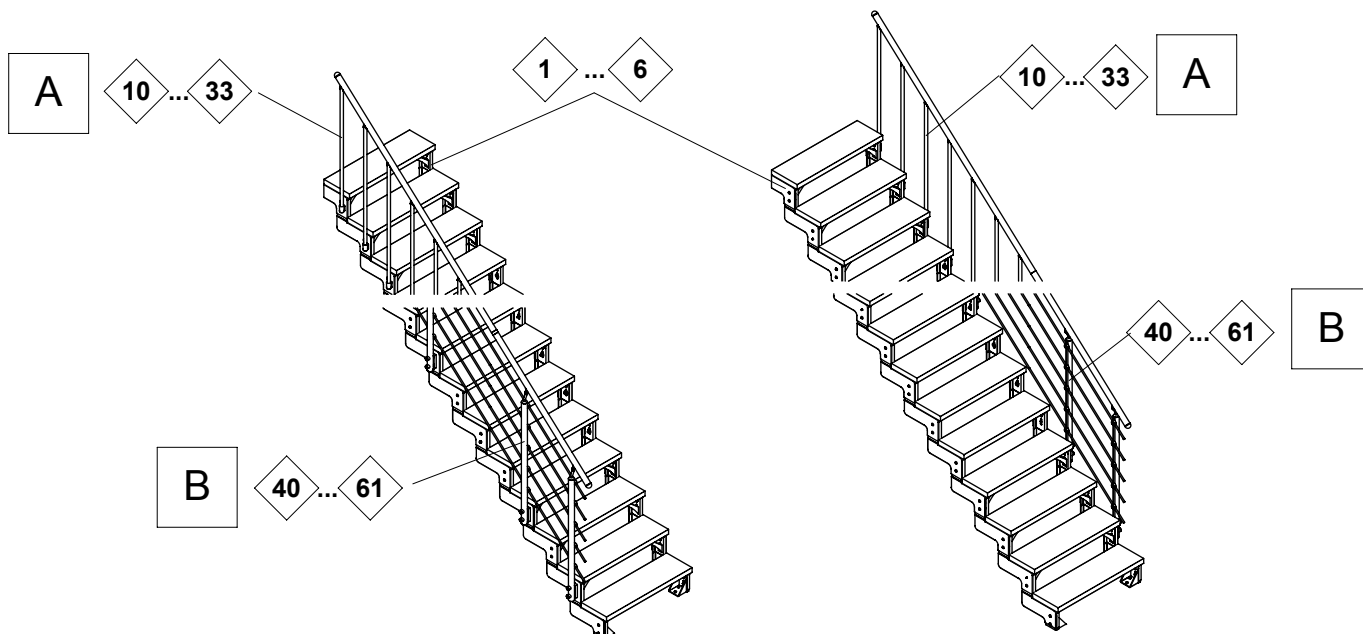




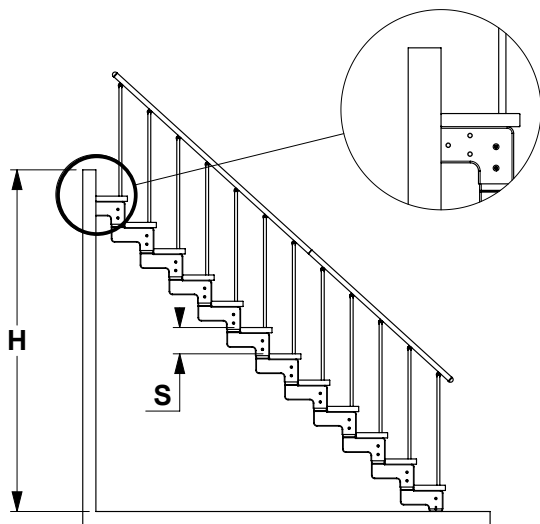






H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	540	570	600	630	660
3	720	760	800	840	880
4	900	950	1000	1050	1100
5	1080	1140	1200	1260	1320
6	1260	1330	1400	1470	1540
7	1440	1520	1600	1680	1760
8	1620	1710	1800	1890	1980
9	1800	1900	2000	2100	2200
10	1980	2090	2200	2310	2420
11	2160	2280	2400	2520	2640
12	2340	2470	2600	2730	2860

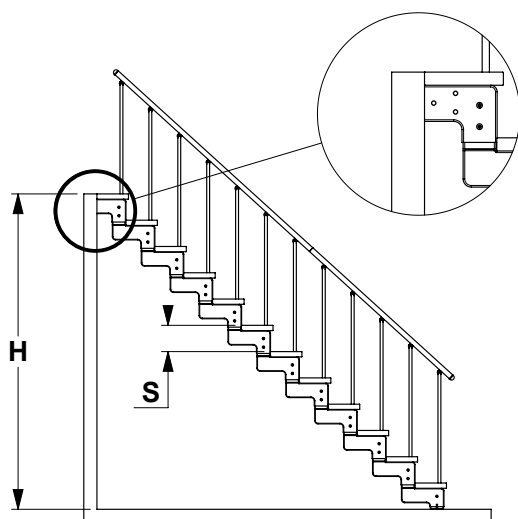

H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	360	380	400	420	440
3	540	570	600	630	660
4	720	760	800	840	880
5	900	950	1000	1050	1100
6	1080	1140	1200	1260	1320
7	1260	1330	1400	1470	1540
8	1440	1520	1600	1680	1760
9	1620	1710	1800	1890	1980
10	1800	1900	2000	2100	2200
11	1980	2090	2200	2310	2420
12	2160	2280	2400	2520	2640

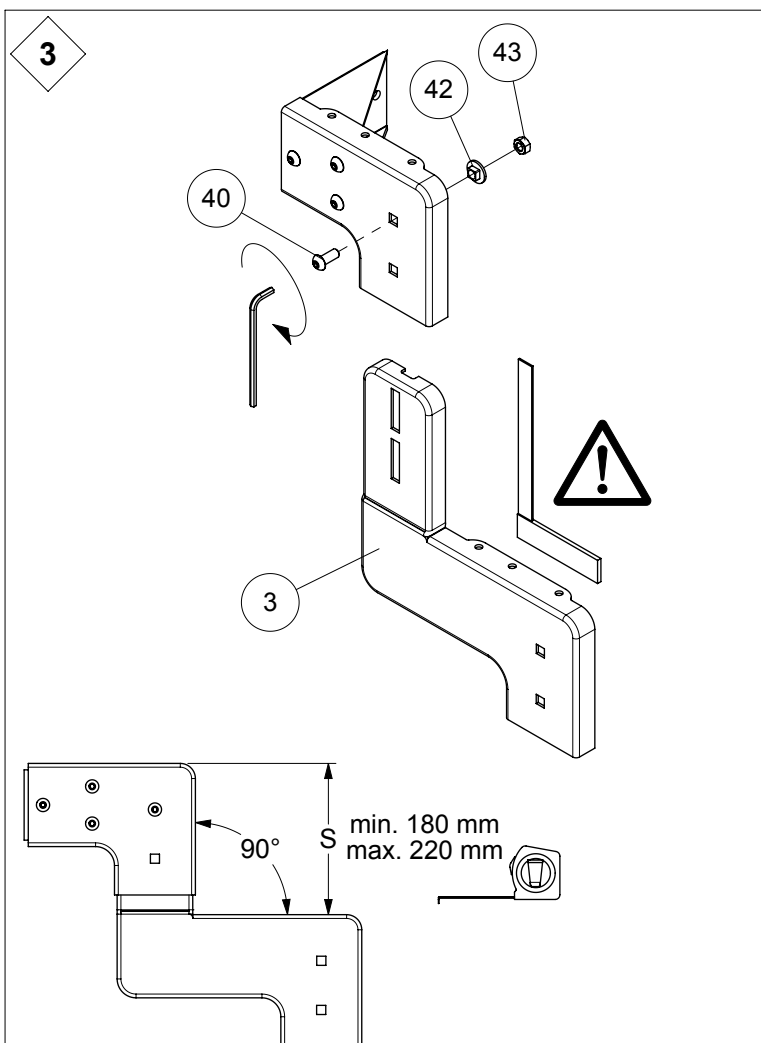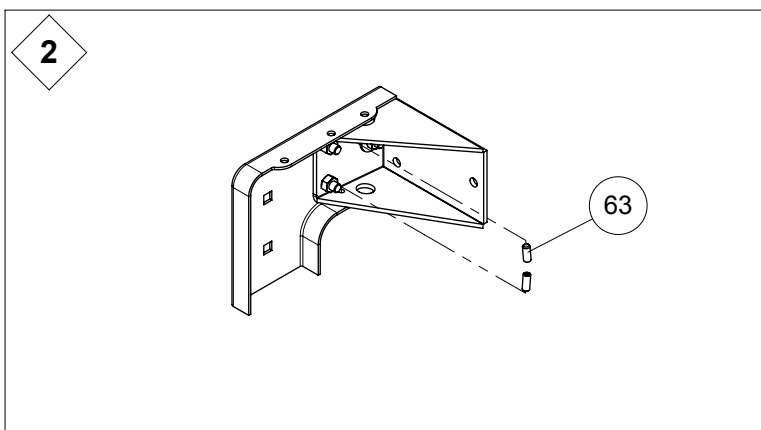
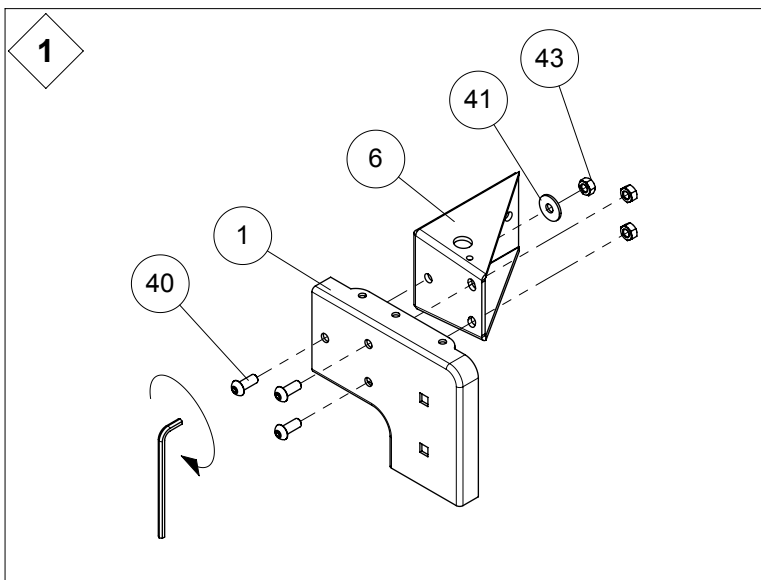


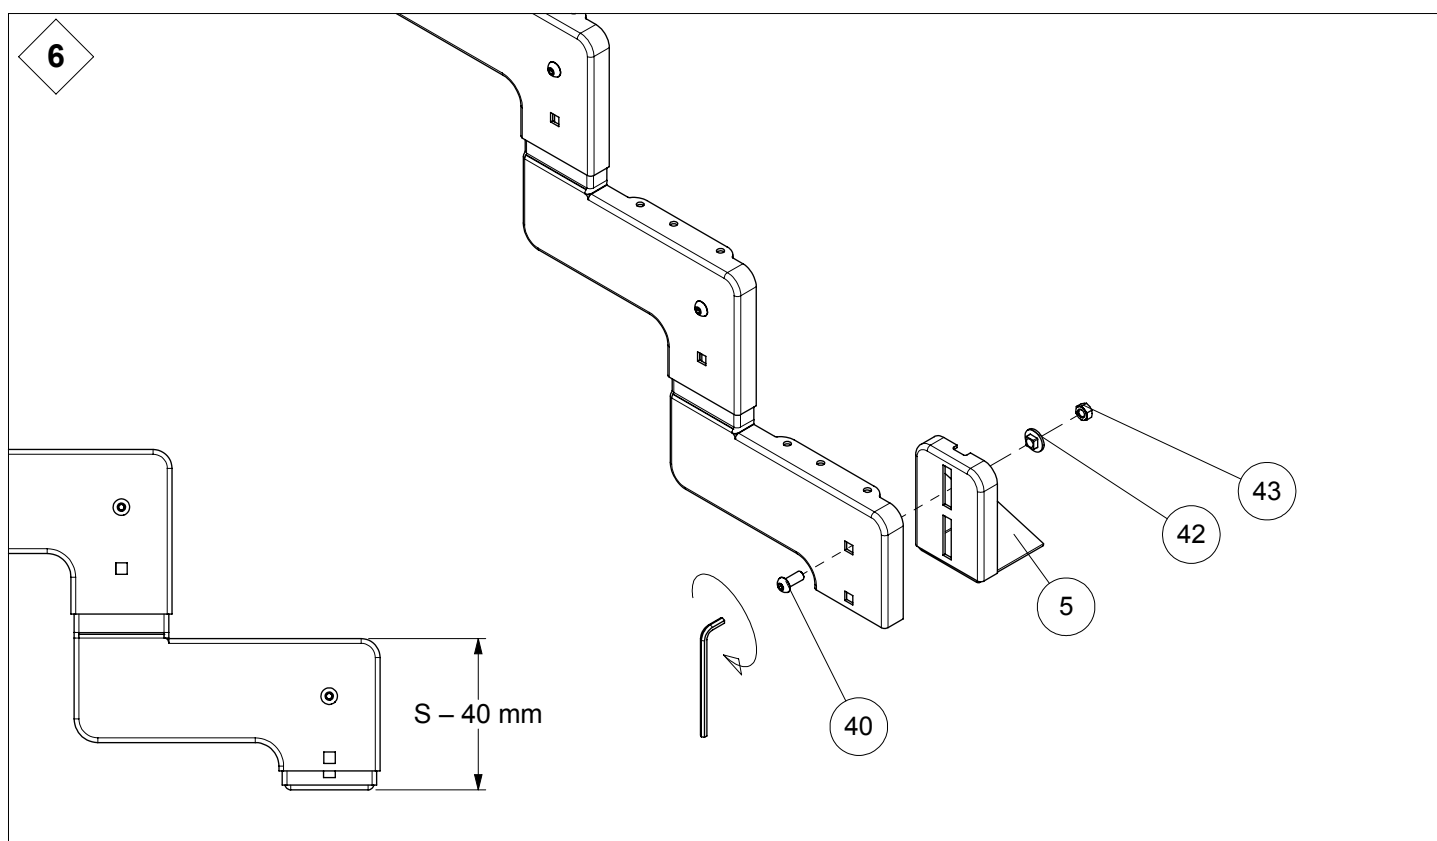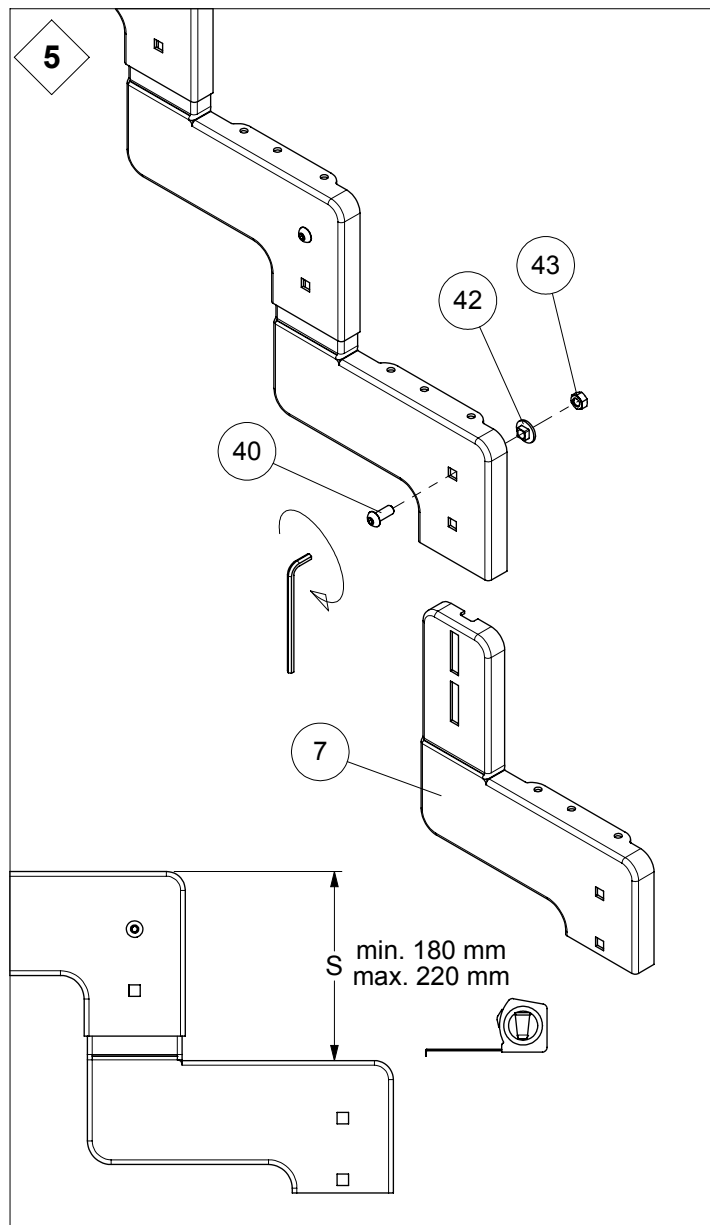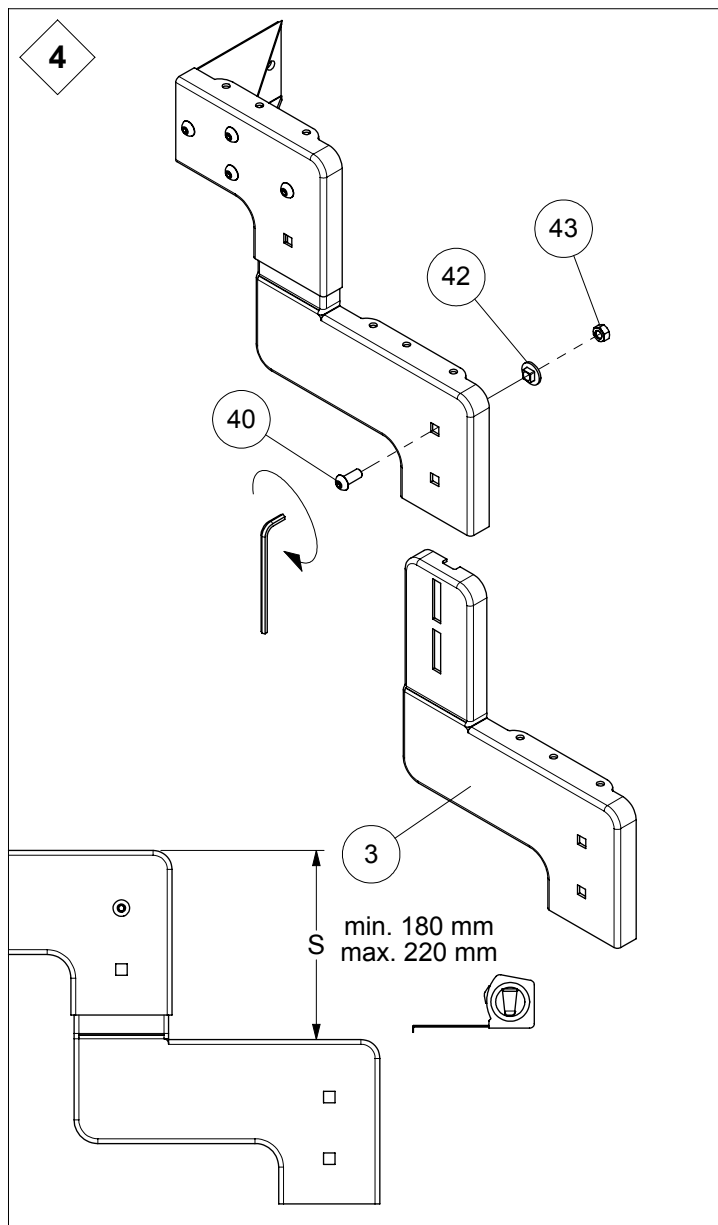

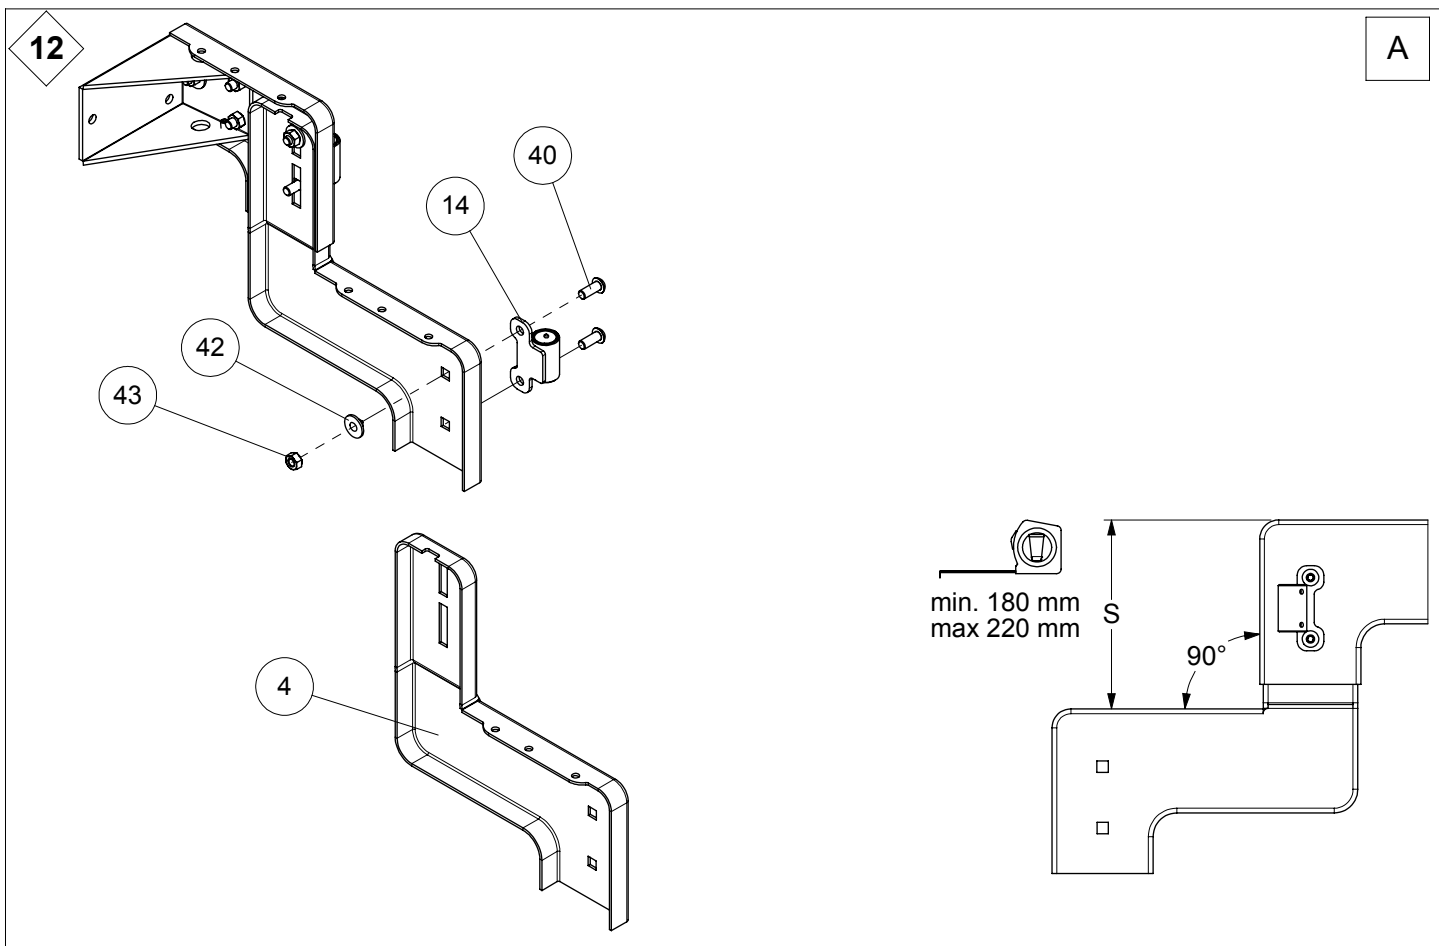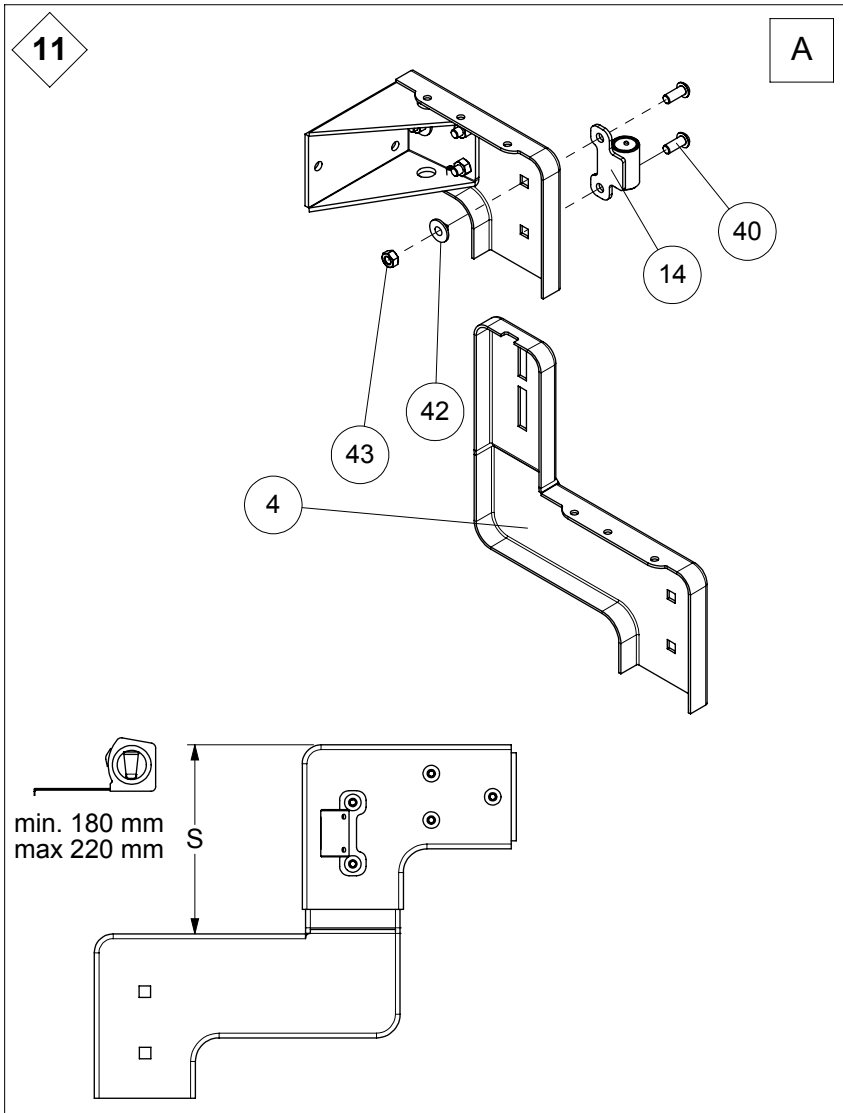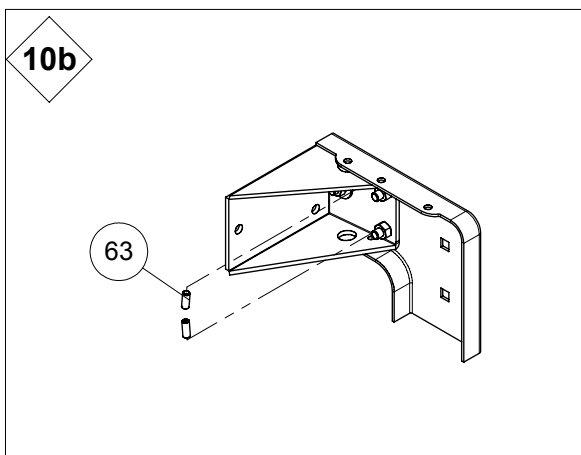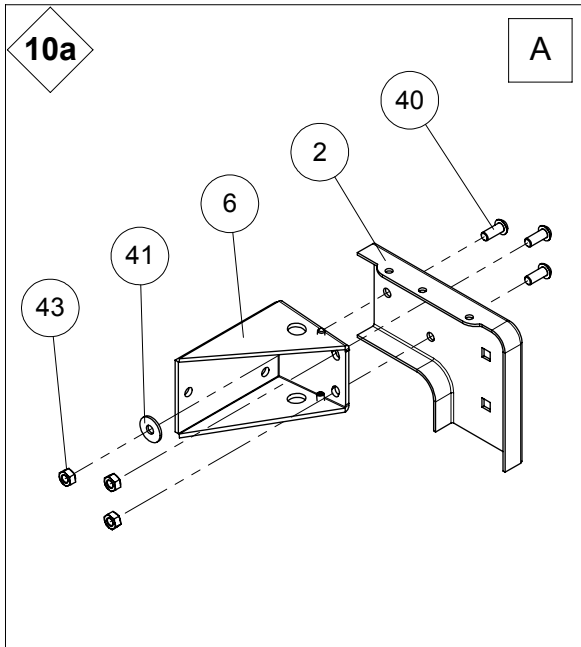



13

A

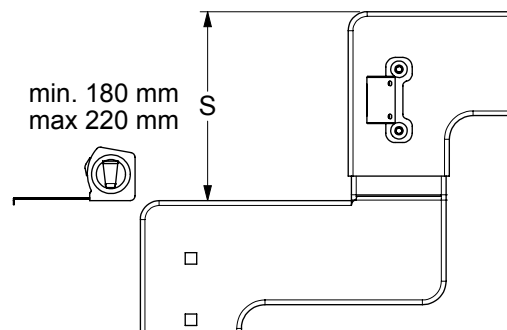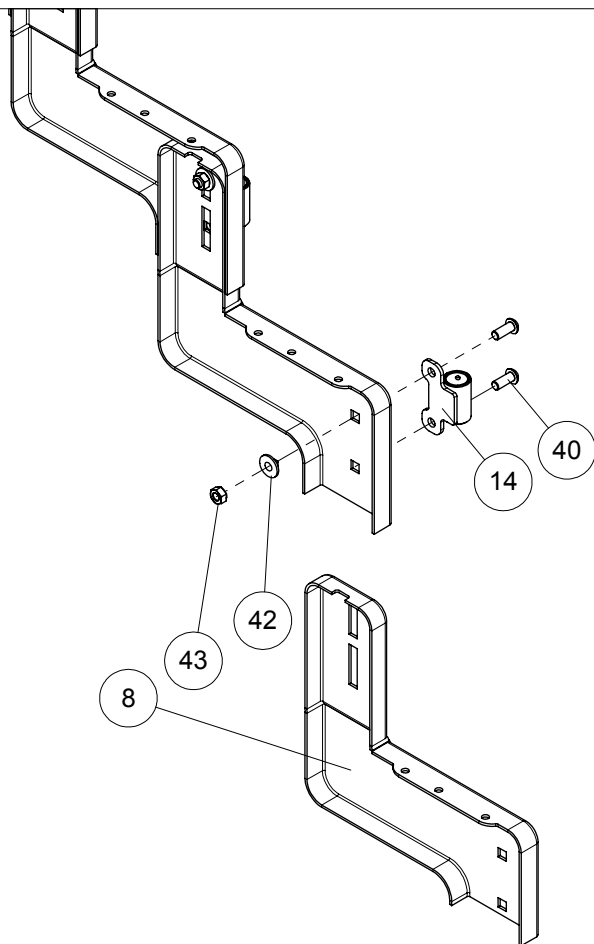


14

A

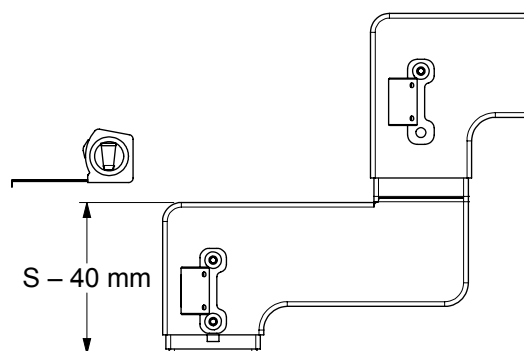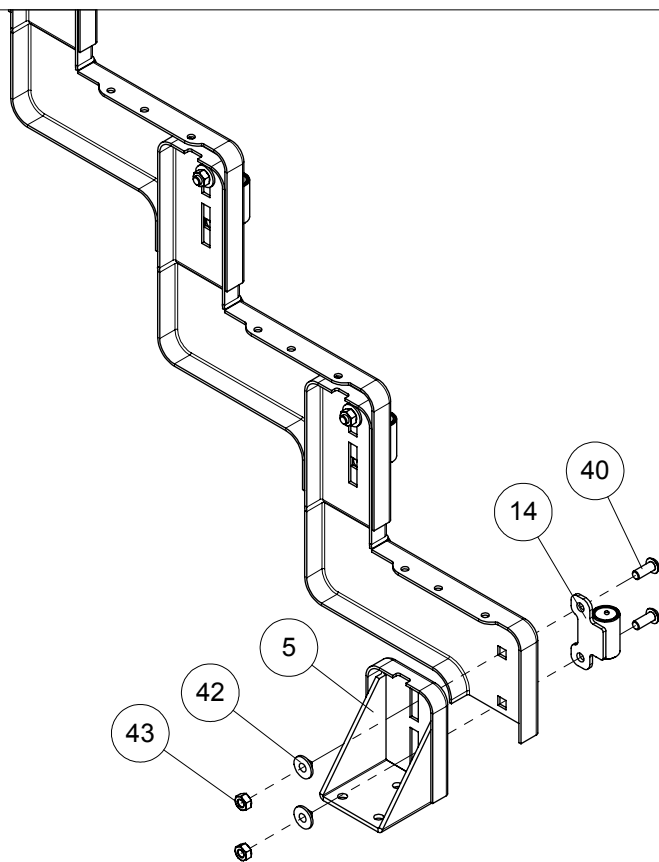


15


A

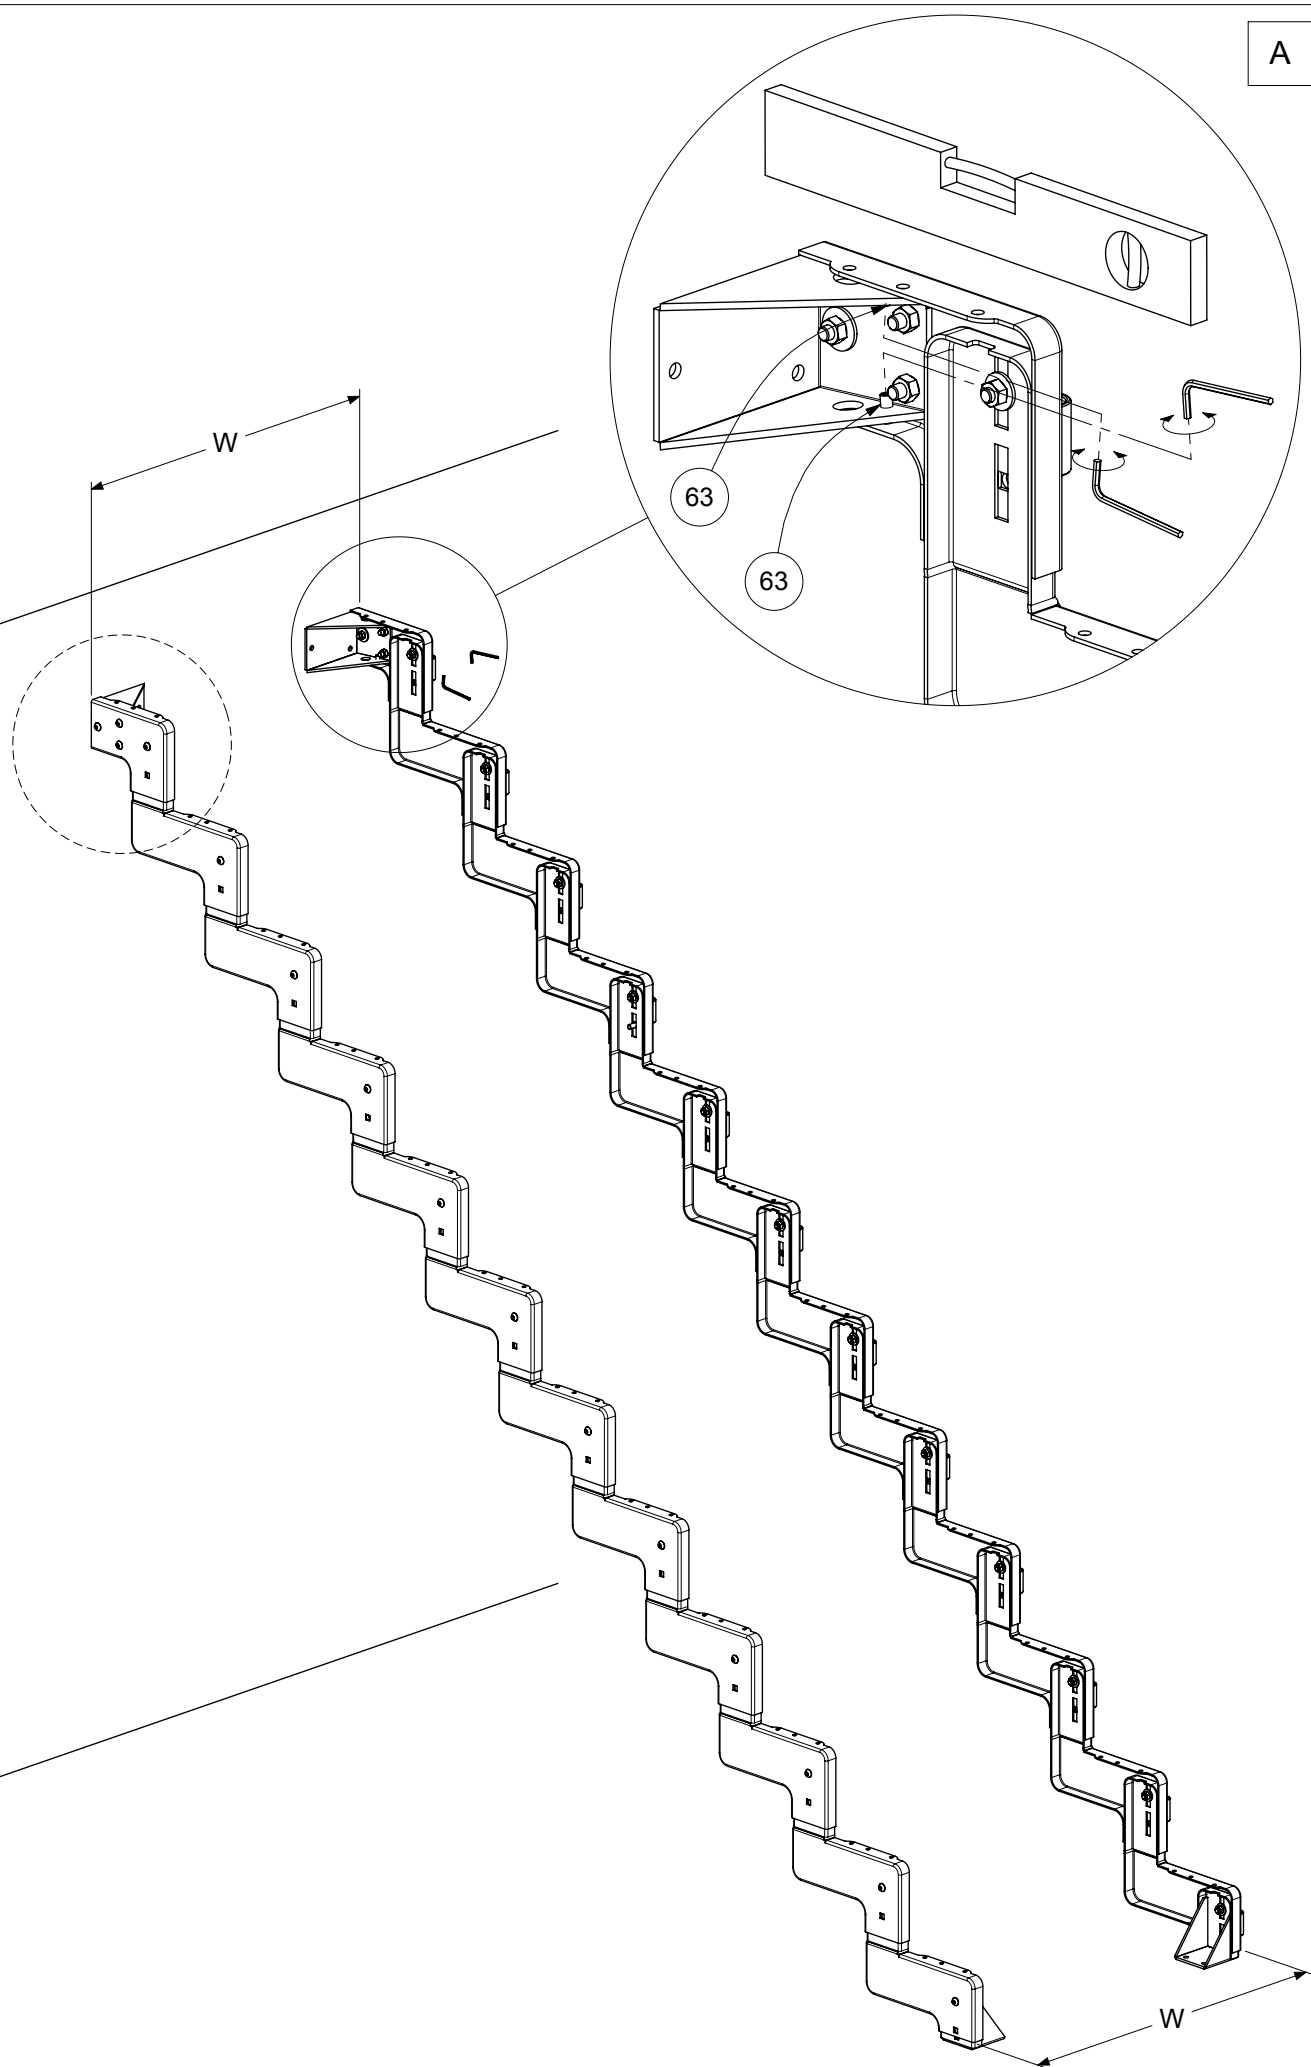

17

A

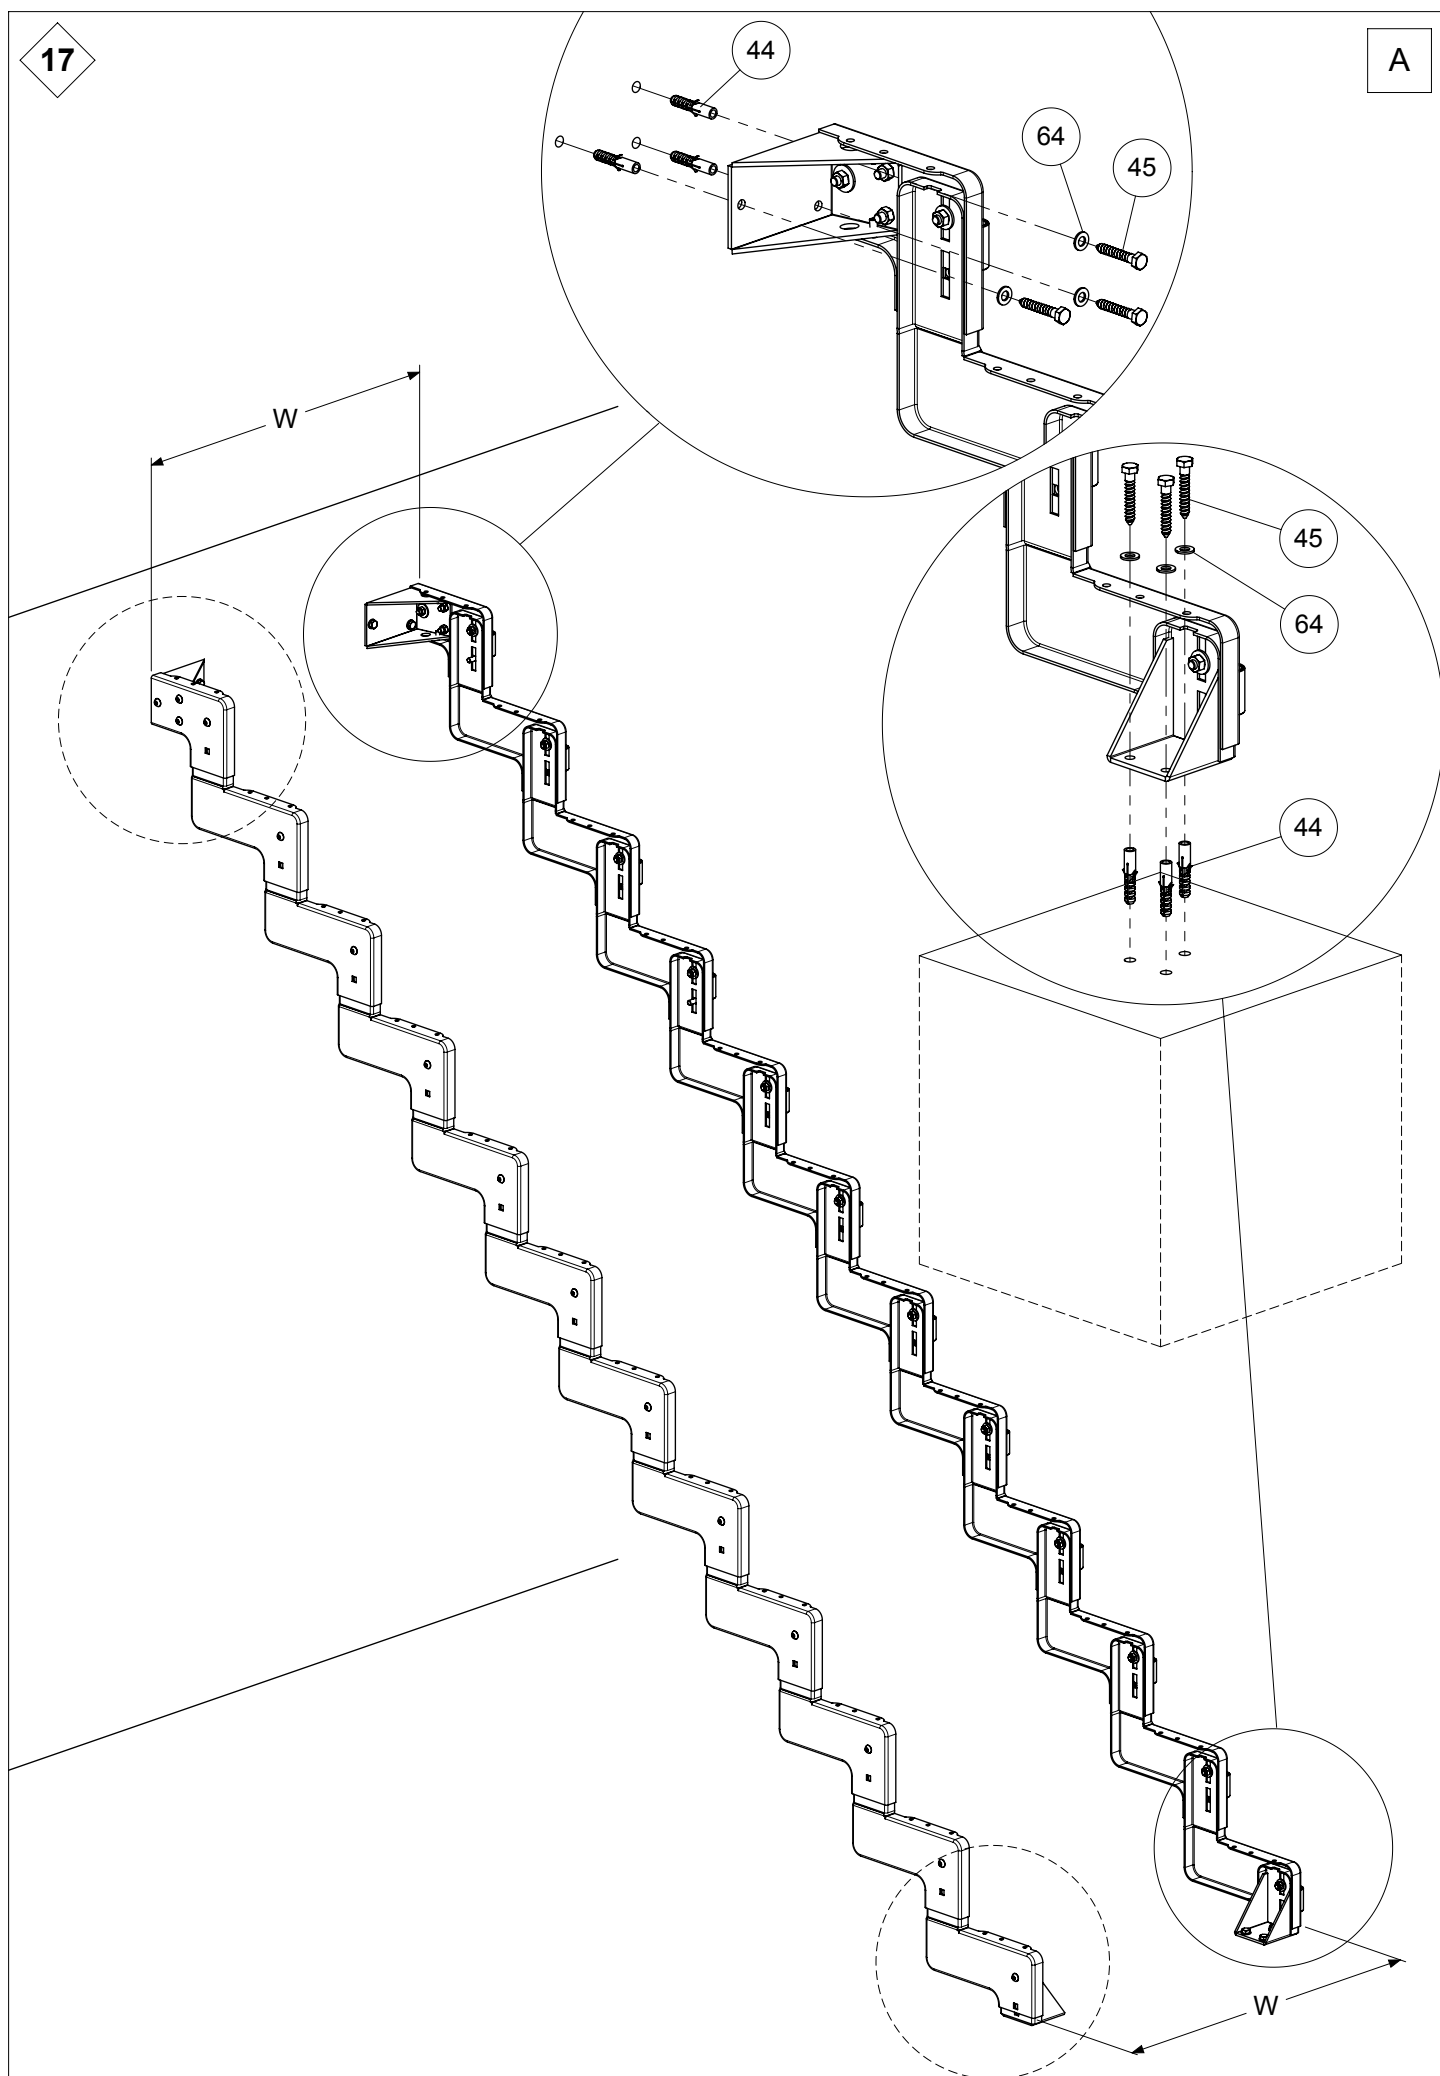

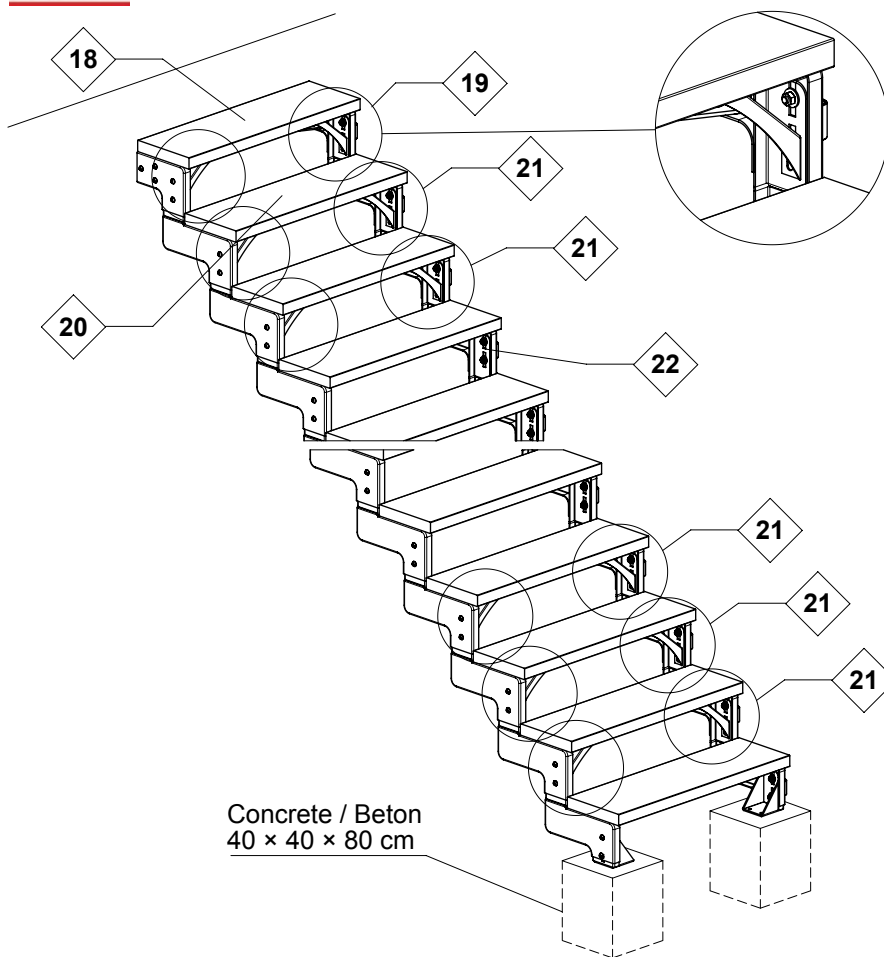




If more than
6 steps:
Add

$$9 + 10$$

Wenn mehr als
6 Stufen:

$$9 + 10$$

hinzufügen

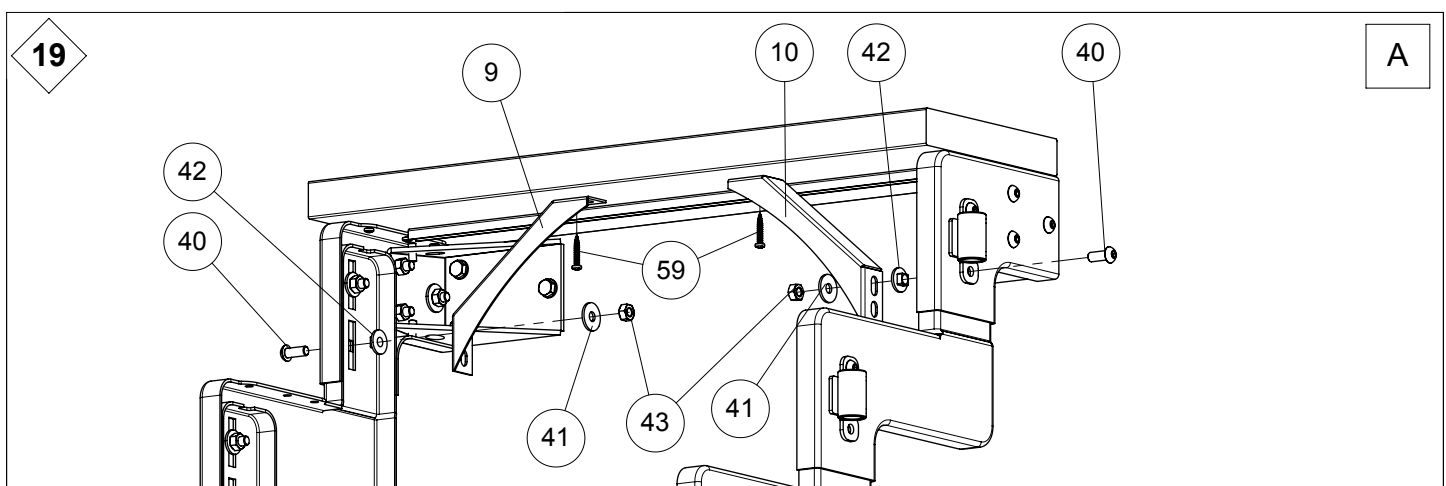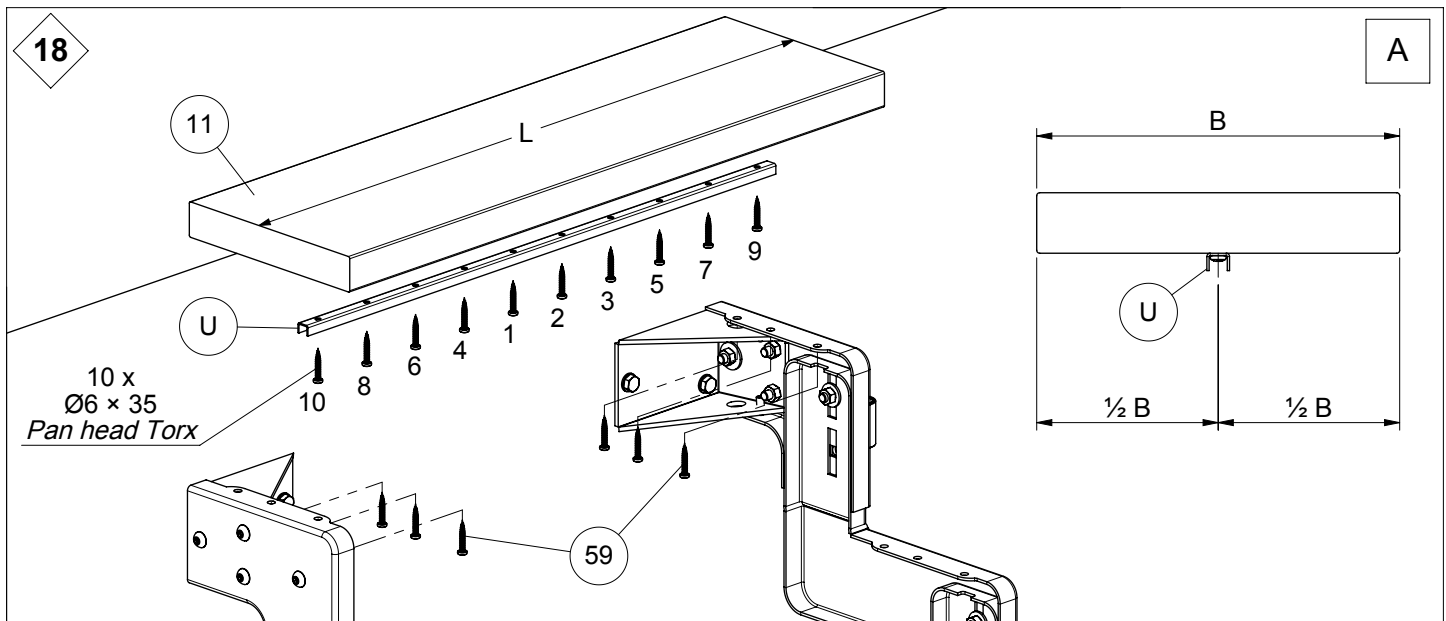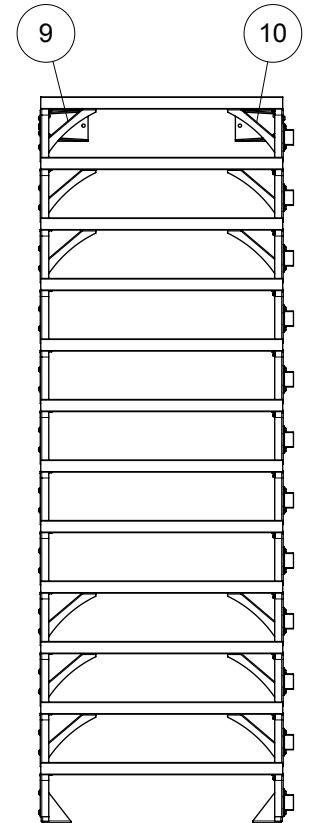

20

A

U
10 x
Ø6 x 35
Pan head Torx

59

21

A

10

9

42

40

59

41

43

41

42

40

22

A

40




42





43





43

42

40

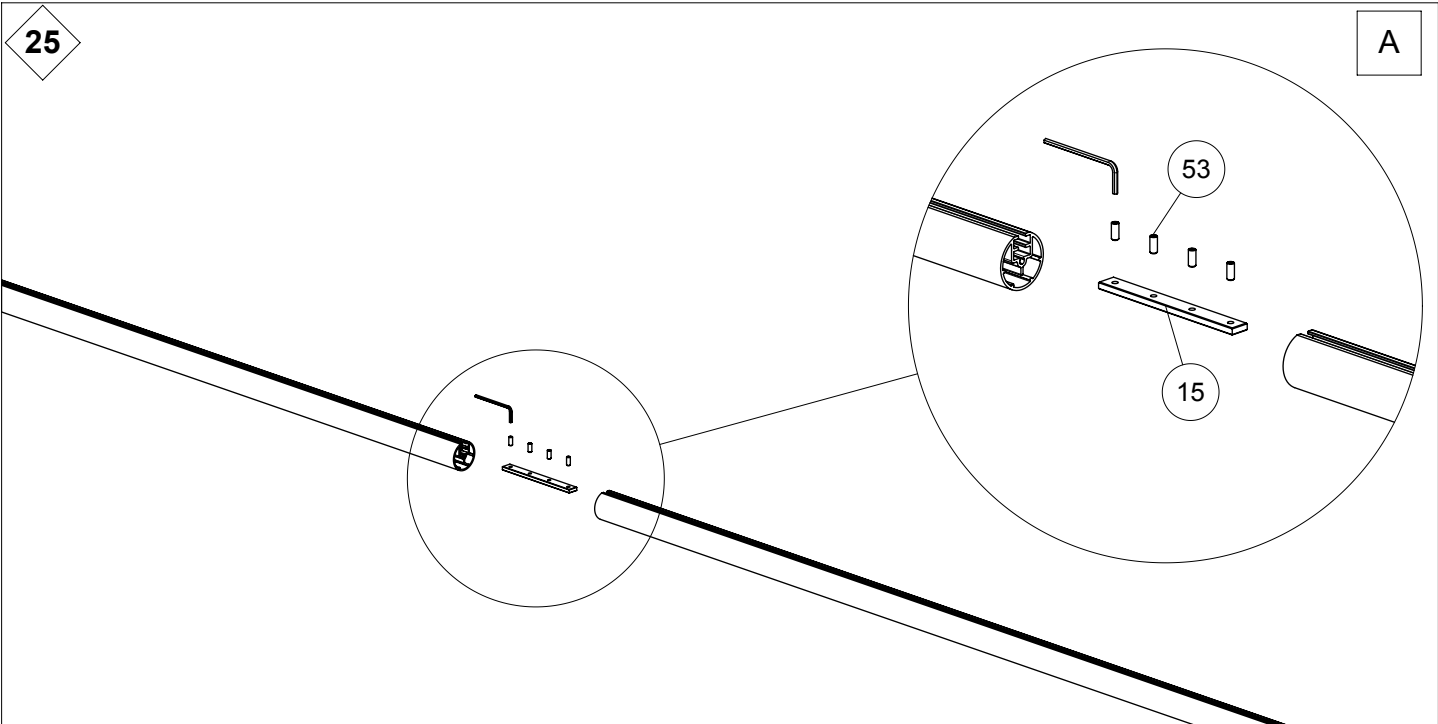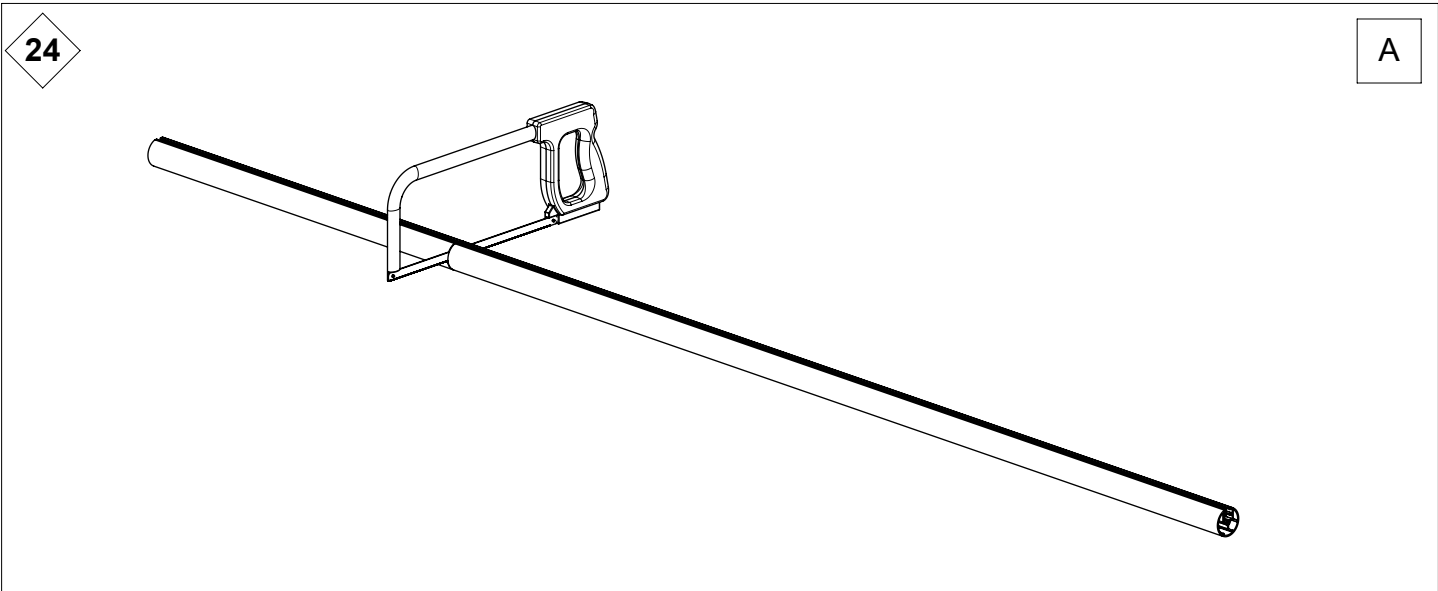
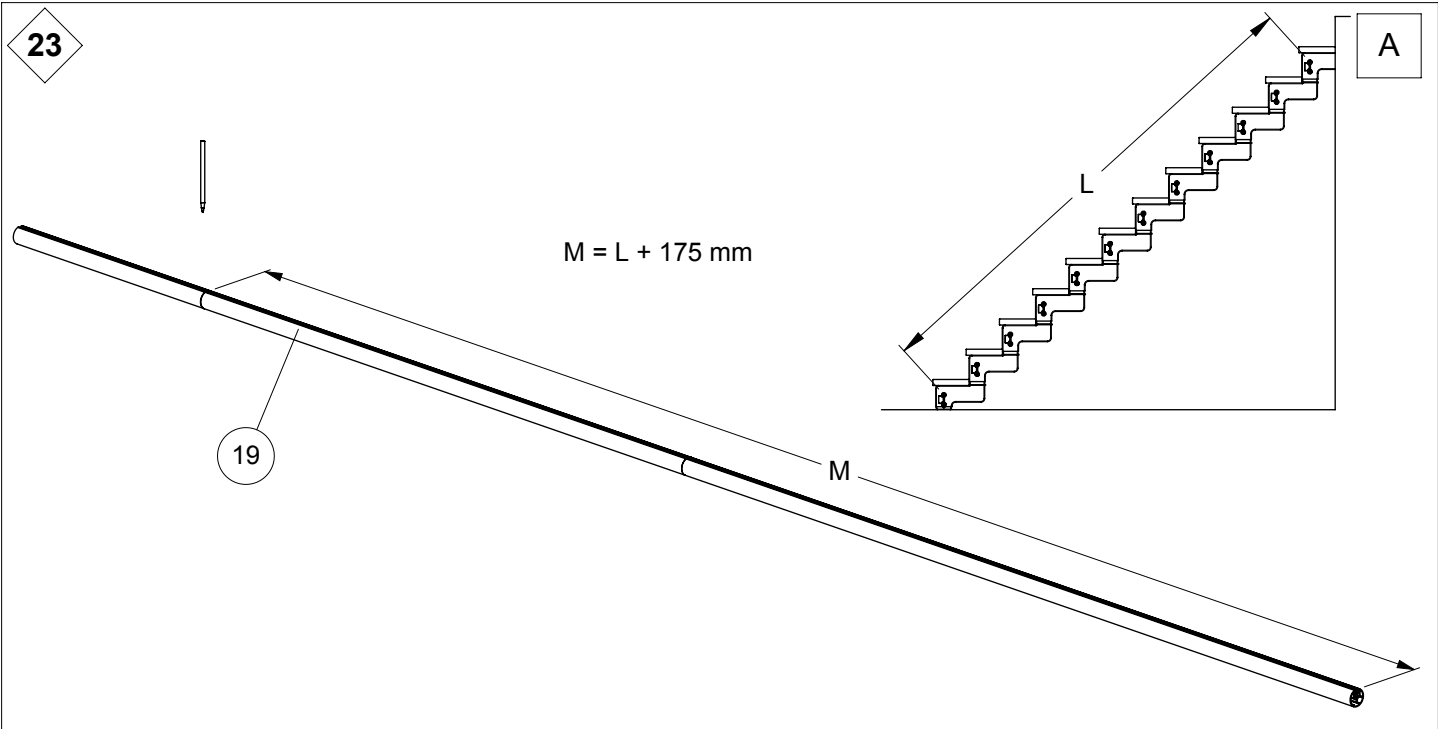


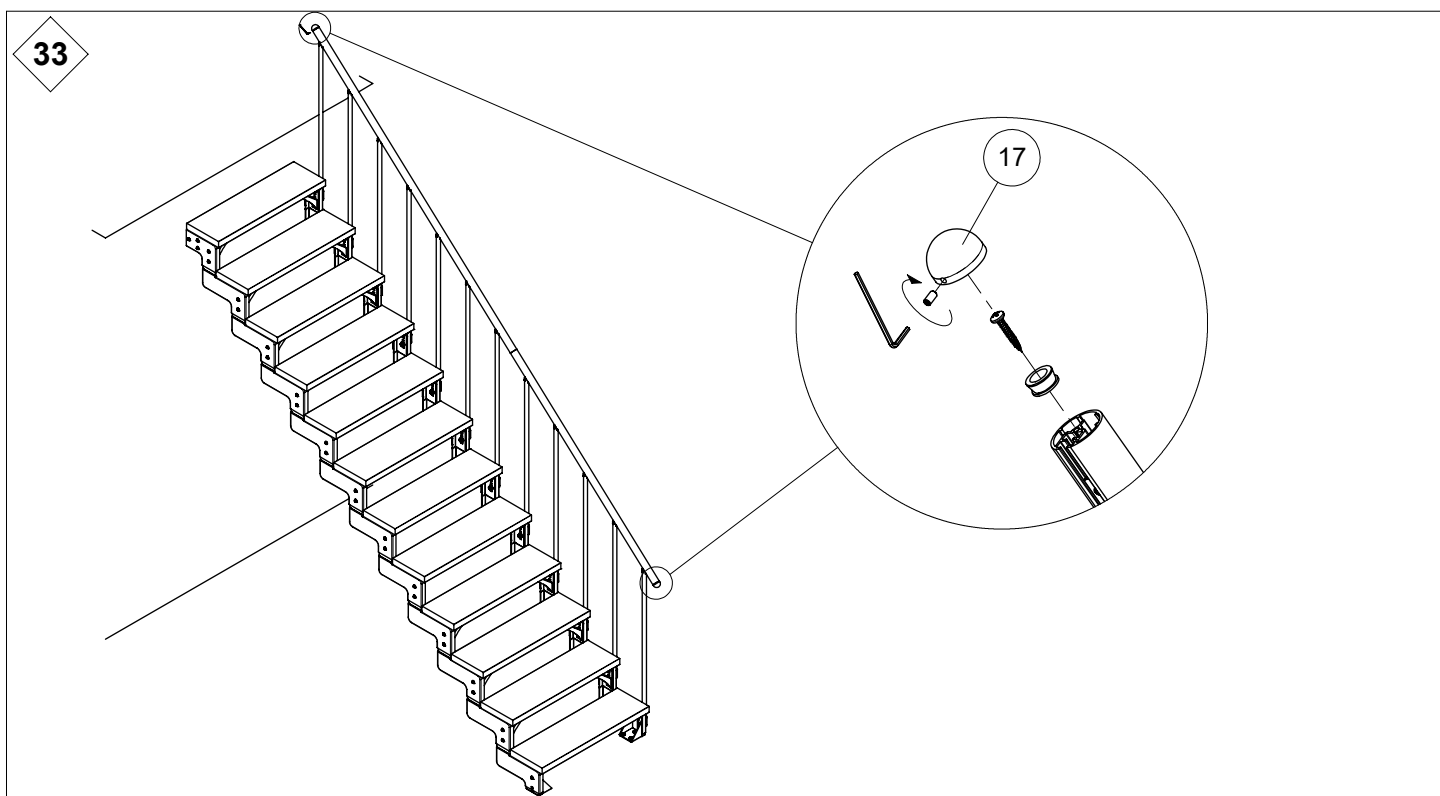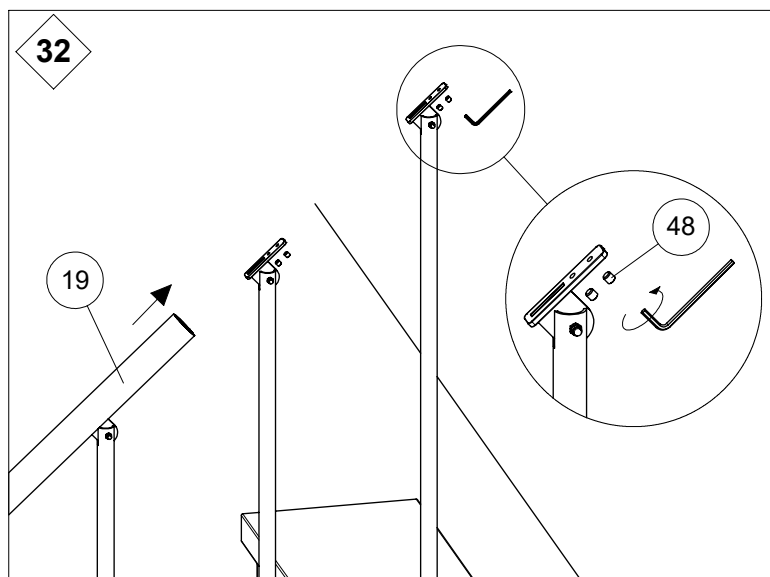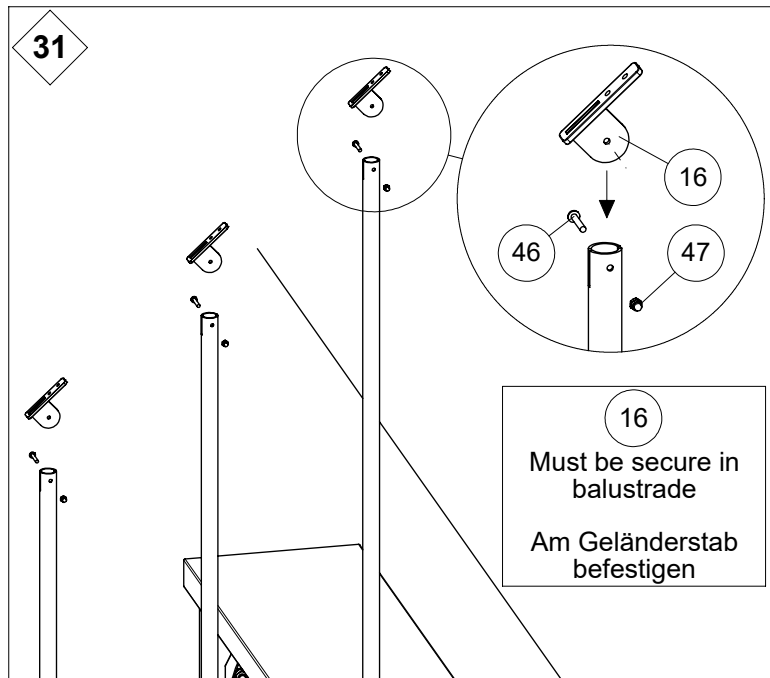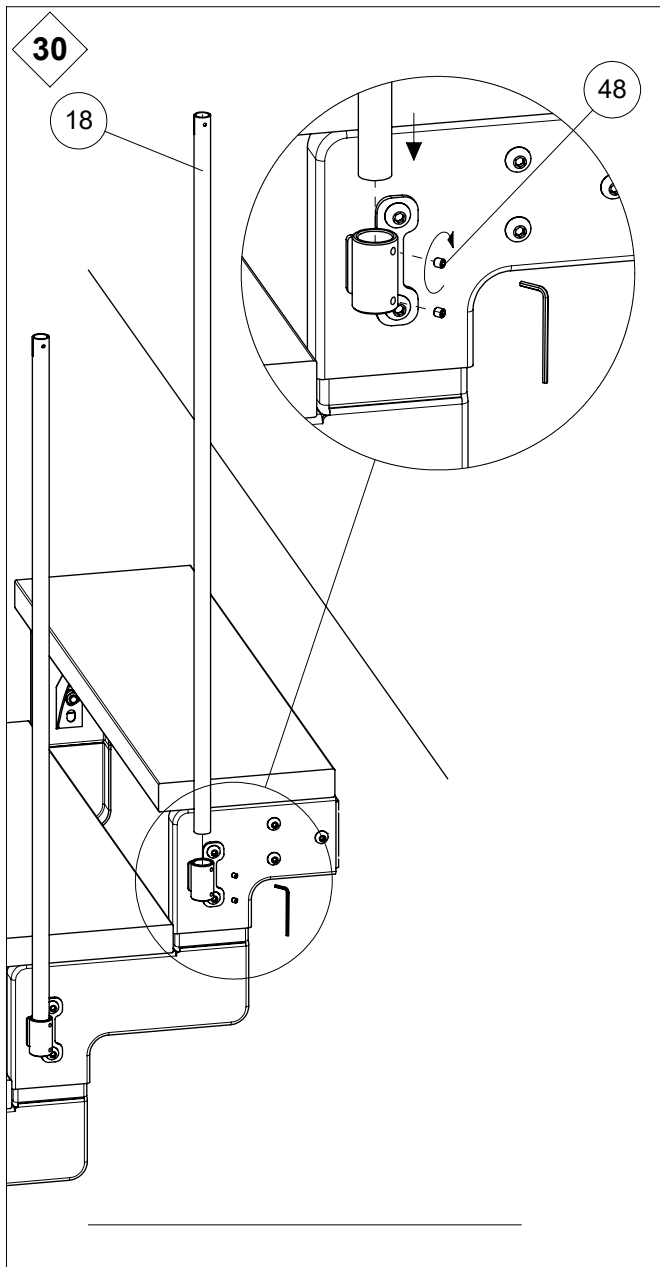

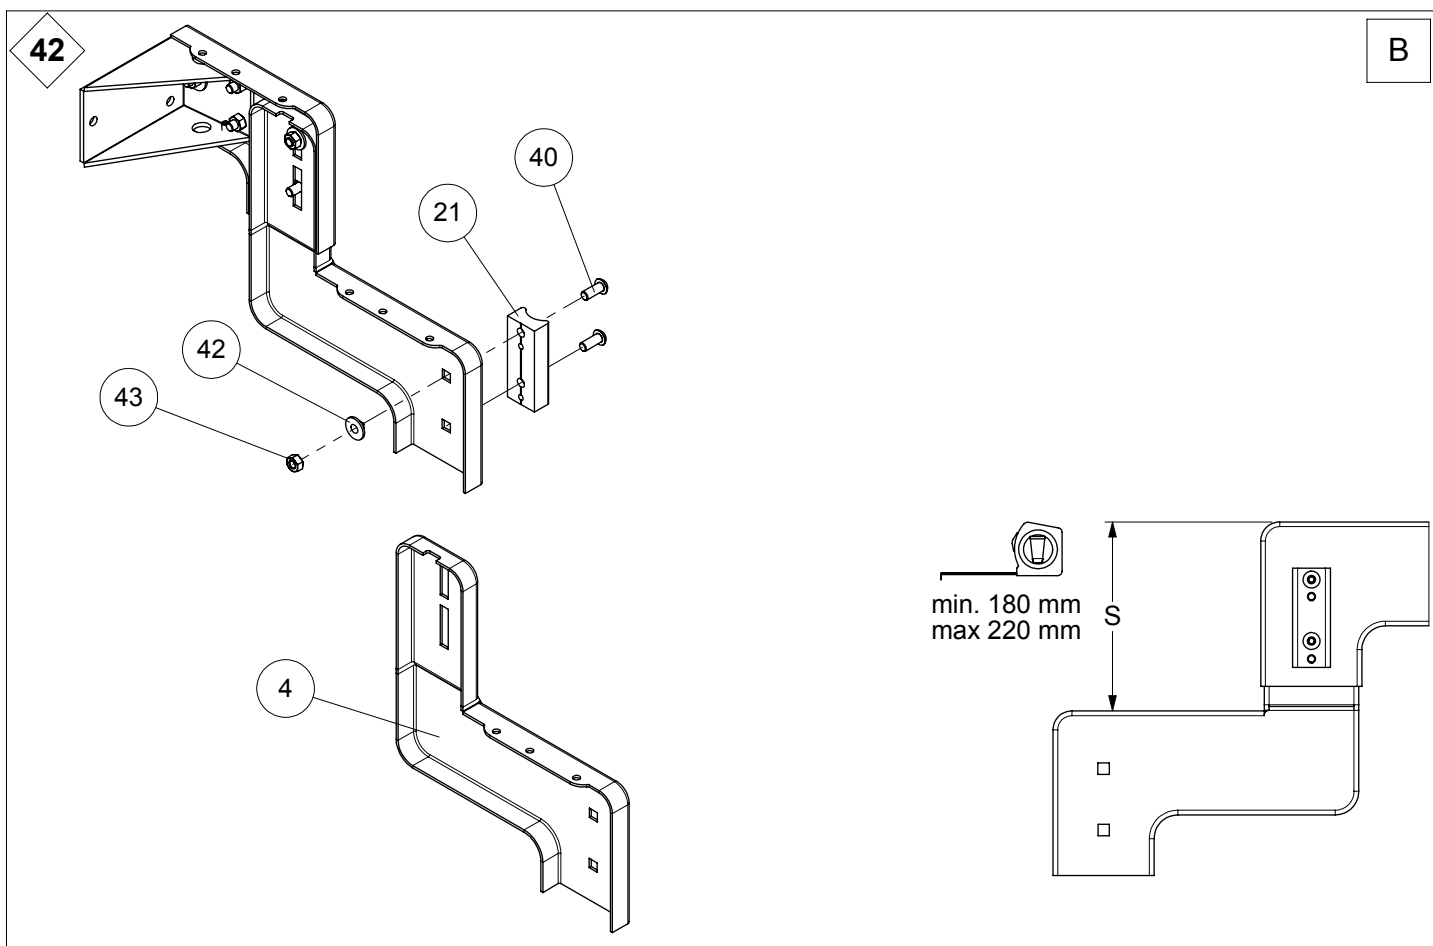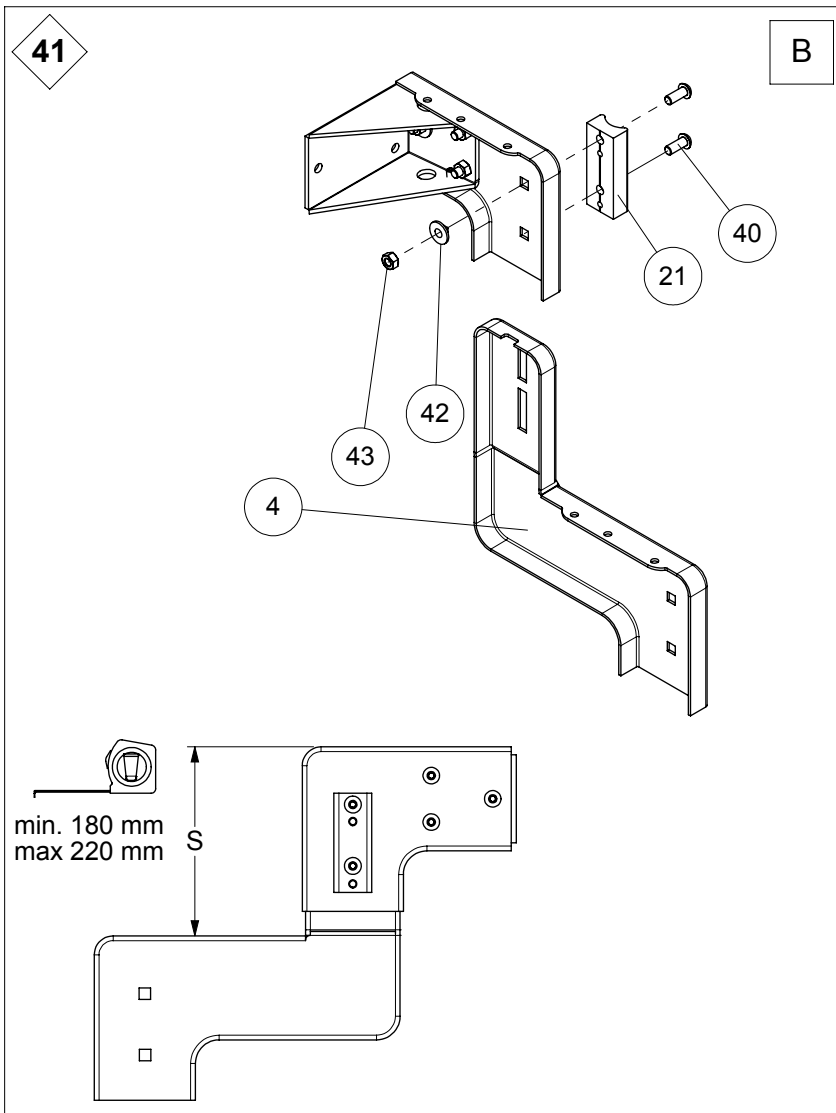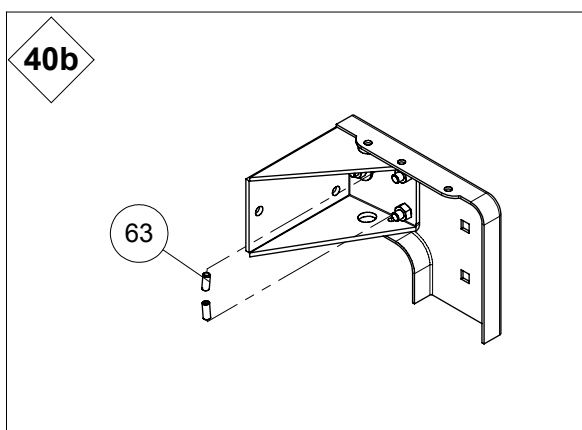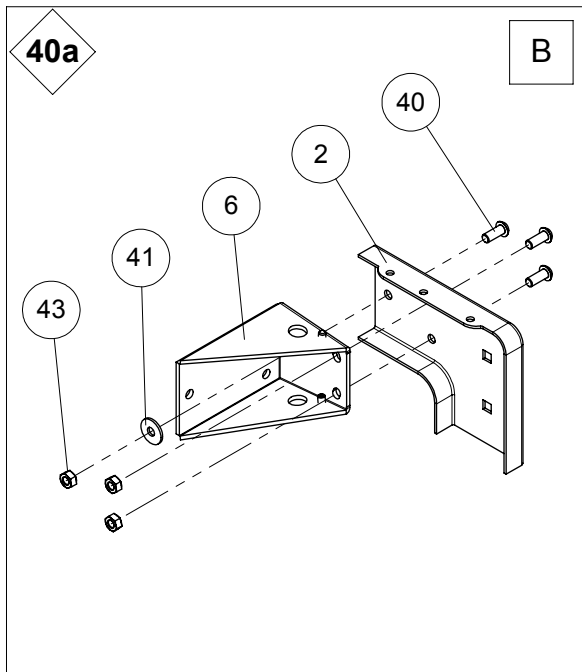



43

B

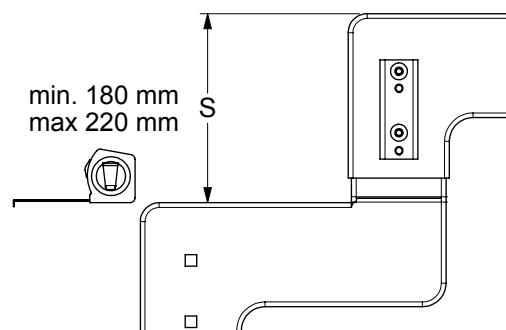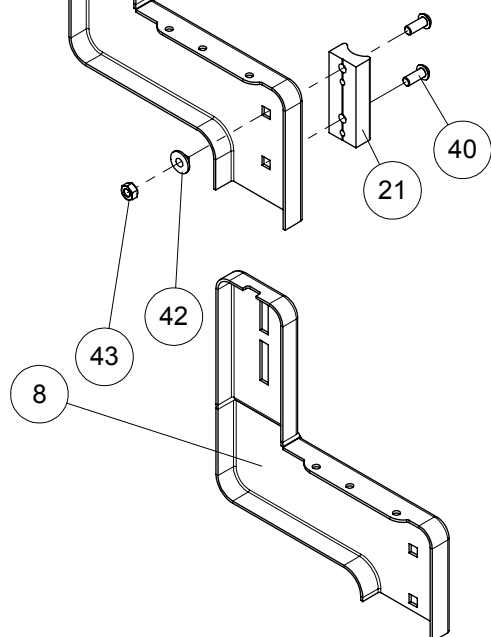


44


B

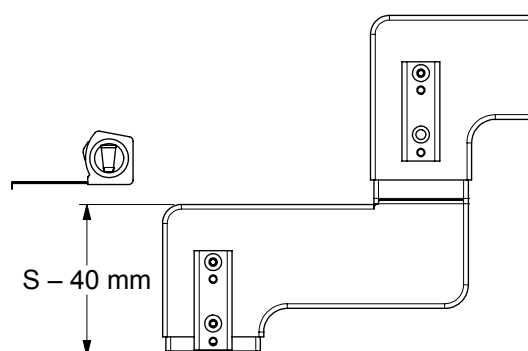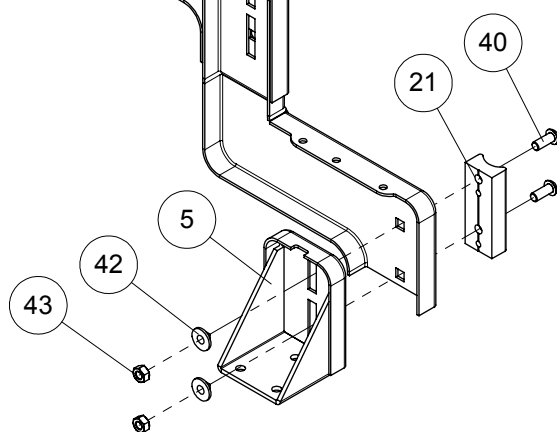

45


B

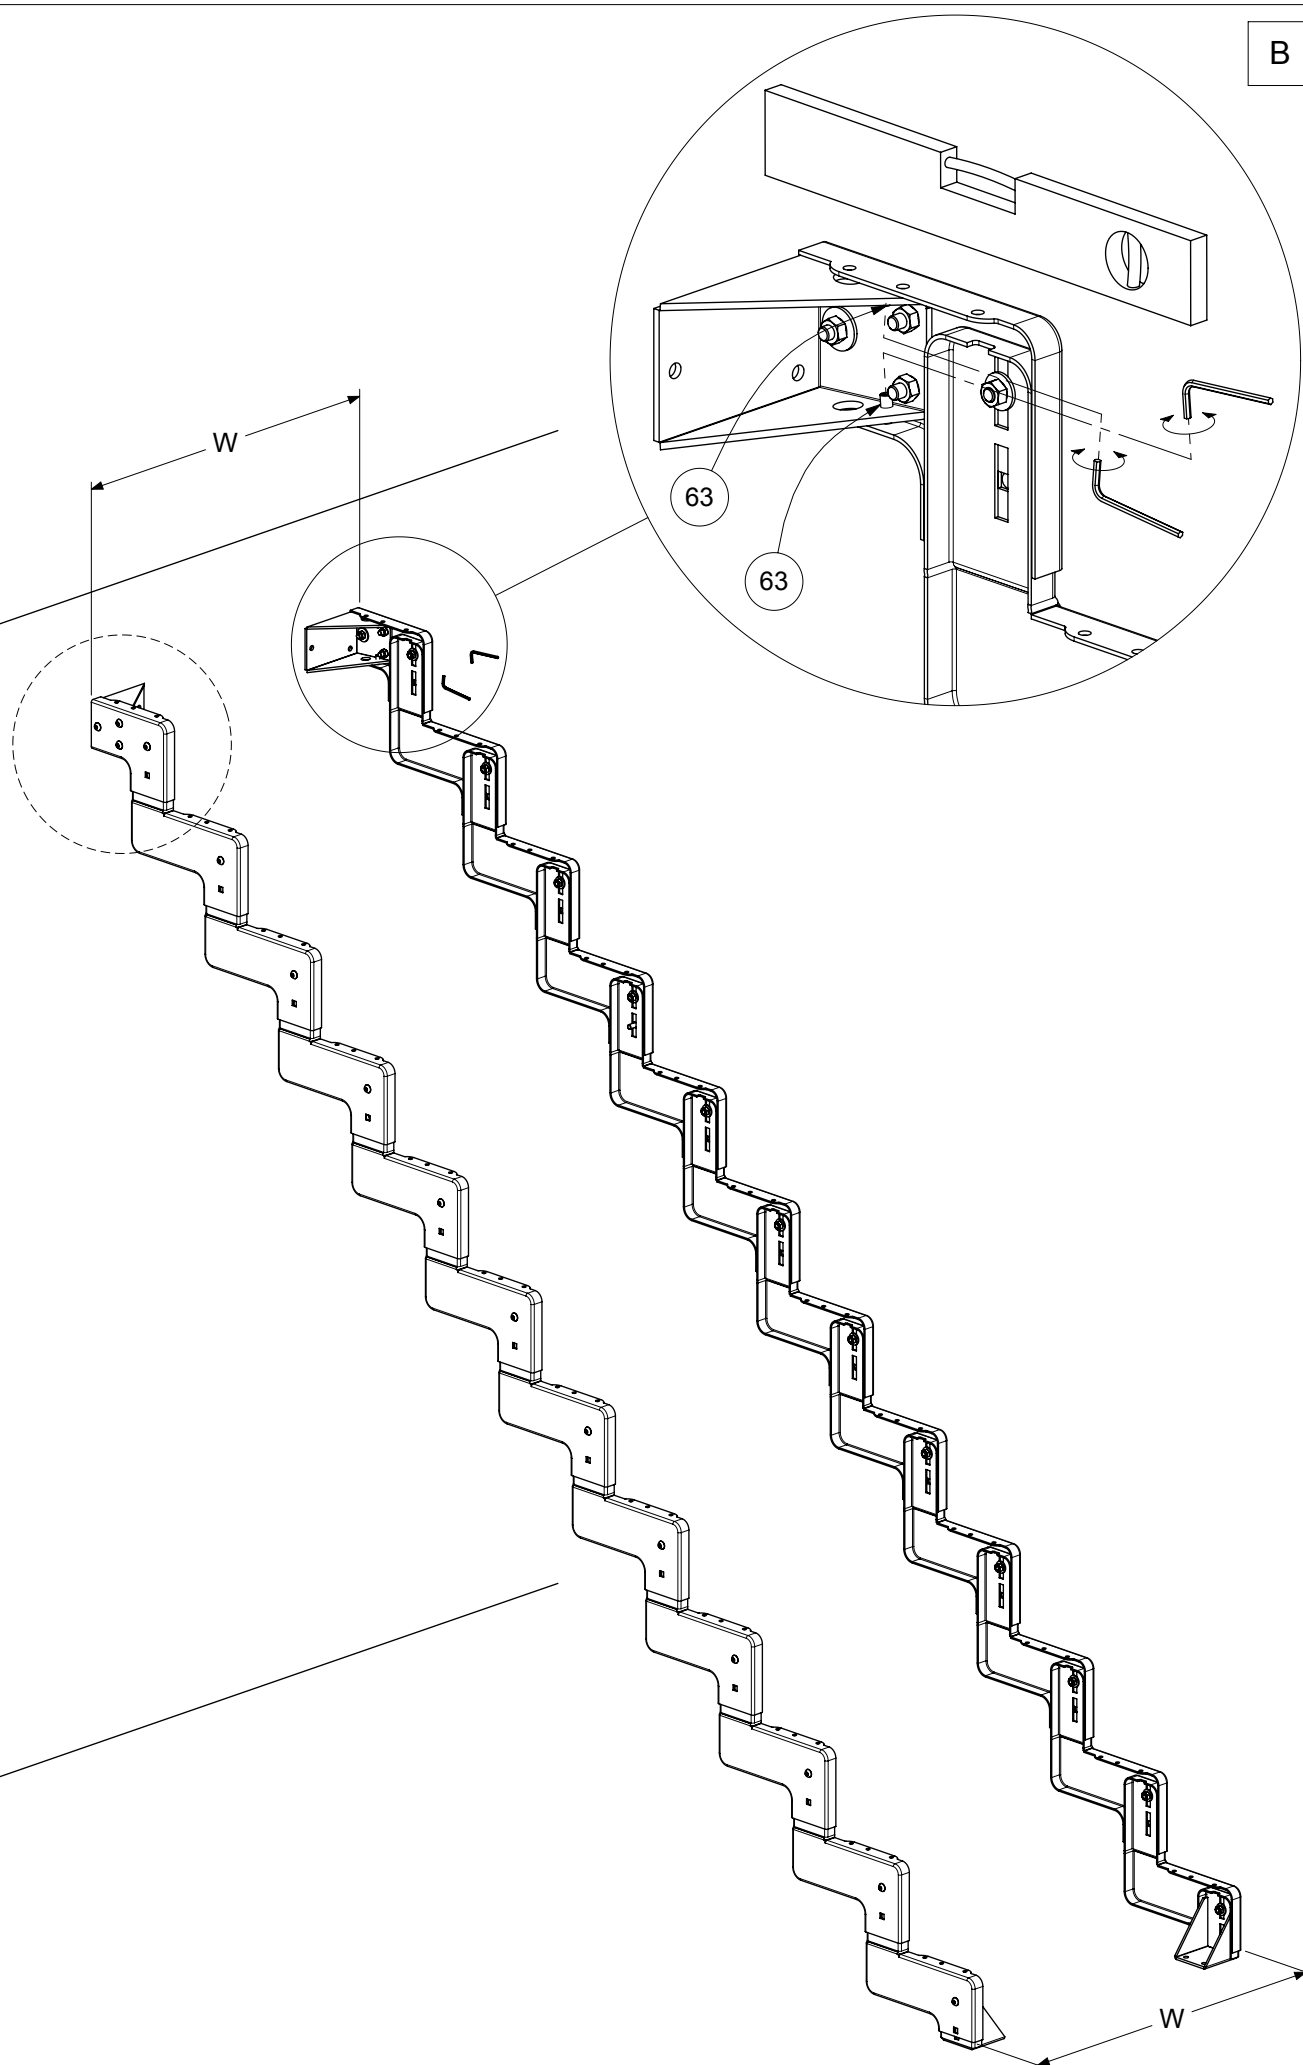


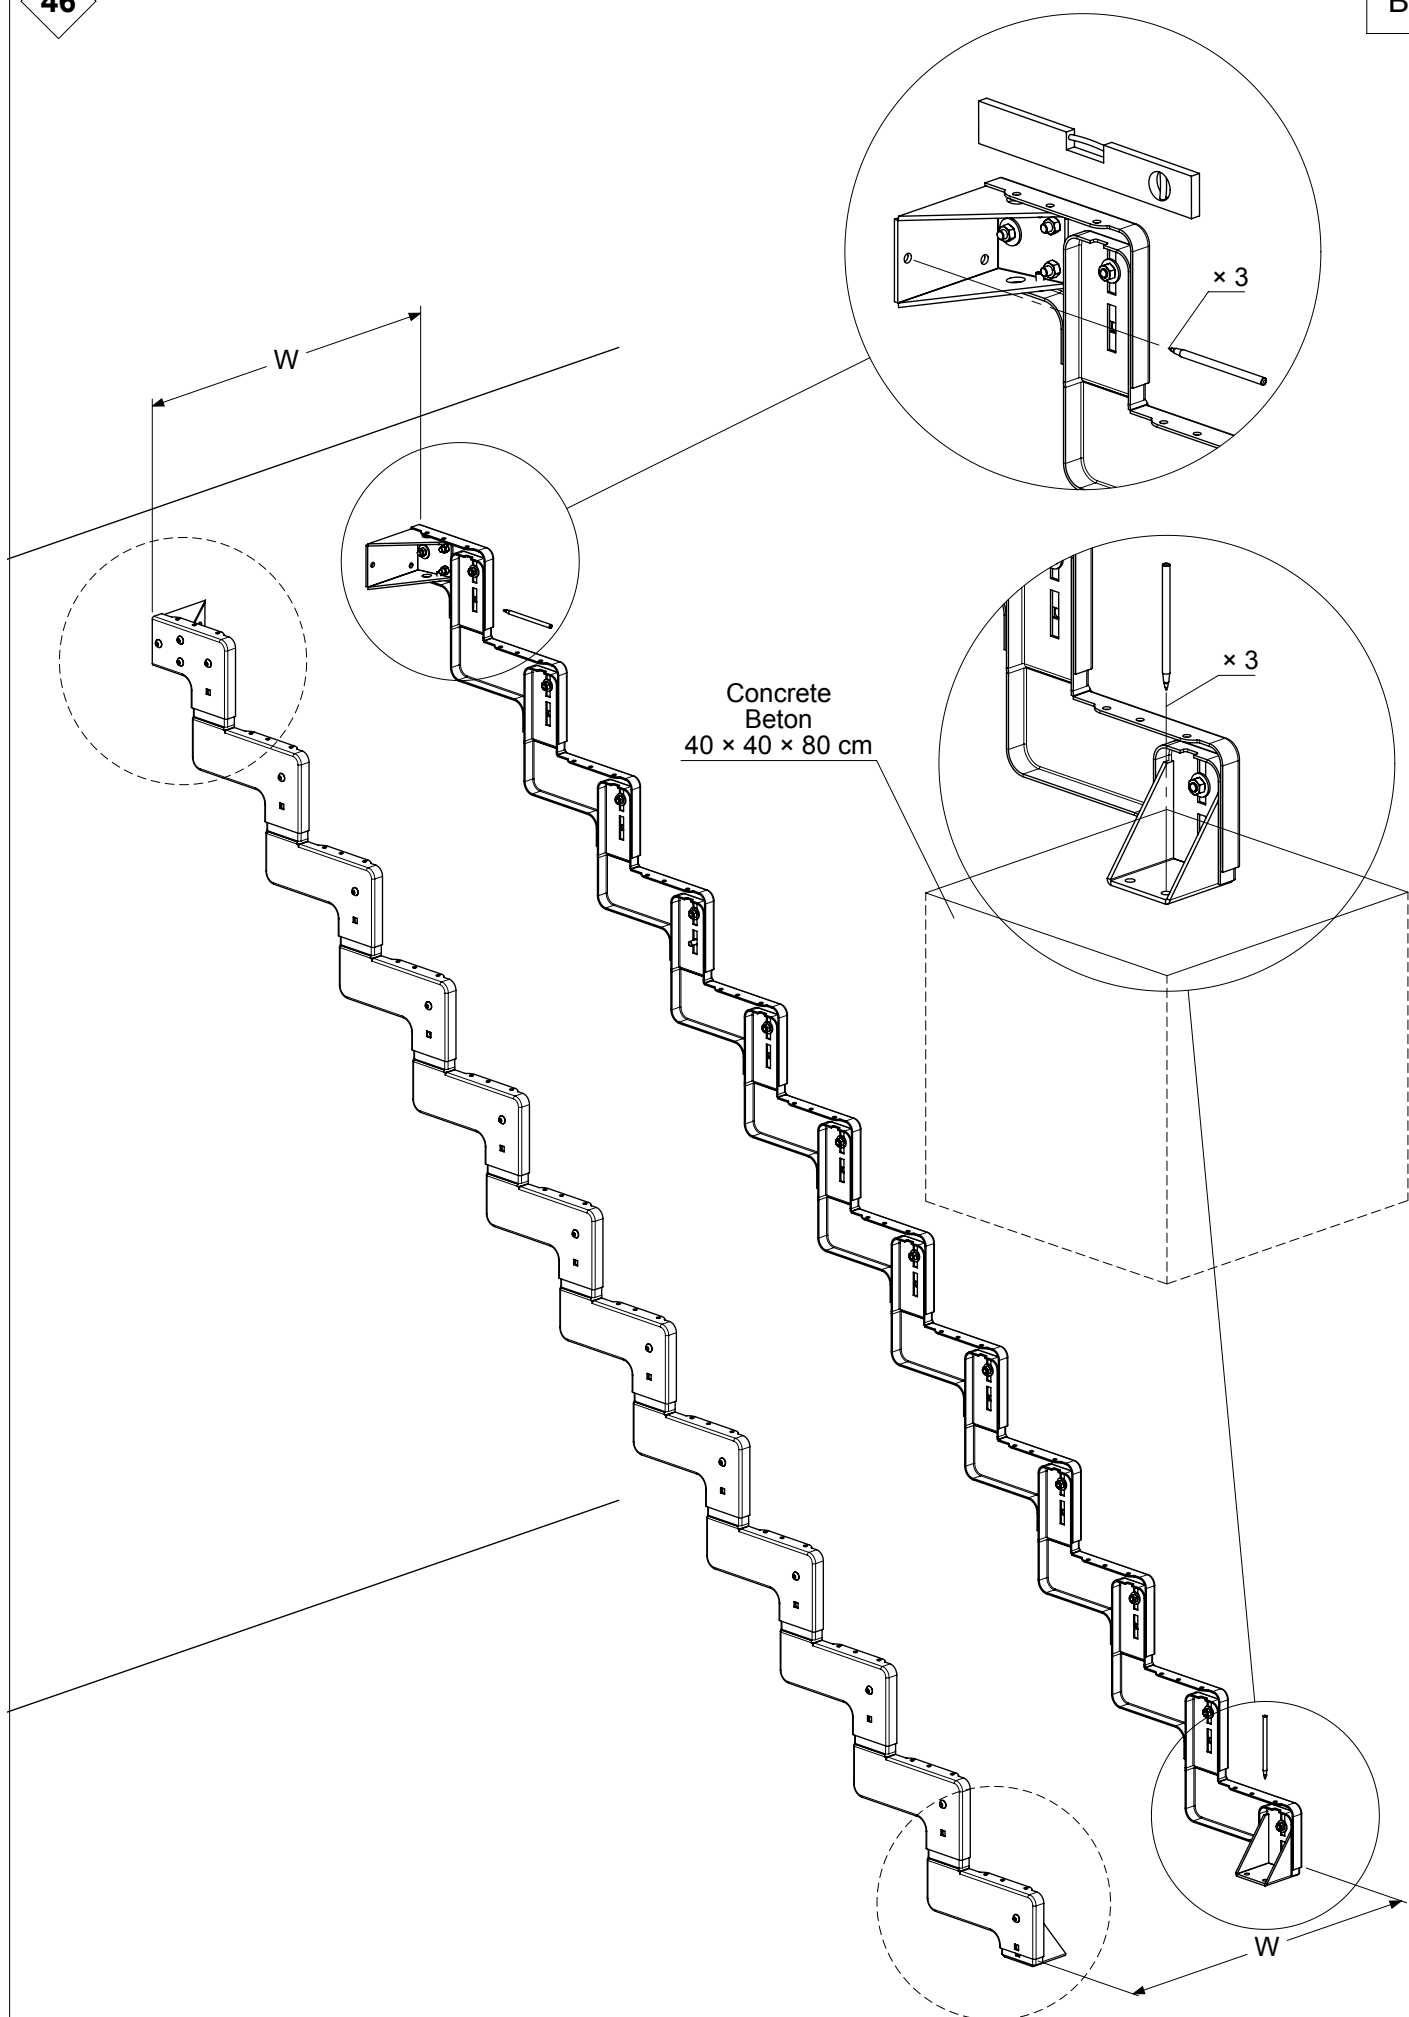

47

B



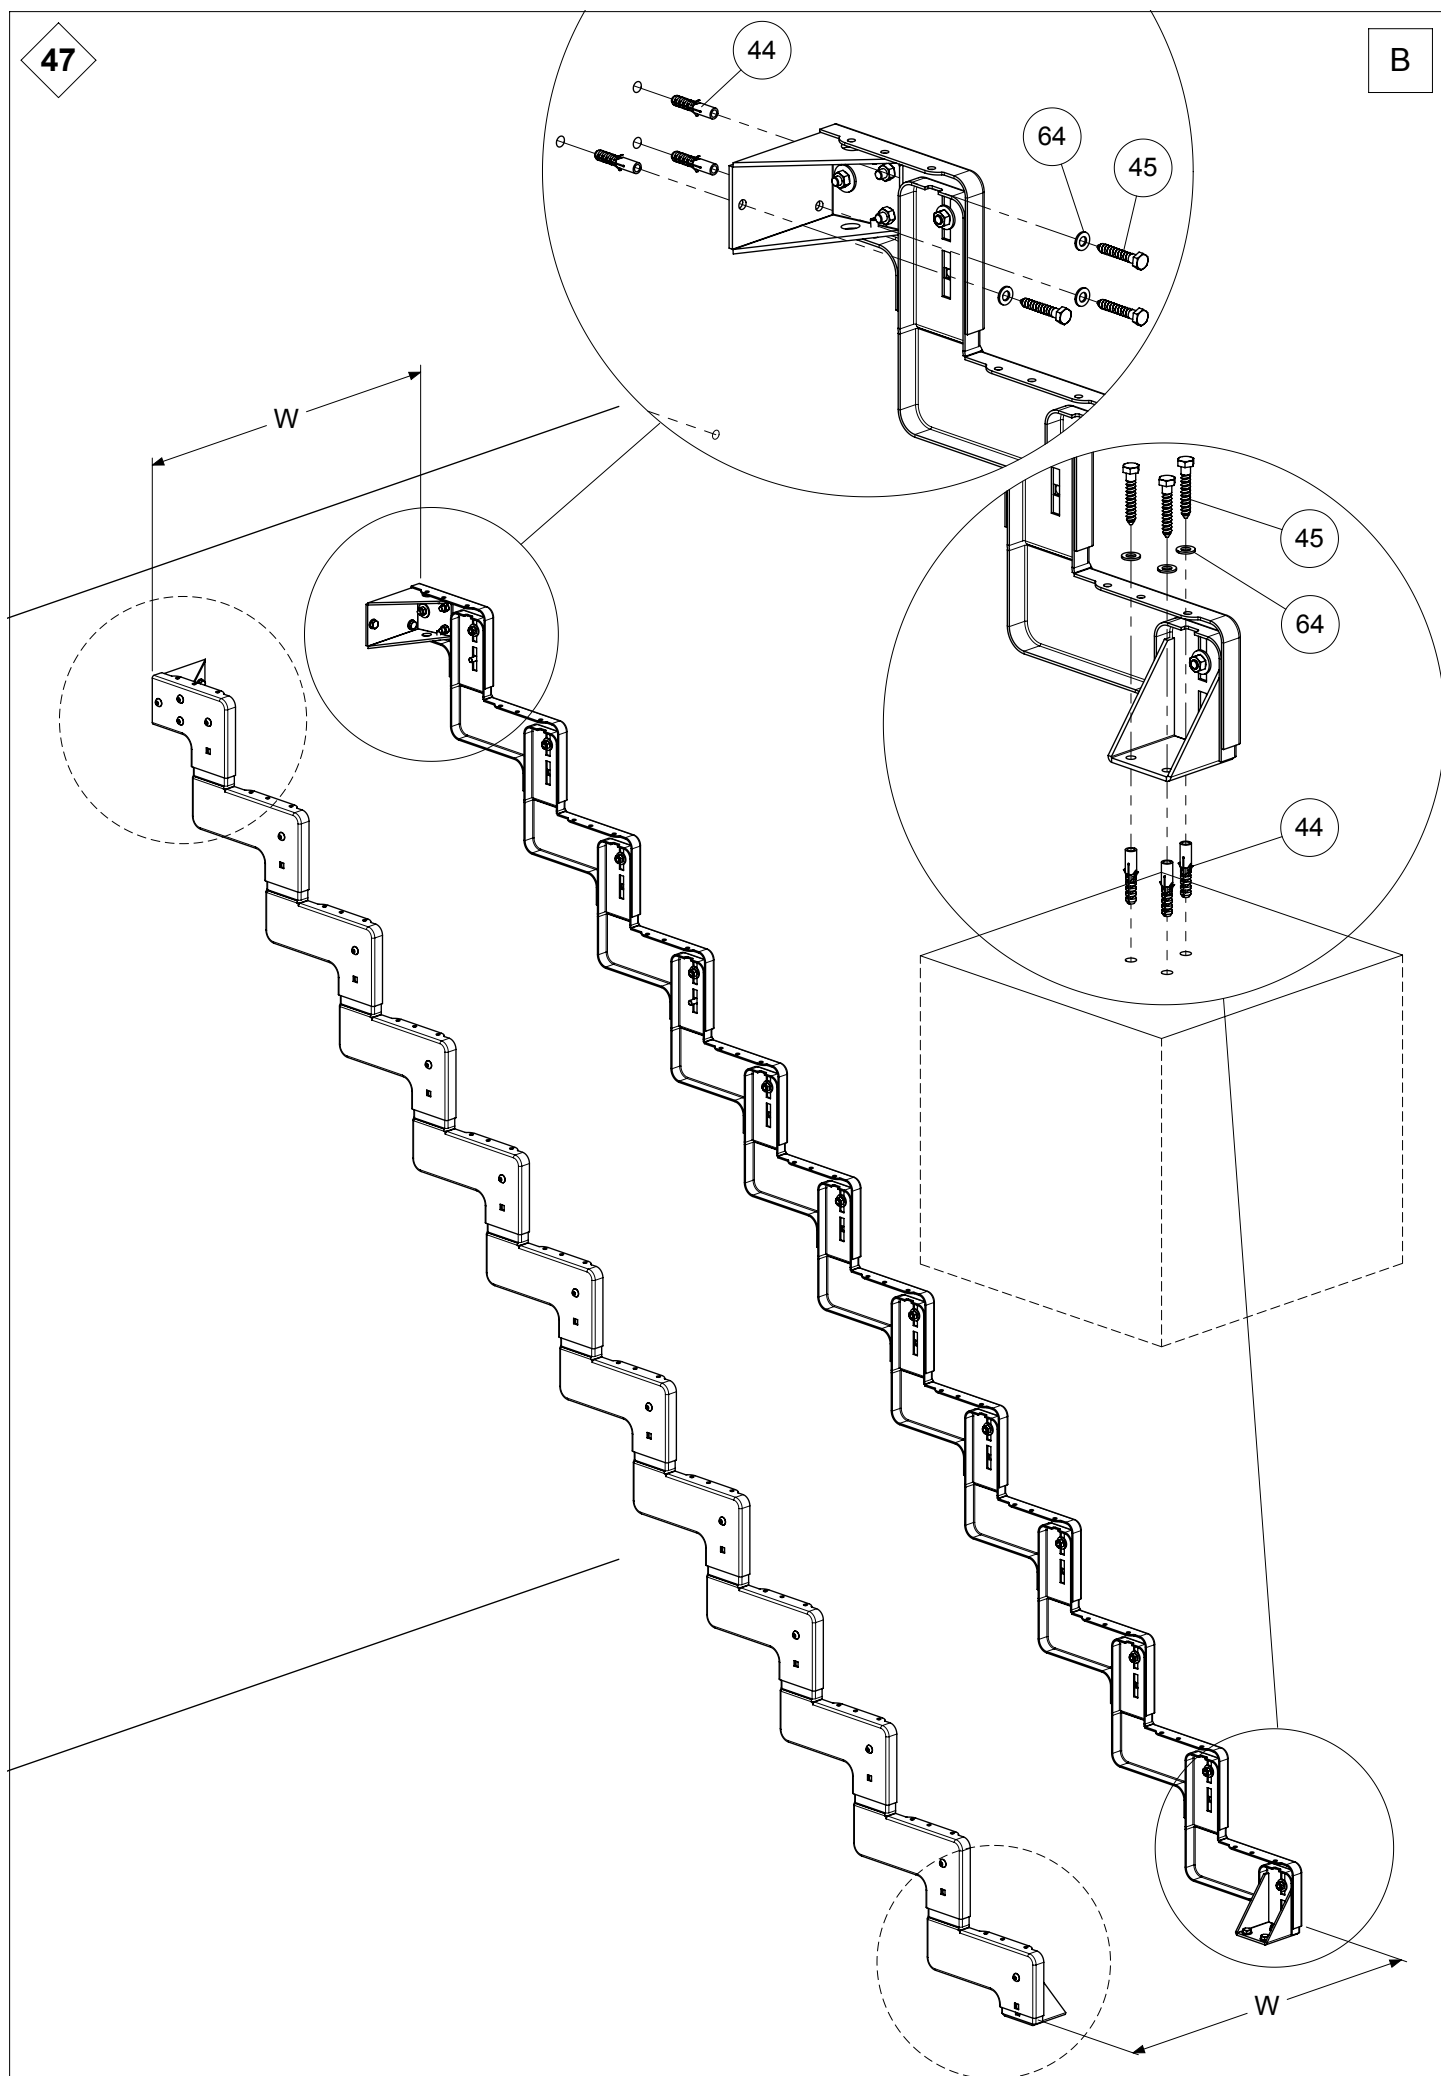


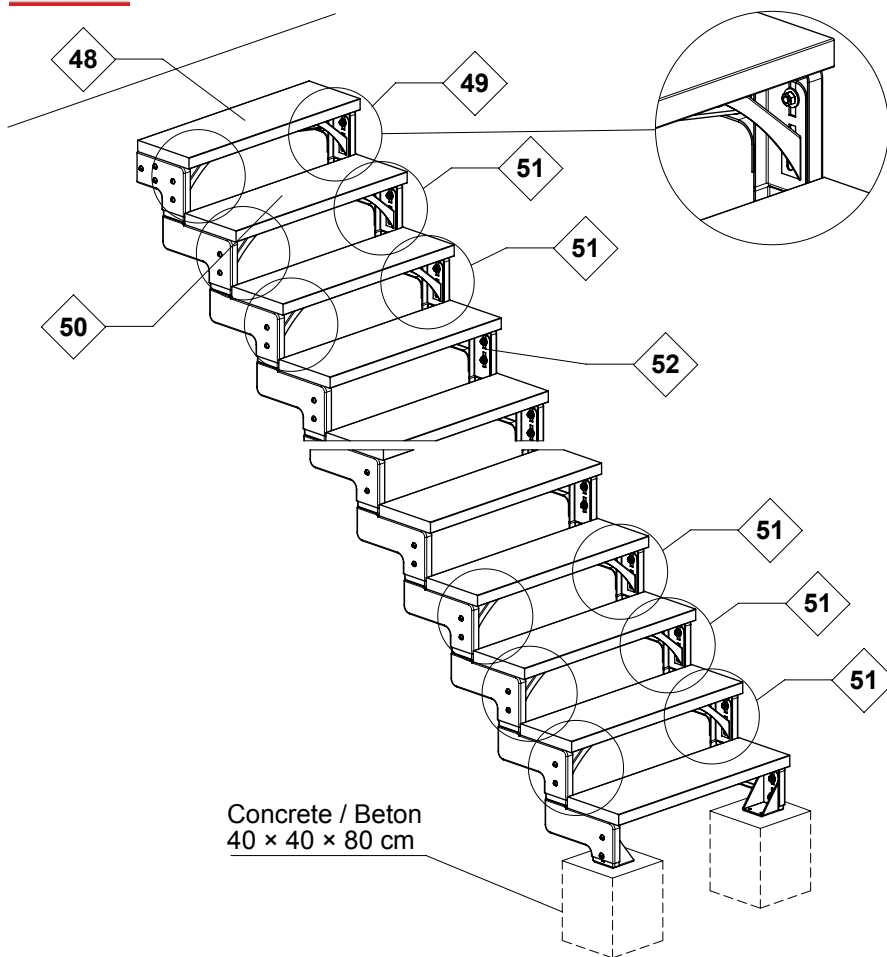

!

If more than 6 steps:
Add
9 + 10

Wenn mehr als 6 Stufen:
hinzufügen
9 + 10

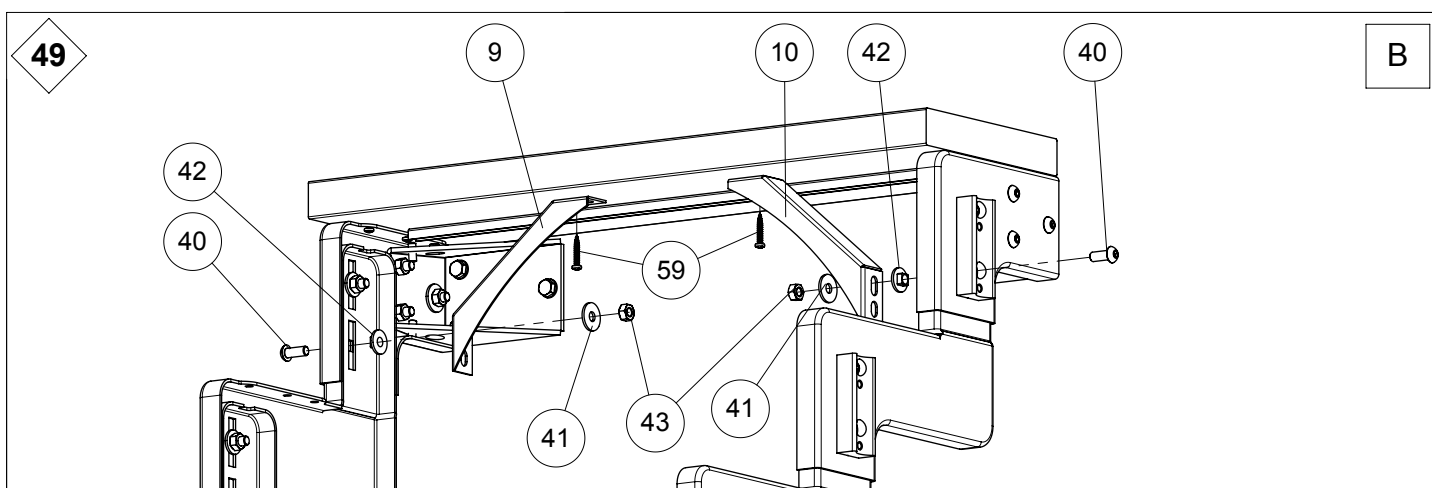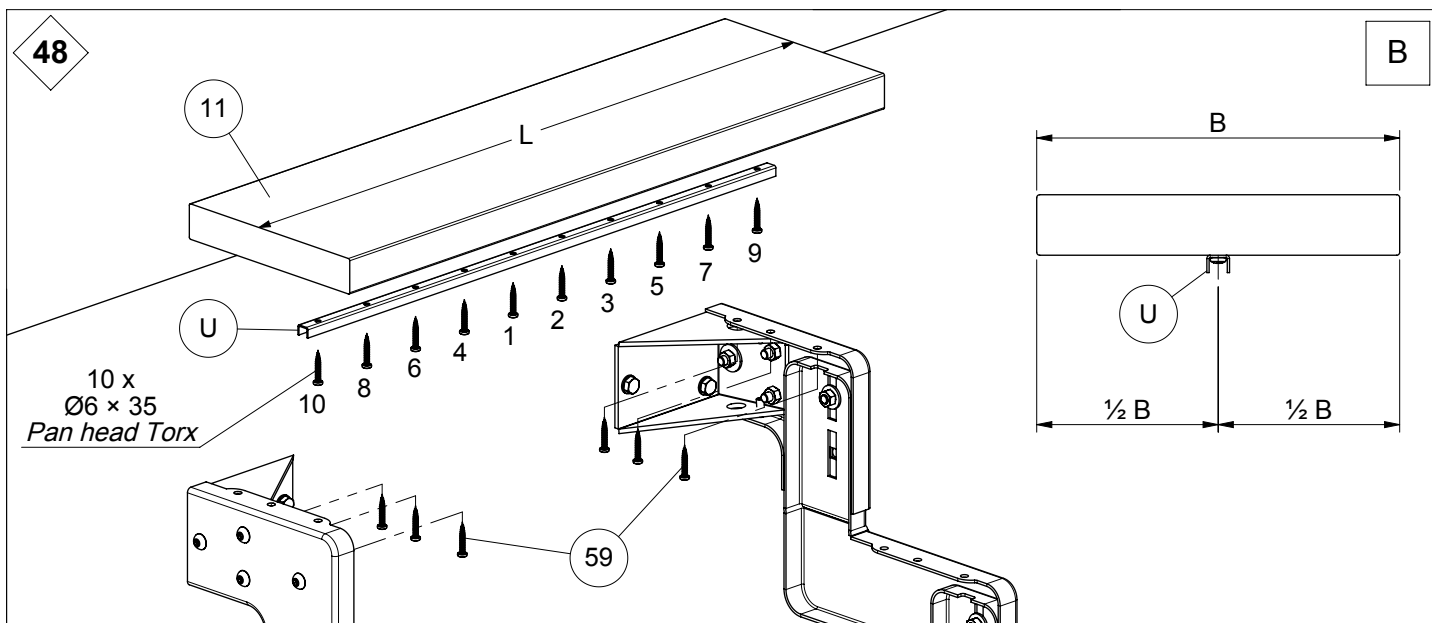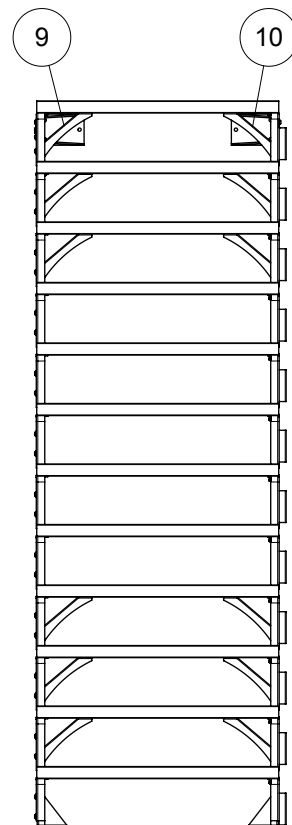

50

B

U
10 x
Ø6 x 35
Pan head Torx

59

51

B

10

9

42

40

59

41

43

41

42

40

52

B

40








42






43

43

42

40

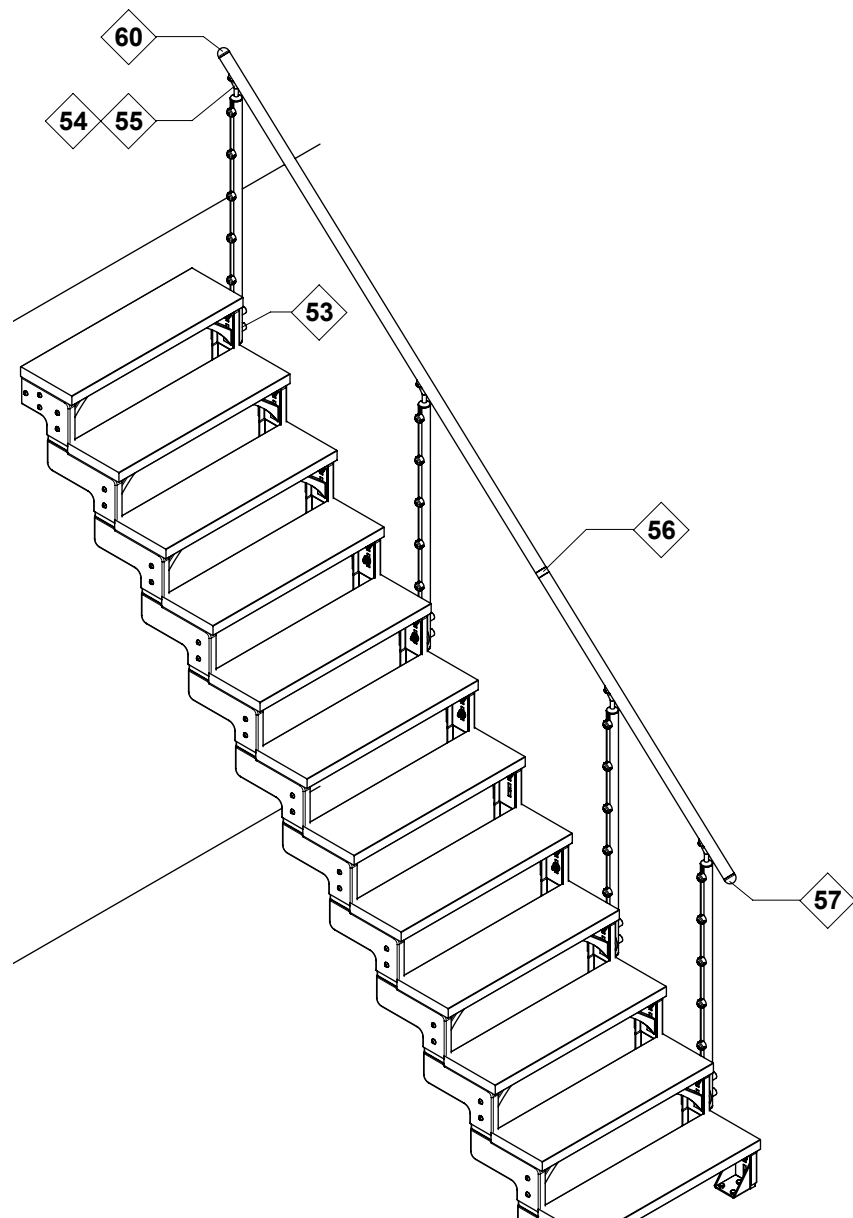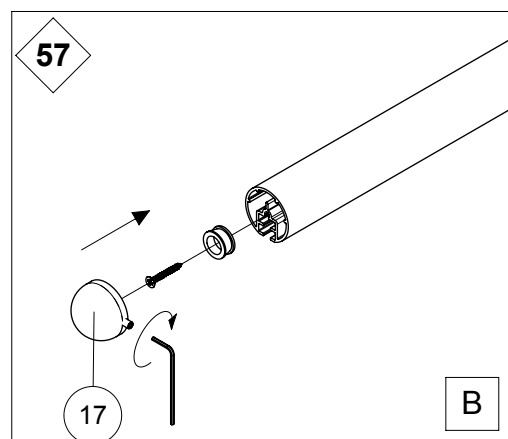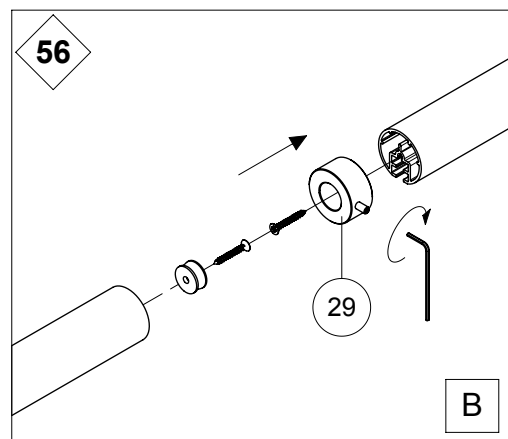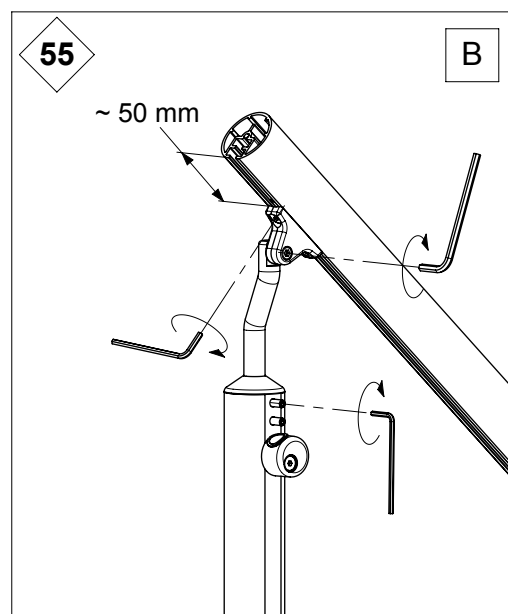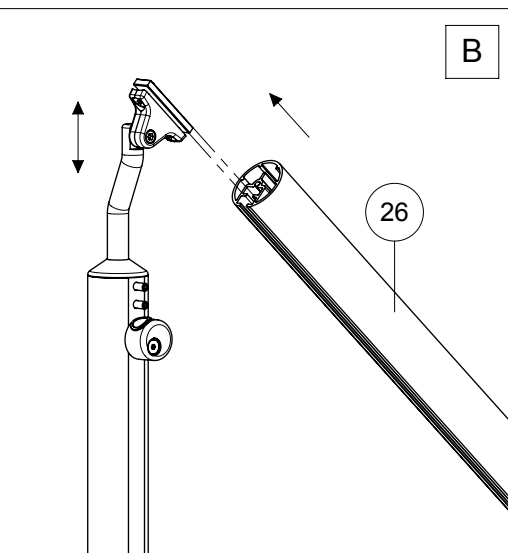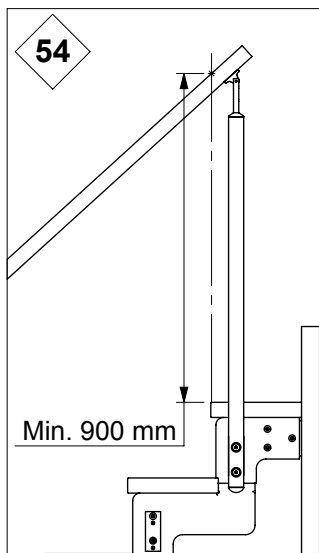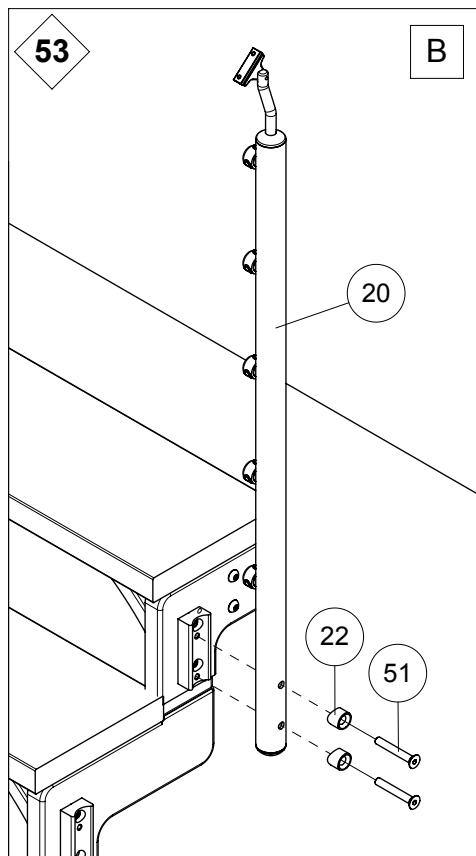

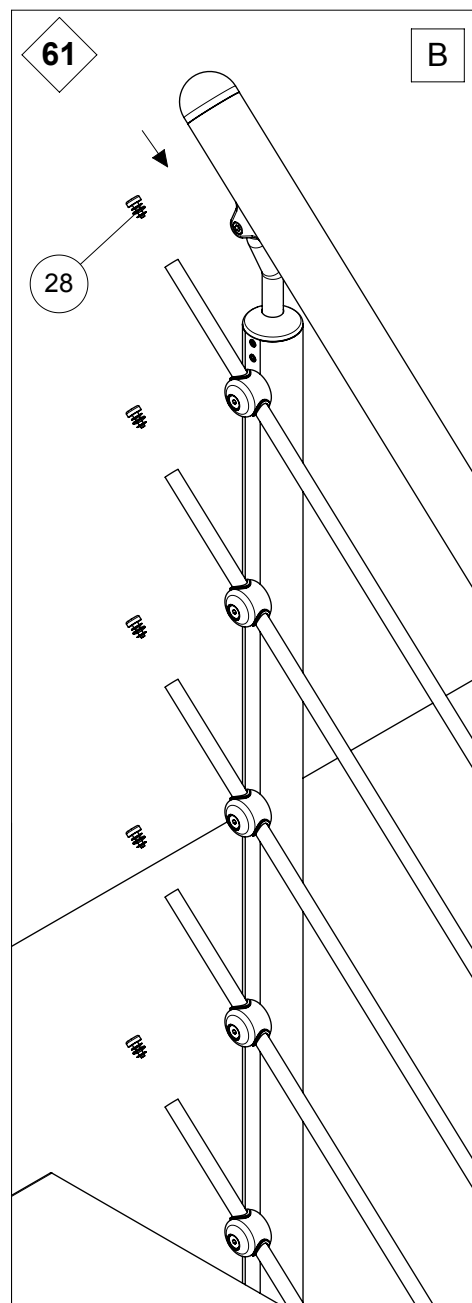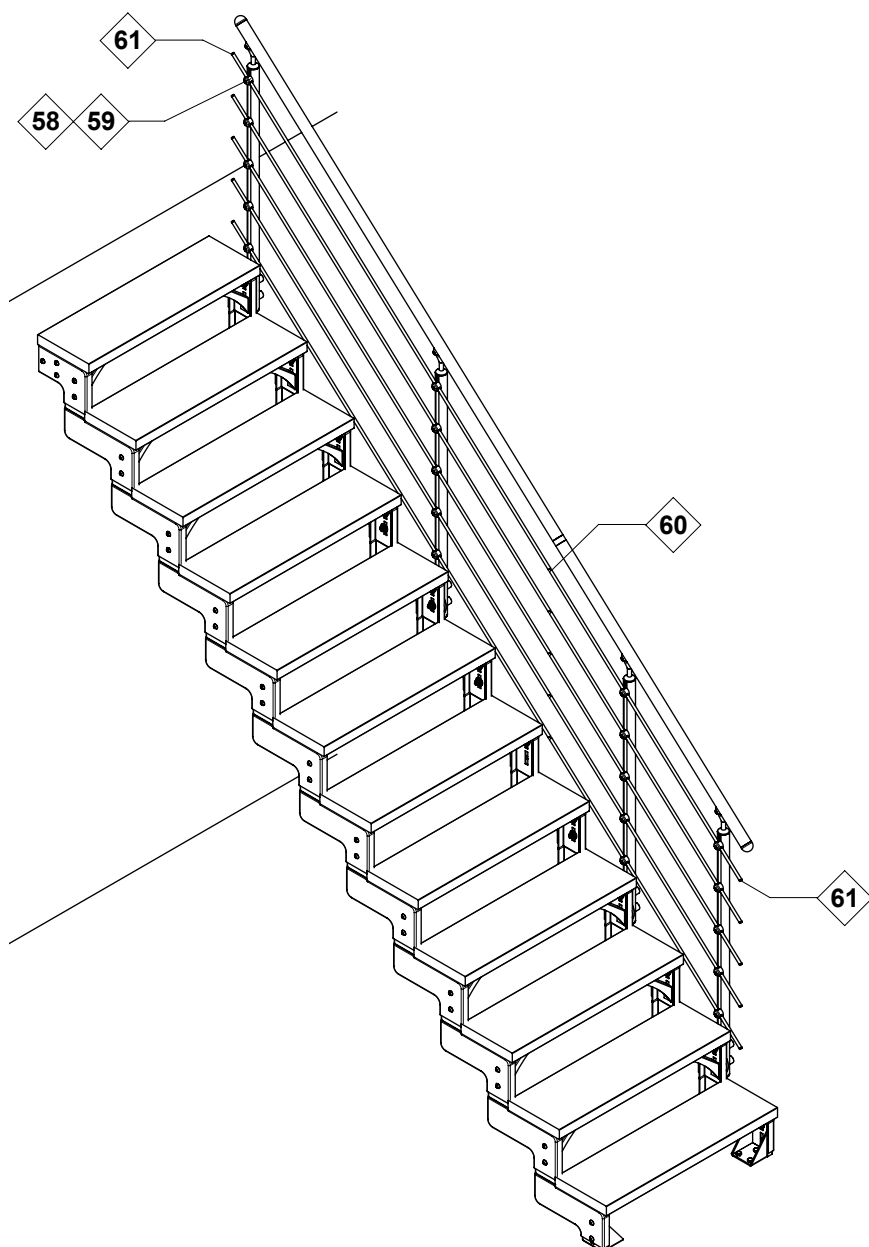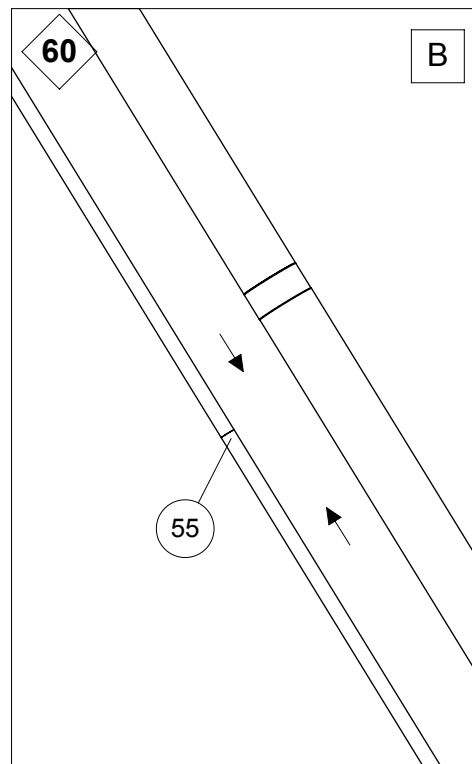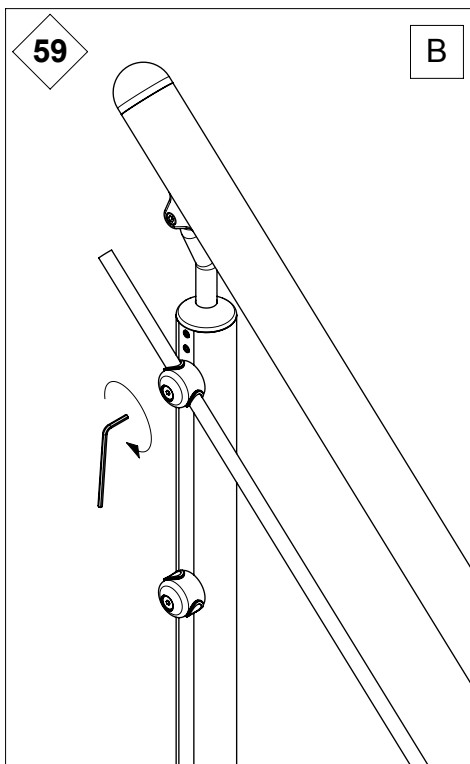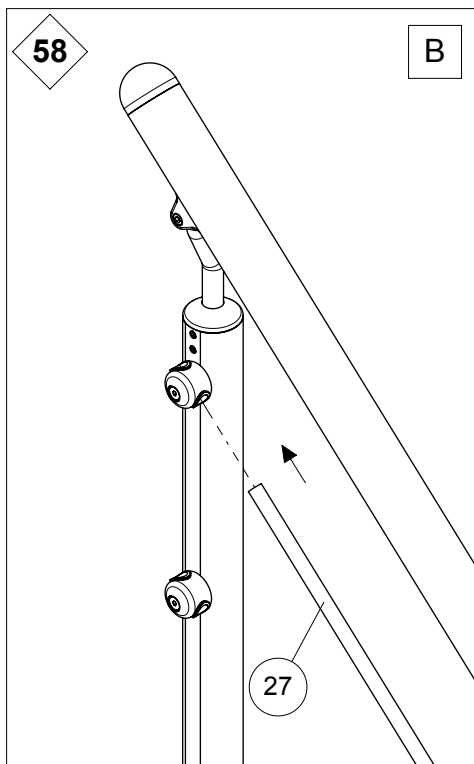



We recommend
using a support
column from 8 treads
and if $W = 100\text{ cm}$

Ab 8 Stufen und $W =$
100 cm empfehlen
wir eine Abstützung
der Treppe

