



MONTAGEANLEITUNG






Meeth
FENSTER UND TÜREN

Schiebetüren

Stand: 10/2018

www.meeth.de



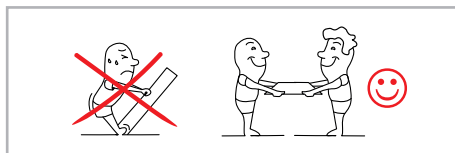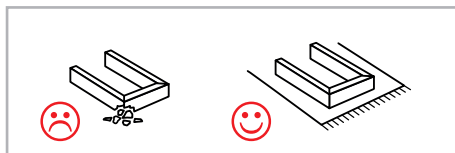

001 (4x)



018 (1x)
[4,50 m]



007 (1x)



008 (20x)



[35 mm]



[30 mm]

004 (2x)



005 (4x)



006 (2x)




[80 mm]



009 (8x)

010 (8x)

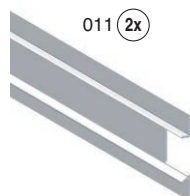

011 (2x)




012 (1x)

013 (1x)


014 (1x)

015 (1x)

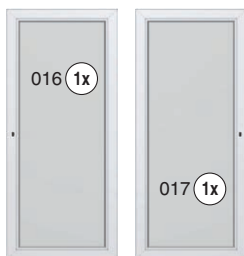

016 (1x)

017 (1x)

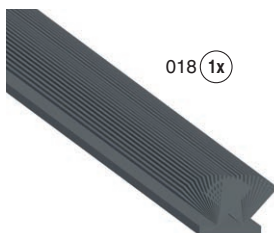


018 (1x)




019 (2x)


01

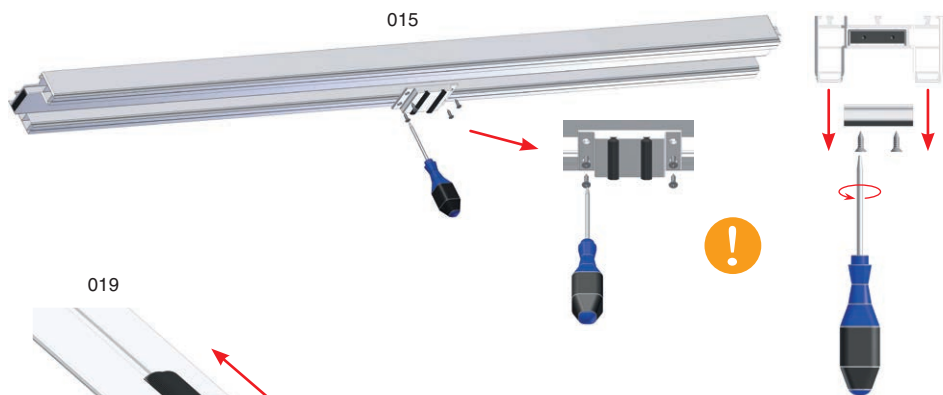


02

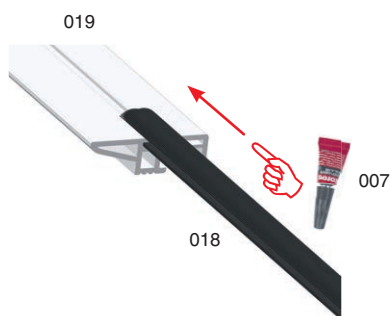

03

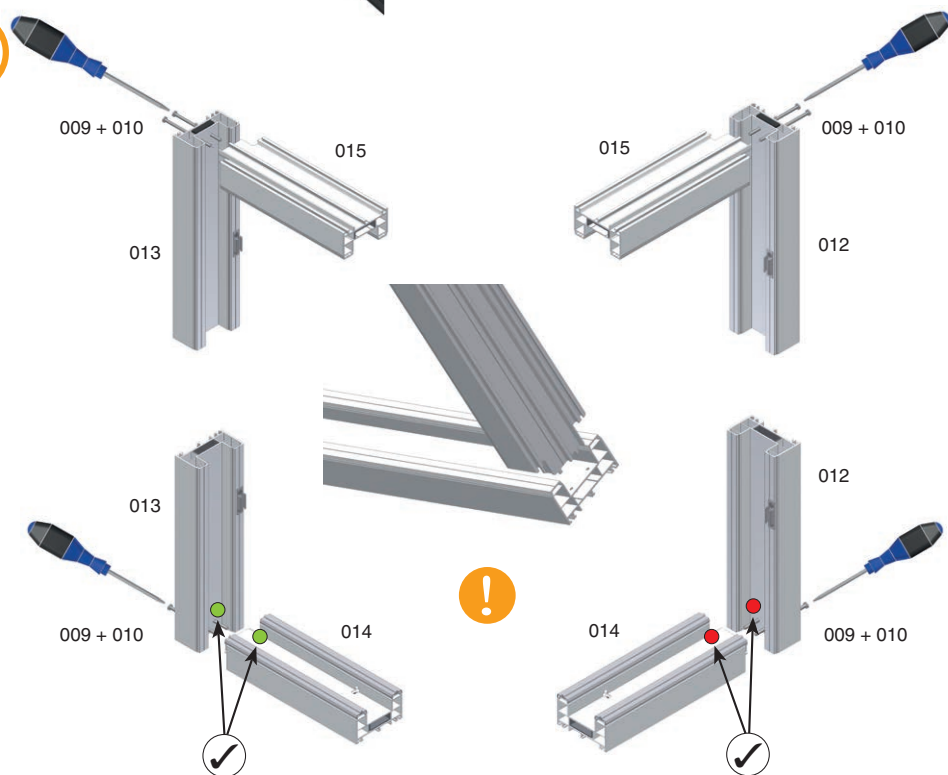


04

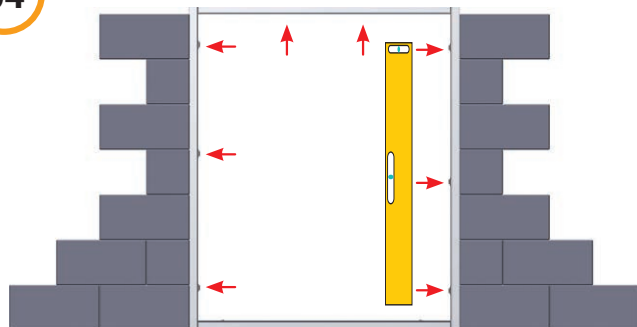

Wasserwaage (Länge) mind. 180 cm


Montagehilfe:
3 Stützleisten

A = B = C

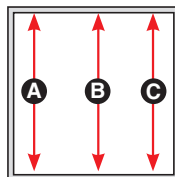

Diagonale
Vermessung

d1 = d2

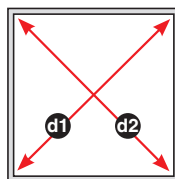

05




008




018 + 019


06

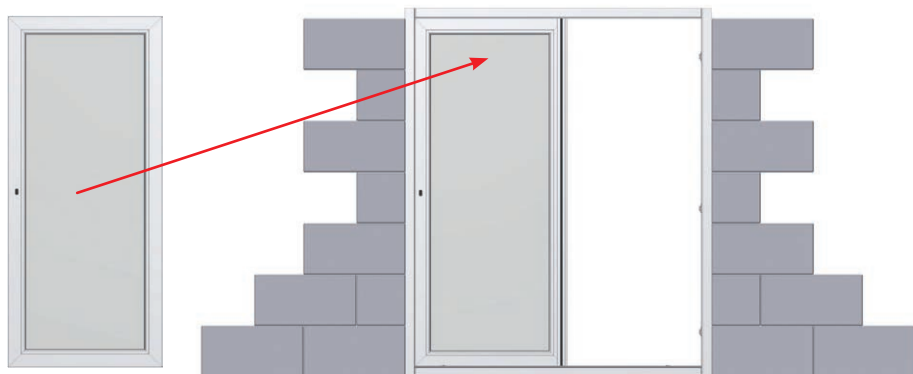

07

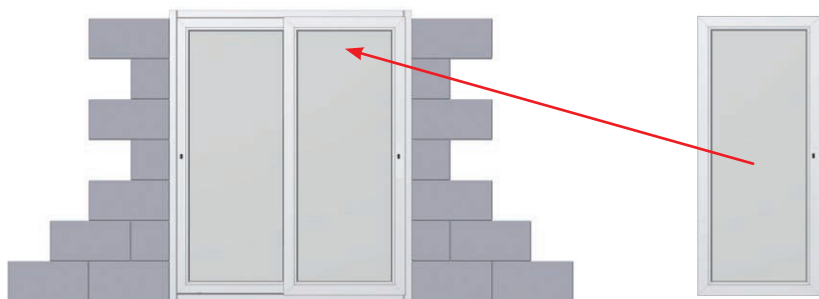


08

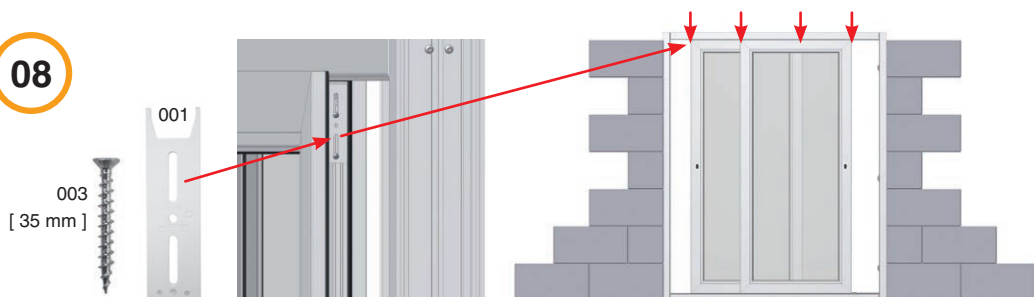


AUSHEBESICHERUNGEN: A) Höhe 1,90 m = 2 Stück montieren B) Höhe größer als 1,90 m = 4 Stück montieren


09

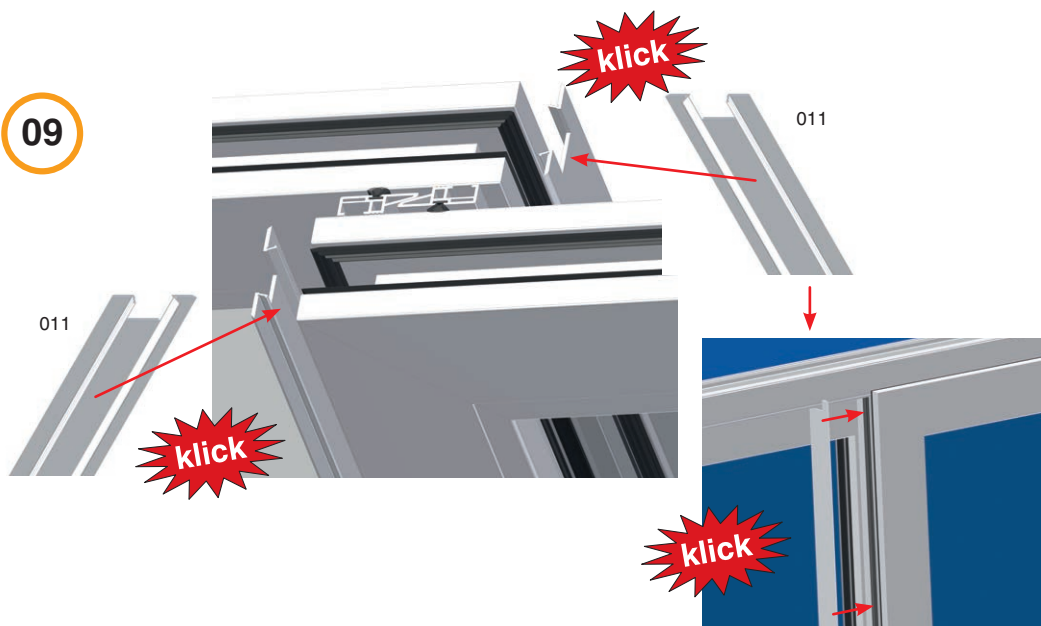


10

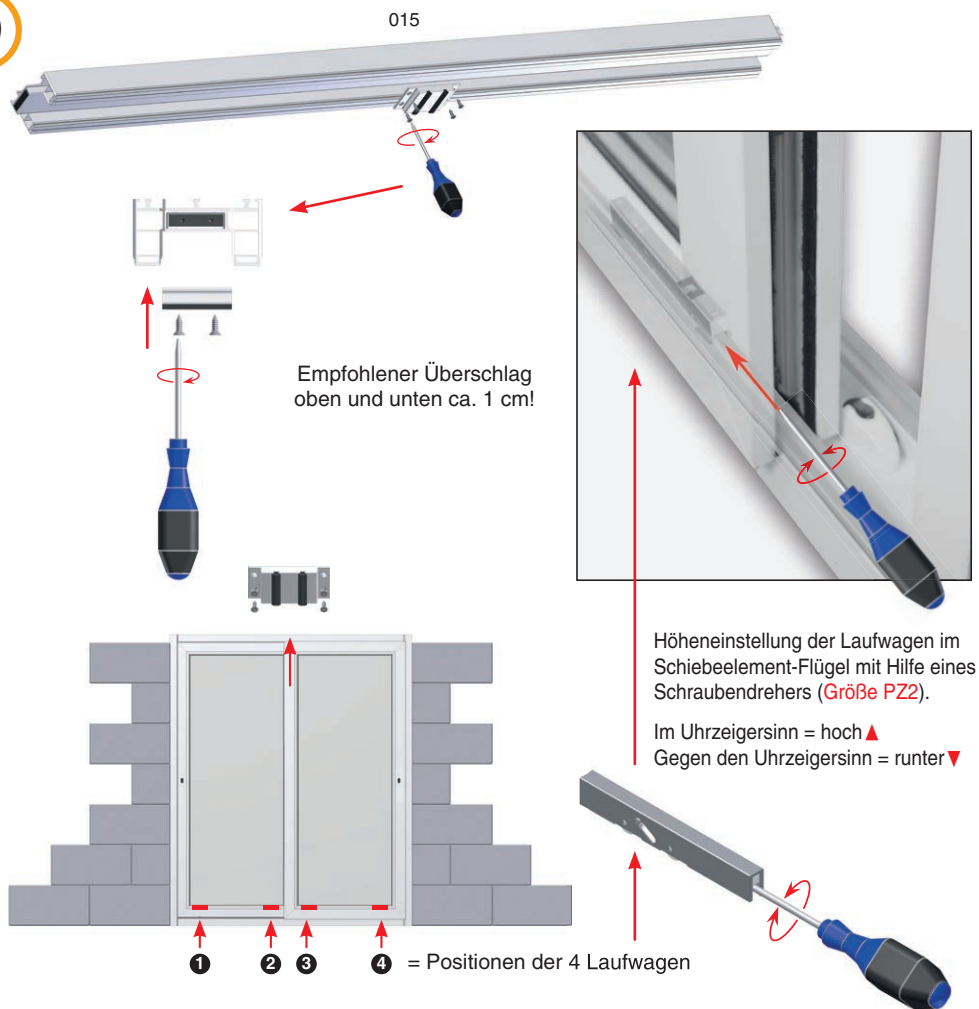

11

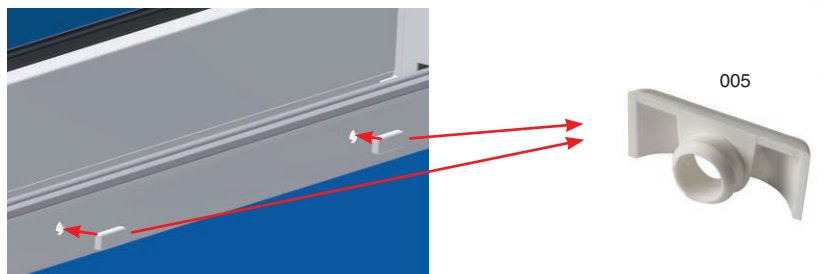

12

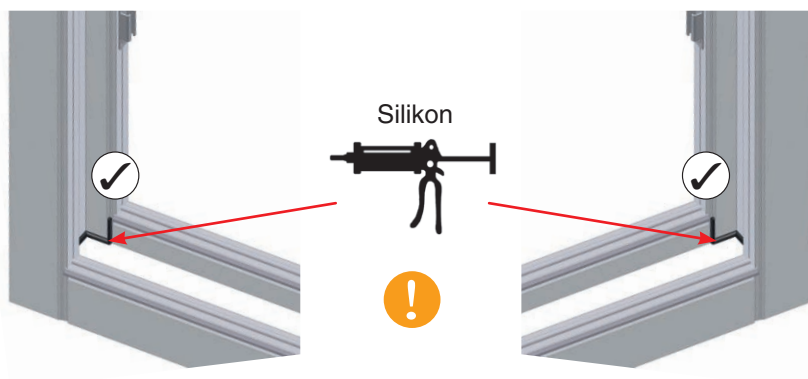

Stopper Einbau



Stopper positionieren (006)



Stopper einsetzen



Gummiabdeckung **nur anheben**



Schrauben positionieren (004)



Stopper mit Schraube befestigen



Gummiabdeckung schließen



Die neue **Meeth App** jetzt kostenlos downloaden:



Josef Meeth Fensterfabrik GmbH & Co. KG
54533 Laufeld • Telefon: 06572 / 81-0 • www.meeth.de