



Please scan the QR code for up-to-date instructions:



APP





VIDEO





MANUAL







HELPLINE




In the box

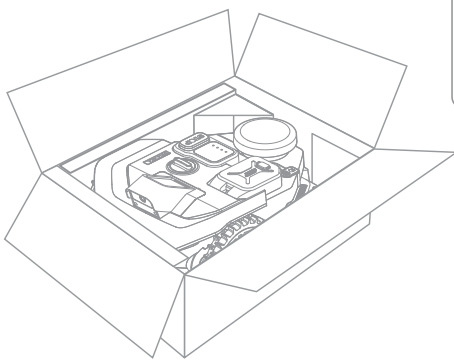




QR code SN(Serial number)

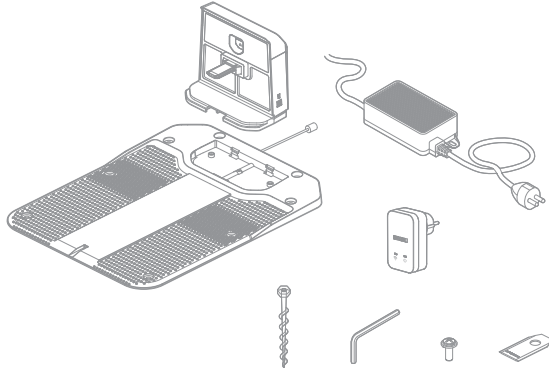


The picture is only for reference


1

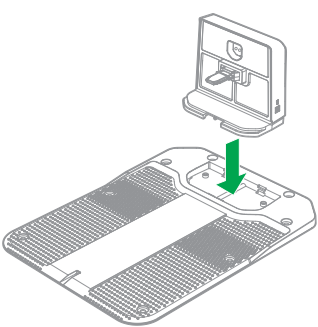

2

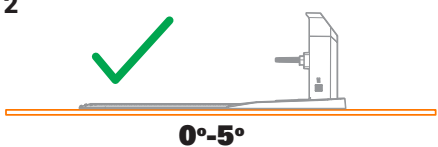



0°-5°

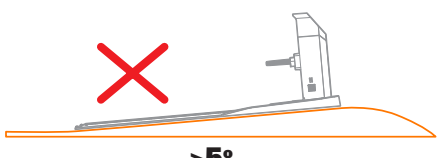


>5°

3

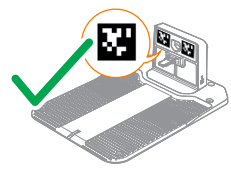



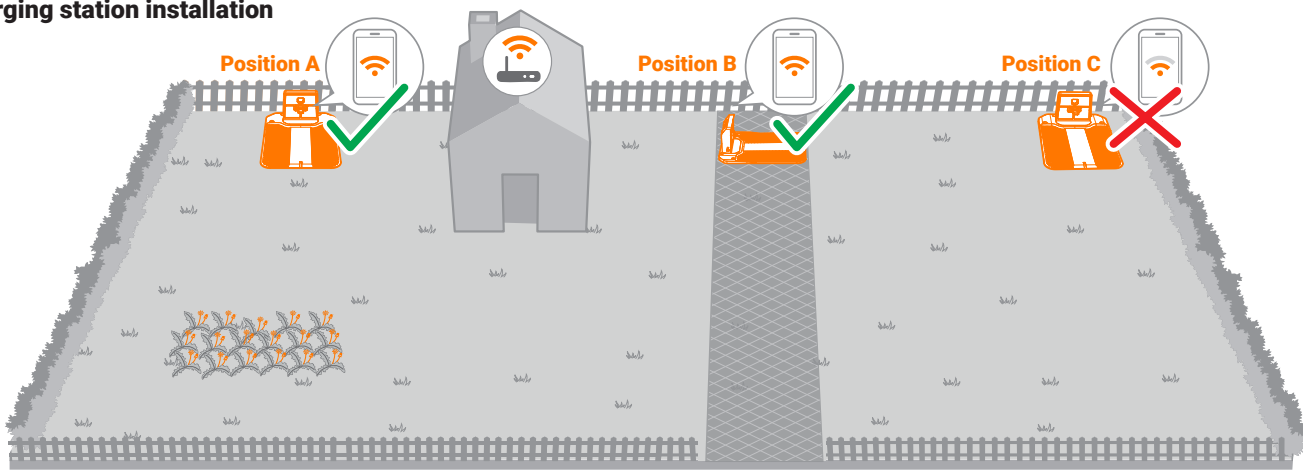

Charging station installation




Position A




Position B




Position C





1 Check Wi-Fi

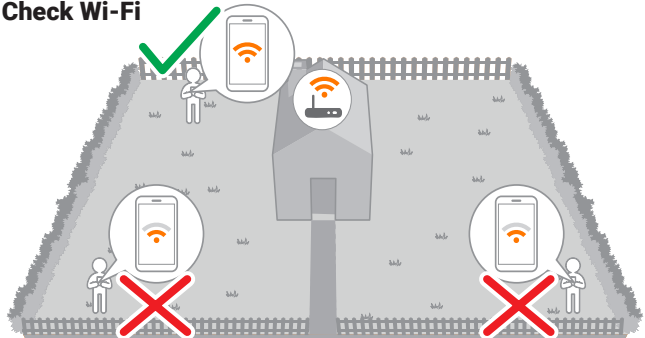


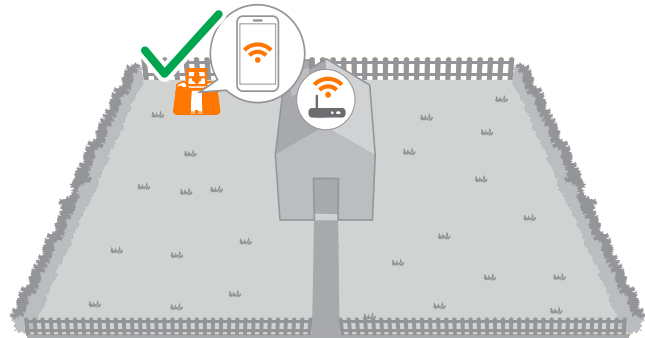


2 Prepare

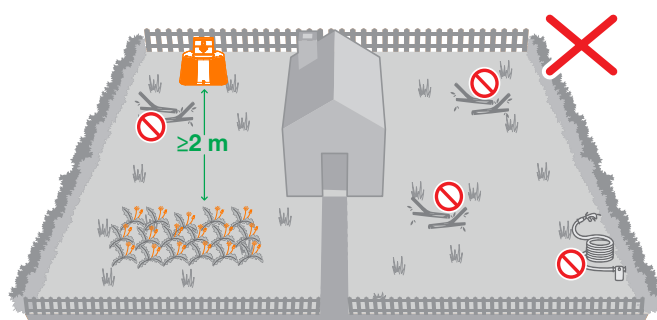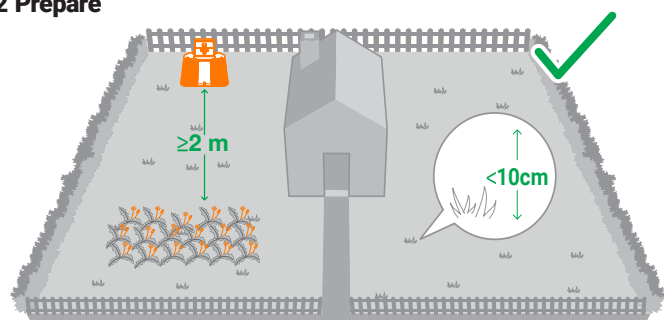


3

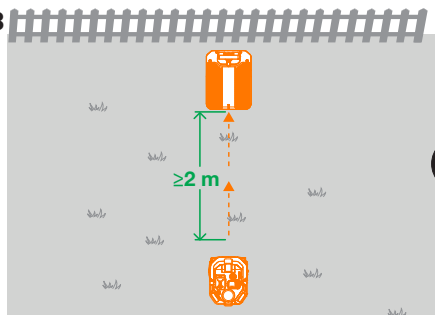

or

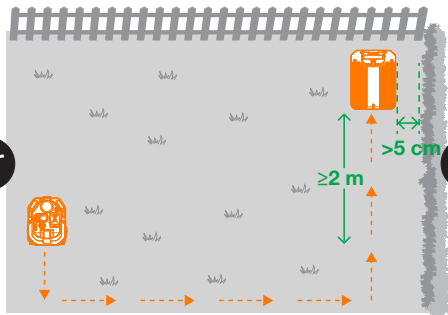


or

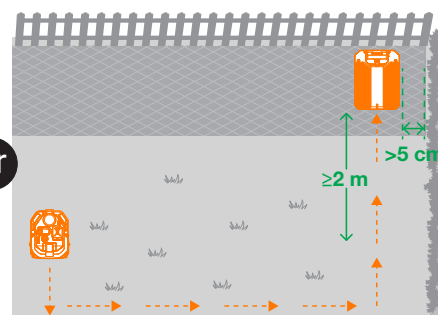


Power on

1

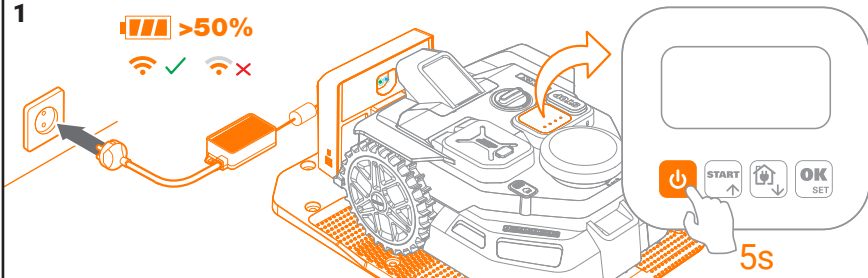

Waiting...

2

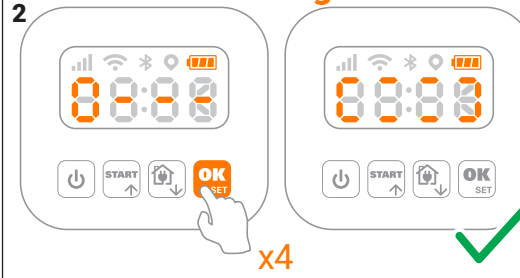


App-link


1




2

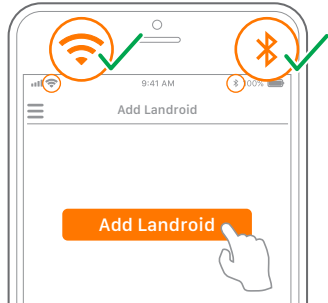

3

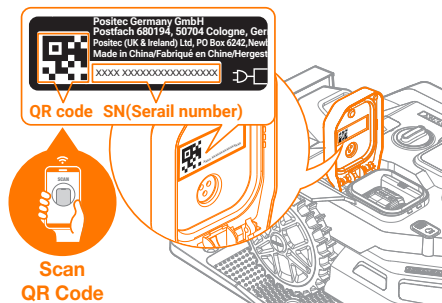


4

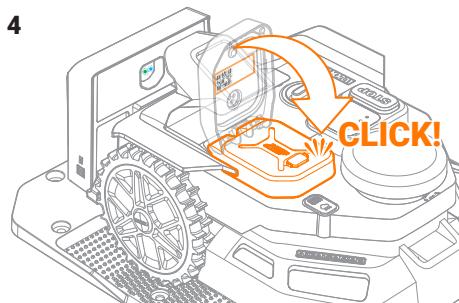


5







6

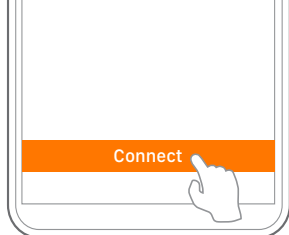


7

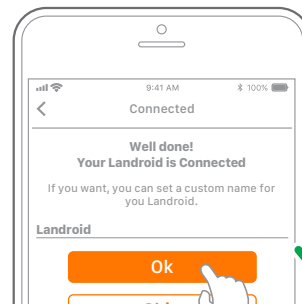


Update

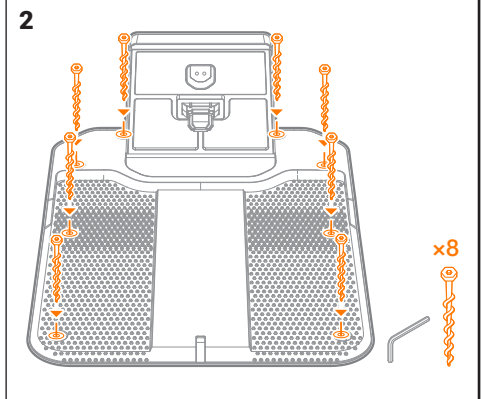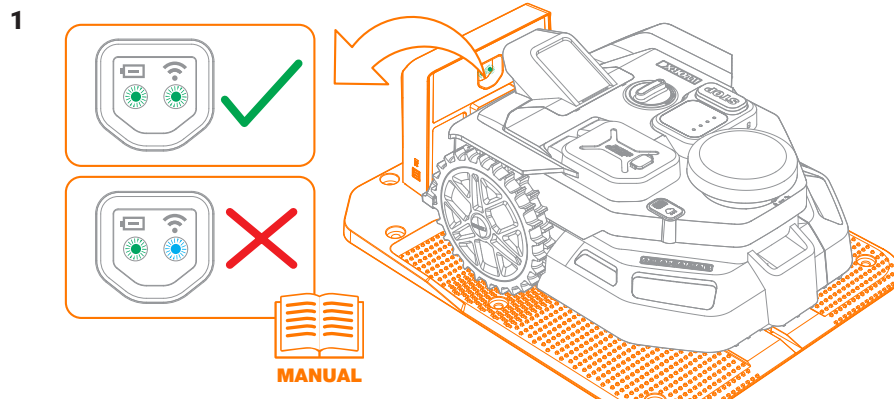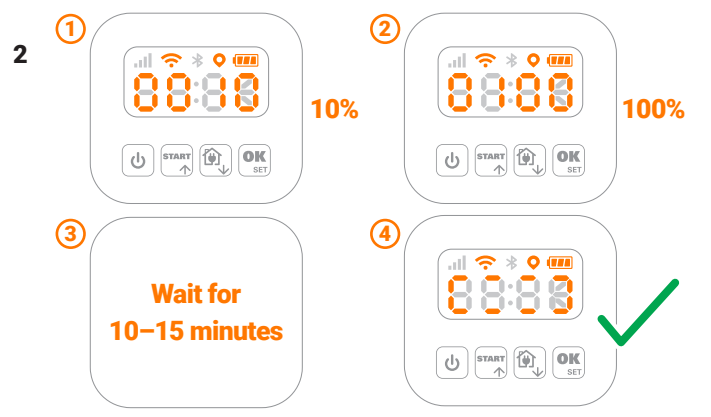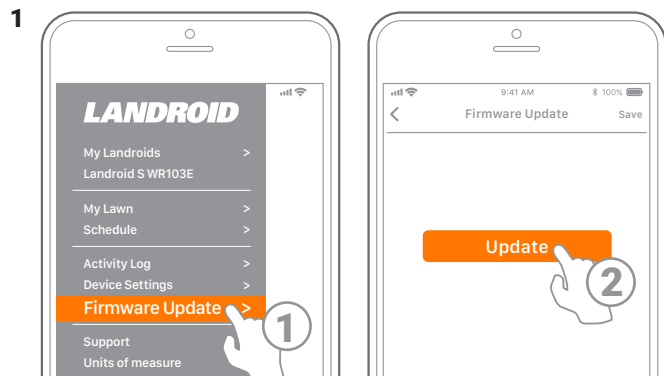


RadioLink installation

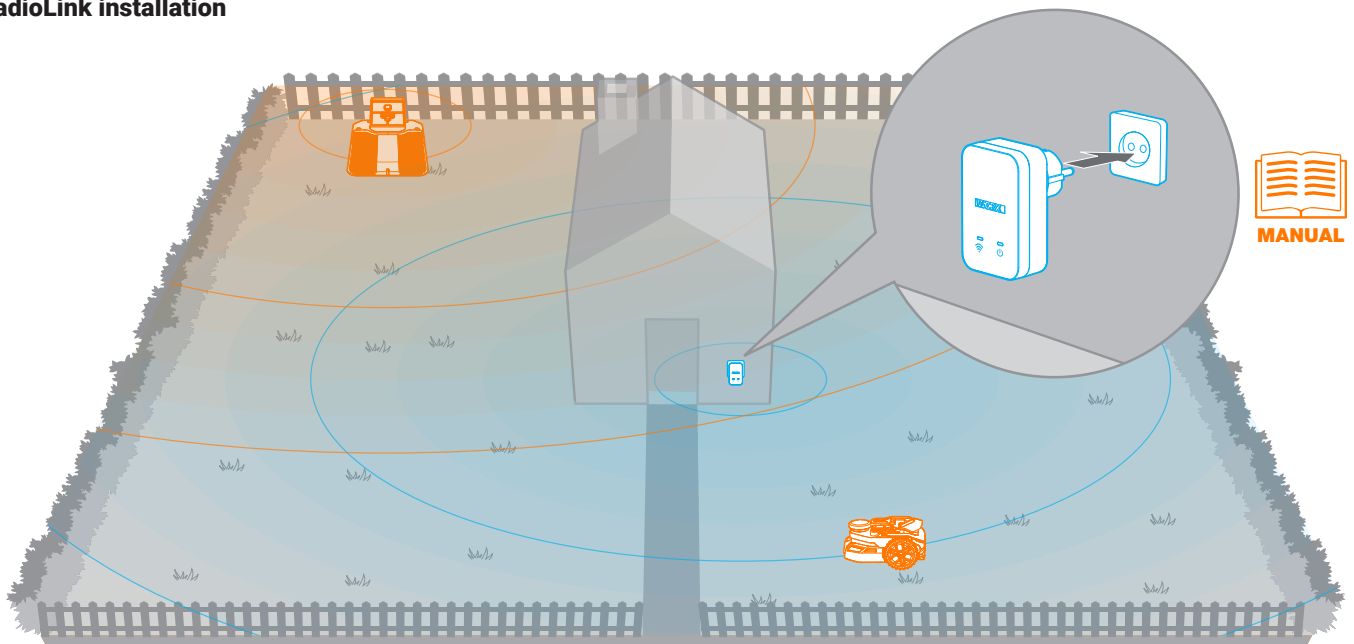


Position 1

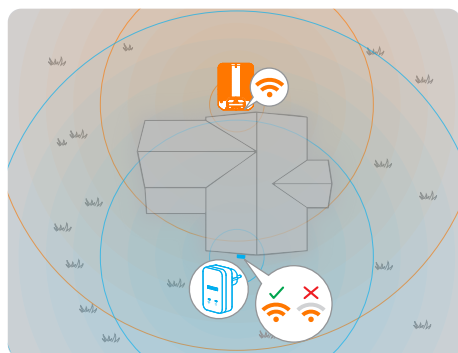


Position 2

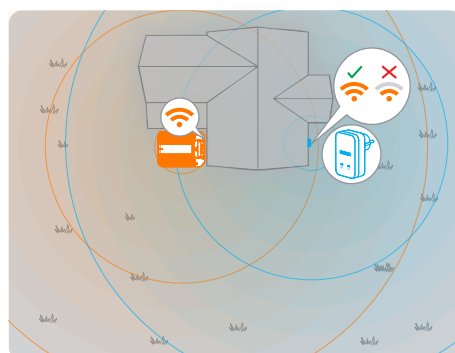



Position 3

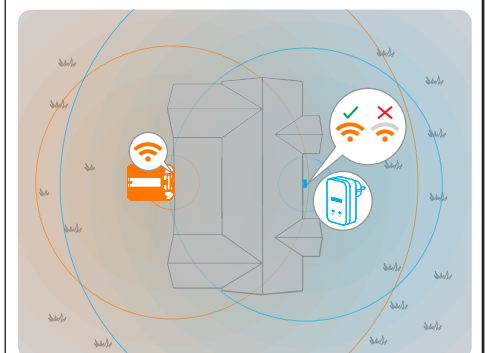



Single zone (Auto mapping)

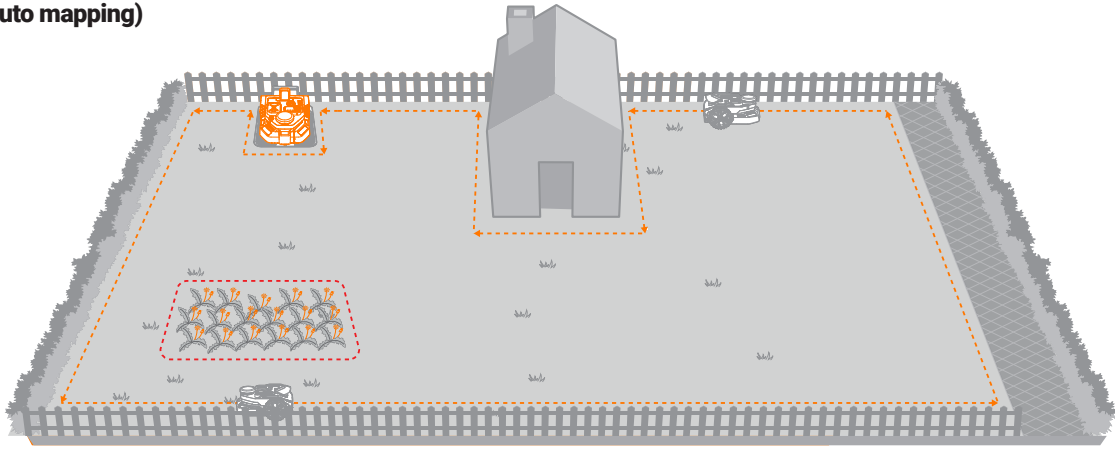


1

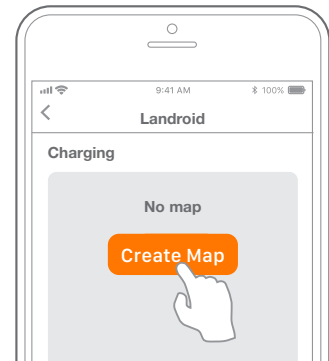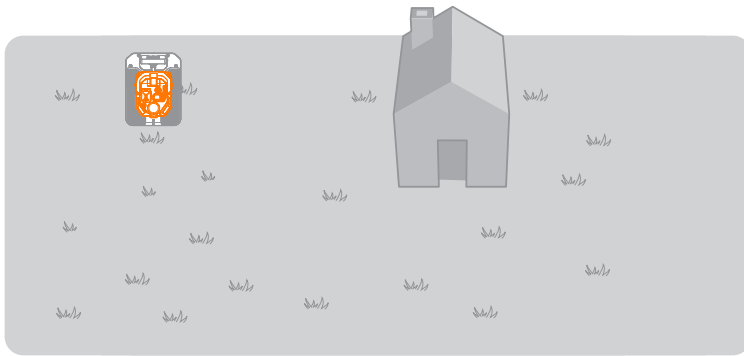


2

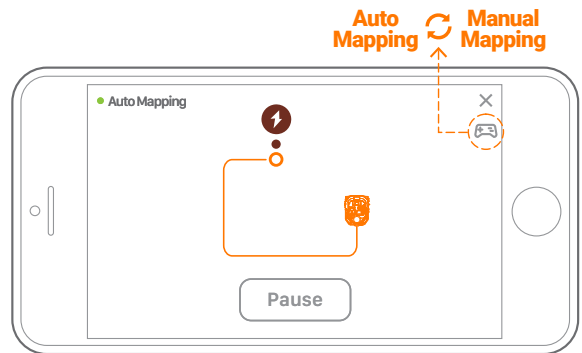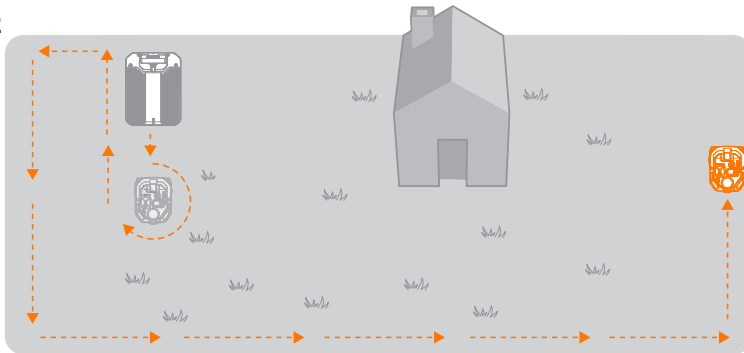




3

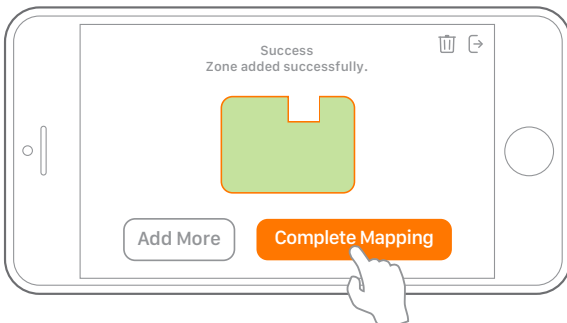


or

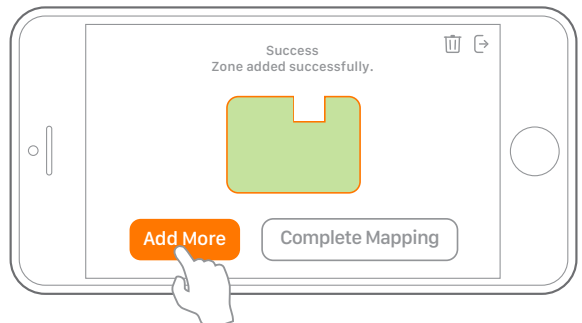


No-Go zone

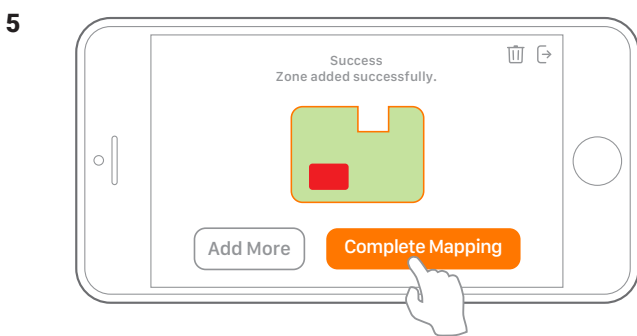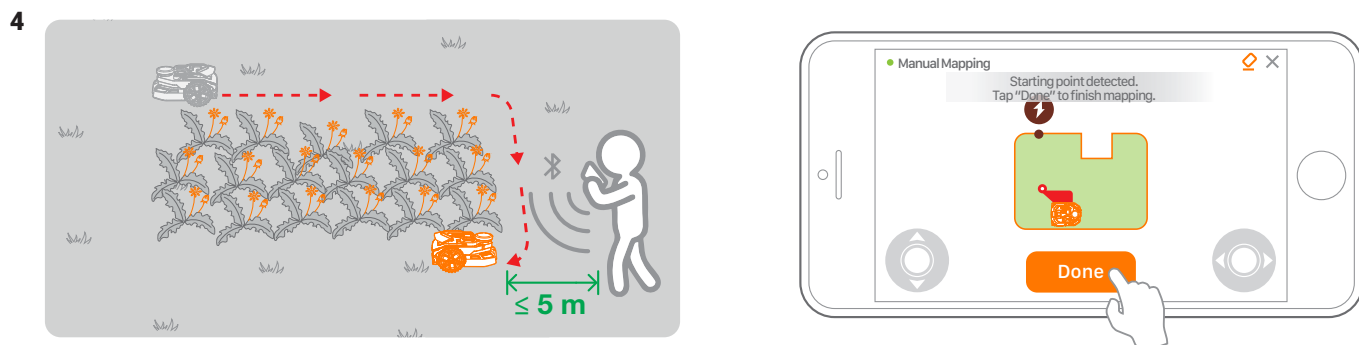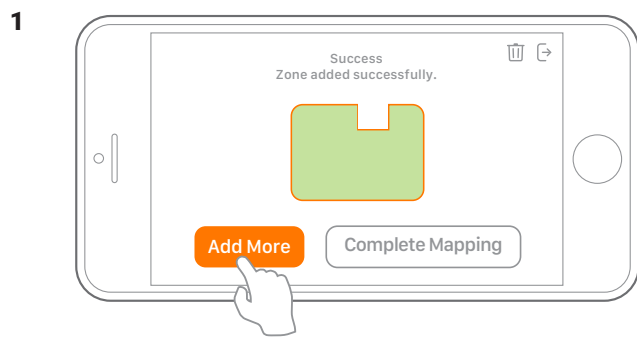


or

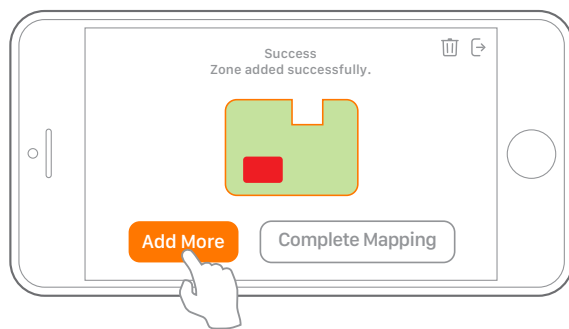


Start working

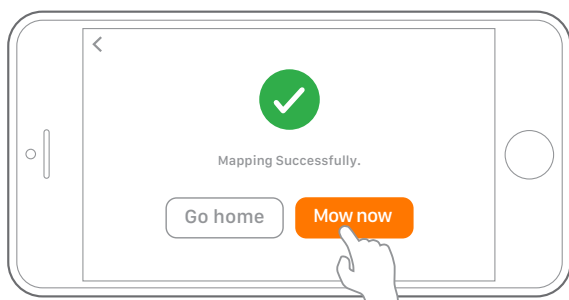


or

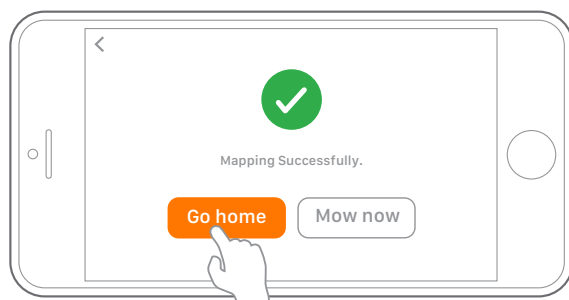

Multi-zone

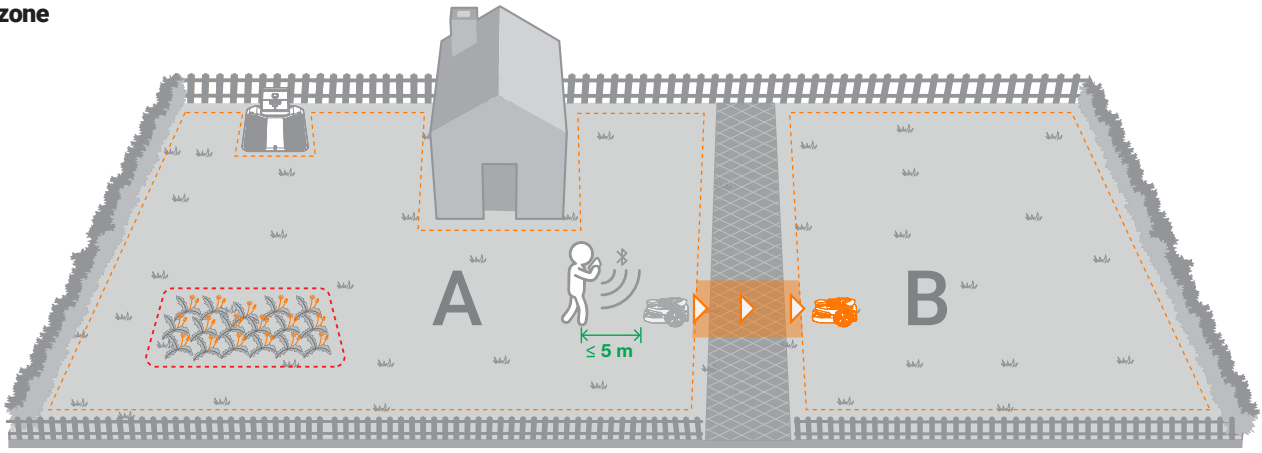


Path 1

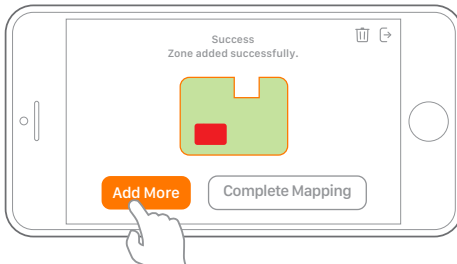


2




3

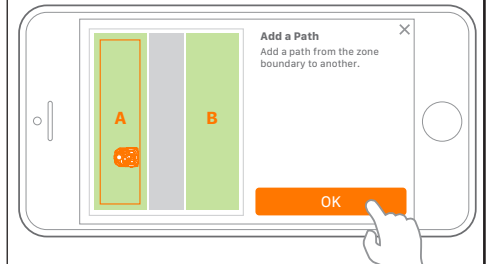



4

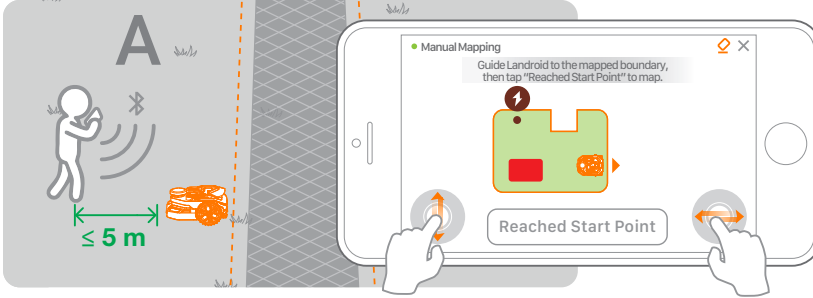


5

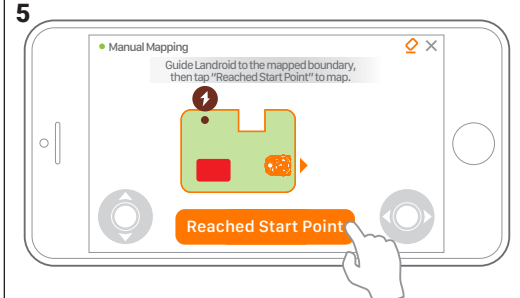

6

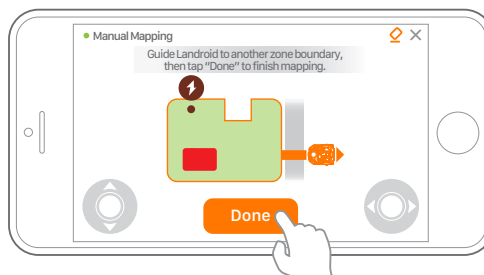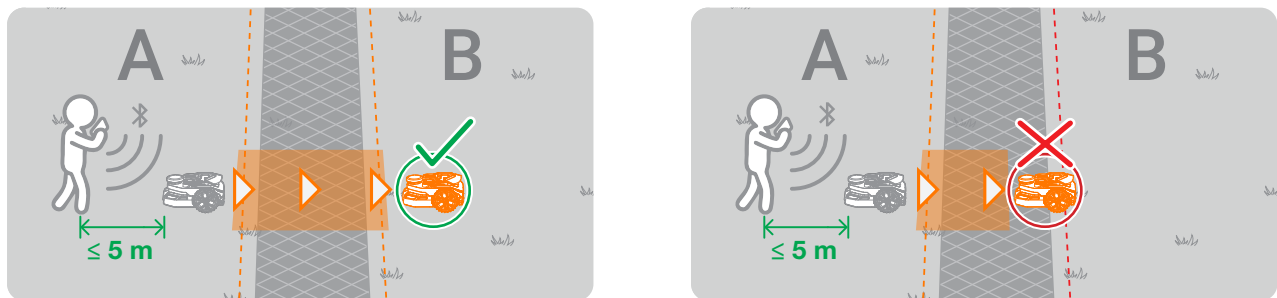


7

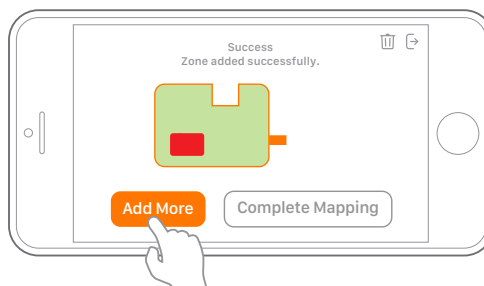


Multi-zone



1

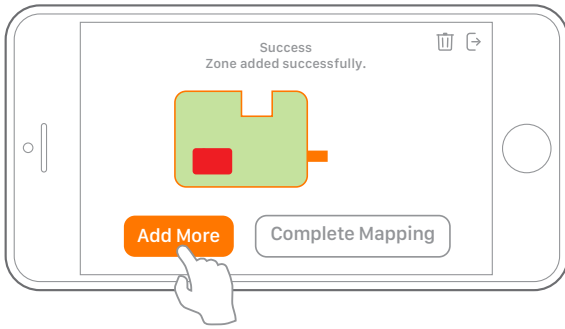


2

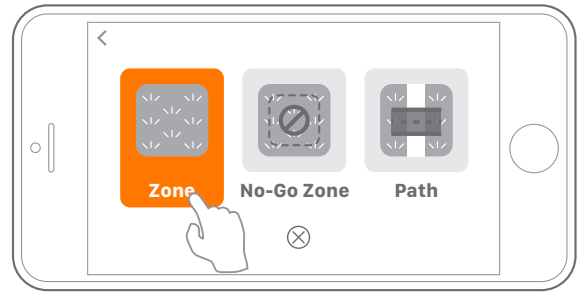


3

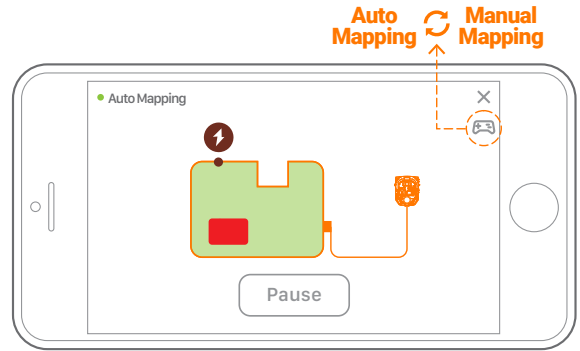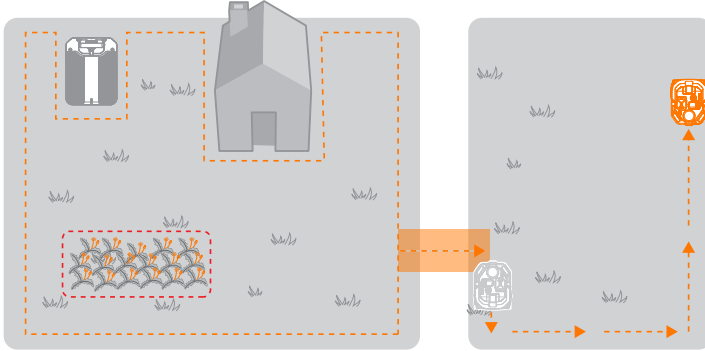


4

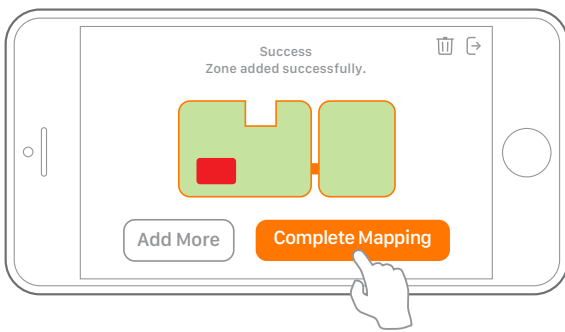

or

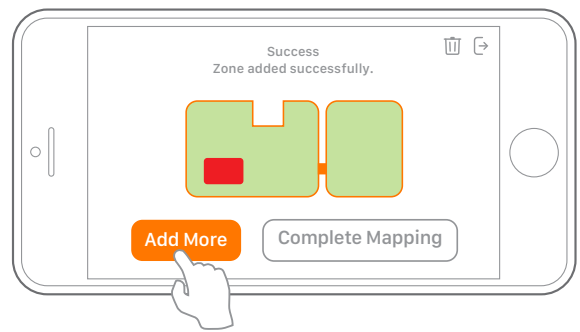

Start working

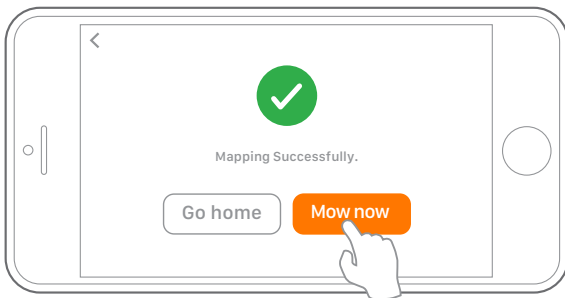

or

Go home

